Service Manual

TOP NEXT


ORDER NO. VED0404352C0

D10

Service Manual

LCD Projector

• PT-LB10NTU PT-LB10NTE PT-LB10U PT-LB10E PT-LB10VU PT-LB10VE PT-LB10SU PT-LB10SE



The service technician is required to read and follow the "Safety Precautions" and "Important Safety Notice" in this service manual.

Specifications

Power supply: 100 V - 240 V AC, 50 Hz / 60 Hz

Power consumption:

220 W [During standby (when fan is stopped):

Approx. 6 W

Amps: 2.5 A - 1.0 A

AUDIO IN: Single Line, RCA pin jack \times 2 (L-R)

0.5 V [rms]

SERIAL: DIN 8-pin RS-232C compatible

Cabinet:

Molded plastic (PC/ABS)

file:///E /PTLB10/ALL/PT-LB10NTU/SVC/s000000	0 0 0 0 . h t m l	Dimensions	s:	
Panel size (diagonal): 0.7 type (17.78 mn	Width:	297 mm		
Aspect ratio: 4:3	'')	Height:	****	
Micro lens array: Available		Length:)
Display method: 3 transparent LCD pane	els (RGR)	Weight:		,
Drive method: Active matrix method	313 (1133)	PT-LB10	NTU/E:	2.2 kg
Pixels:			U/E, LB10VU/E, LB10SU/E:	***
PT-LB10NTU/E, LB10U/E, LB10VU/E:			environment:	
786 432 (1 024 × 768) × 3	panels		ture: 0°C - 40°C	
PT-LB10SU/E: 480 000 (800 × 600) × 3 p	•	•	hen FAN CONTROL is set to "	HIGH" 0° C - 35° C
Lens:		Humidity	: 20 % - 80 % (no conde	nsation)
Manual zoom (1 - 1.2) / Manual focus		Certification	ns:	,
PT-LB10NTU/È, LB10U/E, LB10SU/E:		PT-LB10NTU/LB10U/LB10VU/LB10SU:		
F 1.7 - 1.9, f 21.5 mm - 25.8 mm		UL60950, C-UL, FCC Class B		
PT-LB10VU/E:		PT-LB10NTE/LB10E/LB10VE/LB10SE:		
F 2.0 - 2.3, f 22.0 mm - 26.2 mm		EN60950, EN55022, EN61000-3-2,		
Lamp: UHM lamp (155 W)		EN61000-3-3, EN55024		
Luminosity:		<remote< td=""><td>control unit></td><td></td></remote<>	control unit>	
PT-LB10NTU/E, LB10U/E, LB10SU/E: 2	000 lm	Power supp	oly:	
PT-LB10VU/E: 1 600 lm		,	Lithium CR2025 battery \times 1)	
Scanning frequency (for RGB signals):		Operating r	_	
Horizontal scanning frequency: 15 kH	łz - 91 kHz	Approx.		
Vertical scanning frequency: 50 H	z - 85 Hz	(when operated directly in front of signal receptor)		
Dot clock frequency: 100 l	MHz or less	Dimensions	s: Width: 40 mm	
YP _B P _R signals:			Height: 86 mm	
480i, 480p, 576i, 576p, 1 080/60i,1 080/50i,	, 720/60p		Length: 6.5 mm	
Color system:		Weight:	18 g (including battery)	
7 (NTSC / NTSC 4.43 / PAL / PAL-M / PAL-N / PAL60 /		Accessorie		
SECAM)			ote control unit (TNQE239):	
Projection size: 838.2 mm - 7 620 mm			attery for remote control un	it (CR2025) : 1
Throw distance:	4 40 7	Power cor		10011
PT-LB10NTU/E, LB10U/E, LB10SU/E: 1.	1 m - 10.7 m	PI-L	B10NTU/LB10U/LB10VU/LB	1050:
				1

file: ///E | / PTLB10/ALL/PT-LB10NTU/SVC/s00000000000.html~(2~z~5)~[2006-01-16~14:00:14]

© 2004 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death. file:///E|/PTLB10/ALL/PT-LB10NTU/SVC/s0000000000.html

TOP NEXT

1 Safety Precautions

TOP PREVIOUS NEXT

1.1 General Guidelines

1.2 Leakage Current Check

1.3 UV Precaution and UHM Lamp Precautions

1.1 General Guidelines

TOP PREVIOUS NEXT

- For continued safety, no modification of any circuit must be attempted.
- Unplug the power cord from the power outlet before disassembling this projector.
- It is advisable to use an isolation transformer in the AC power line before the service.
- Observe the original lead dress during the service. If a short circuit is found, replace all the parts overheated or damaged by the short circuit.
- After the service, all the protective devices such as insulation barriers, insulation papers, shields, and isolation R-C combinations must be properly installed.
- After the service, check the leakage current to prevent the customer from getting an electric shock.

1.2 Leakage Current Check

TOP PREVIOUS NEXT

1. Prepare the measuring circuit as shown in Fig.1.

Be sure to use a voltmeter having the performance described in Table 1.

Fig. 1


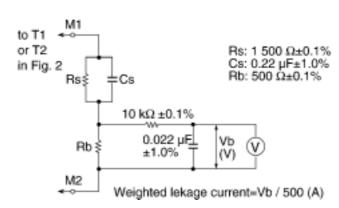


Table 1

	Performance			
Voltmeter (rms reading)	Accuracy: Input resistance: Input capacitance: Frequency range:	≤ 2% ≥ 1 MΩ ≤ 200 pF 15 Hz to 1 MHz		

Fig. 2

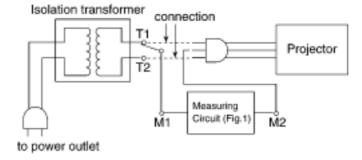

- 2. Assemble the circuit as shown in Fig. 2. Plug the power cord in a power outlet.
- 3. Connect M1 to T1 according to Fig. 2 and measure the voltage.
- 4. Change the connection of M1 from T1 to T2 and measure the voltage again.


- 5. The voltmeter must read 0.375 V or lower in both of steps 3 and 4. This means that the current must be 0.75 mA or less.
- 6. If the reading is out of the above standard, the projector must be repaired and rechecked before returning to the customer because of a possibility of an electric shock.

1.3 UV Precaution and UHM Lamp Precautions

TOP PREVIOUS NEXT

- Be sure to unplug the power cord from the power outlet when replacing the lamp.
- Because the lamp reaches a very high temperature during its operation, wait until it cools completely when replacing the Lamp Unit.
- The lamp emits small amounts of UV-radiation, avoid direct-eye contact with the light.
- Because the high pressure lamp involves a risk of explosion, never touch the lamp wire lead during the service. (See Fig. 3)

Fig.3

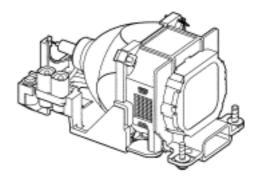

2 Ext Option

TOP PREVIOUS NEXT

This projector has EXT OPTION in addition to standard on-screen menus.

• There are SELF CHECK and SERVICE MODE for service, etc.

2.1 Procedure to enter EXT OPTION

2.2 EXT OPTION Menu and Functions

2.3 Canceling EXT OPTION

2.1 Procedure to enter EXT OPTION

TOP PREVIOUS NEXT

- 1. Press "MENU" button on the main unit or remote control unit to display "MENU" screen, then select "OPTION1" and press "ENTER" button.
- 2. Select "OSD" on "OPTION1" menu and press "ENTER" button 3 seconds or longer.

 $MENU \rightarrow OPTION1 \rightarrow OSD$

2.2 EXT OPTION Menu and Functions

TOP PREVIOUS NEXT

EXT OPTION

FREEZE MSG OFF / ON
ANGLE RESET OFF / ON
FAN FULLMODE OFF / ON
AUTO SETUP STANDARD / SPECIAL
SELF CHECK
SERVICE MODE
FLICKER ADJ

FREEZE MSG

Switching ON/OFF "FREEZE" on-screen display

ANGLE RESET

Switching ON/OFF "AUTO KEYSTN (Automatic Keystone)" reference level setting

Note:

- o Normally, do not select. (Angle reset data will be rewritten.)
- FAN FULLMODE

Setting the cooling fan motor rotation speed

 Switching ON "FAN FULLMODE", the rotation level of the fan becomes high-speed rotation (fixed). Moreover, when "FAN FULLMODE" is ON, changing "FAN CONTROL" in OPTION2 becomes impossible (setting FAN FULLMODE is given priority more than FAN CONTROL).

AUTOSETUP

Setting AUTO SETUP mode

- o STANDARD: To set the normal mode (the dot clock is adjusted strictly))
- o SPECIAL: To set the special mode (the dot clock is adjusted roughly)

Note:

- o Do not change the initial setting (STANDARD).
- SELF CHECK

To enter the self-check mode

• SERVICE MODE

To enter the service mode

• FLICKER ADJ

To enter the flicker adjustment mode

2.3 Canceling EXT OPTION

TOP PREVIOUS NEXT

Press "MENU" button on the main unit or remote control unit.

3 Self-Check Mode

TOP PREVIOUS NEXT

This mode is used to narrow down the location of the failure.


- 3.1 Procedure to enter the self-check mode
- 3.2 Self Check Display and Contents
- 3.3 Canceling the self-check mode

3.1 Procedure to enter the self-check mode

TOP PREVIOUS NEXT

Select "SELF CHECK" on "EXT OPTION" menu and press "ENTER" button on the main unit or remote control unit.

3.2 Self Check Display and Contents

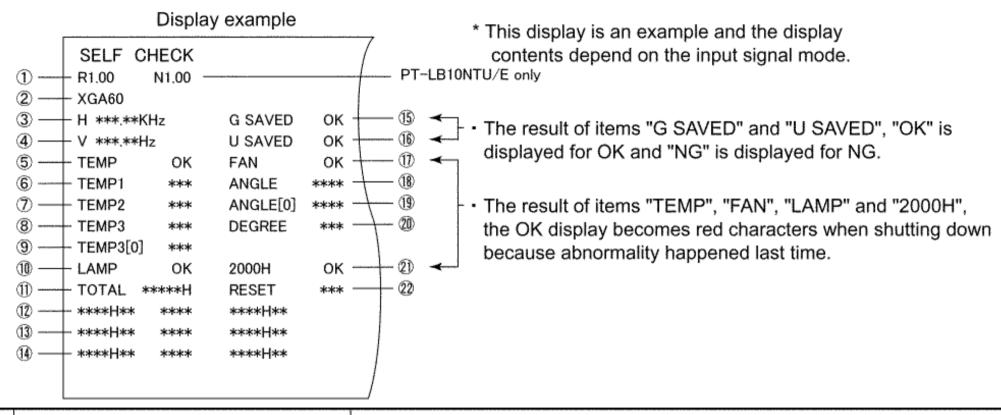

	Display Contents	Remarks
1	Microcomputer Version Display	Software Version
2	Resolution Name	Different display according to the input signal
3	Horizontal Signal Frequency	RGB or YPBPR signal reception only
4	Vertical Signal Frequency	ROB of TEBER Signal reception only
(5)	Temperature Abnormality Check	Cause of Lamp Malfanction
6	Thermosensor 1 Measurement Value *1	Around Air Outlet (A/D conversion value: 0 - 255)
7	Thermosensor 2 Measurement Value *1	Around Air Inlet (A/D conversion value: 0 - 255)
8	Thermosensor 3 Measurement Value	Around Tilt Sensor (A/D conversion value: 0 - 1 023)

9	Thermosensor 3 Reference Value	Thermosensor 3 A/D Conversion Value (0 - 1 023) at angle reset			
10	Lamp - Abnormality Check	Cause of Lamp Malfanction			
1	Total Usage Time	Projector Cumula	ative Usage Time		
12	12	Current	Cumulative Usage Time (actual time), ON Frequency and		
<u>12</u> <u>13</u>	Lamp ON - Cumulative Usage Time / Frequency / Cumulative Usage Time	Second	Cumulative Usage Time (conversion time for 155 W) of the		
14)	Trequency / Cumulative Osage Time	First	lamp are shown from the left.		
15)	Gamma Correction Data Check	It is distinguished whether gamma data is stored in the flash ROM.			
16	Color Unevenness Correction Data Check	It is distinguished whether color unevenness correction data is stored in the flash ROM.			
1	Fan Stop Check	Cause of Lamp Malfanction			
18	Tilt Sensor Measurement Value	Voltage Value (0.00 - 3.30)			
19	Tilt Sensor Reference Value	Tilt Sensor Volta	ge Value (0.00 - 3.30) at angle reset		
20	Tilt Degree *2	Degree of tilt of t	he projector, that is a value by which temperature correction		
		is given to the till	t sensor A/D conversion value.		
		(When automatic keystone, the keystone distortion is corrected with this value.)			
21)	Lamp - Judgment for Cumulative Usage more than 2 000 h *3	Judgment for Replacement Time of Lamp			
22)	Lamp - Reset Frequency of Cumulative Usage Time	Reset Frequency	/ (0 - 255)		

^{*1} When detected abnormal temperature (high temperature around the air inlet and/or outlet ports, large difference between temperature around the air inlet/outlet ports), TEMP indicator turned on. If arriving at the critical temperature, the power supply will be shutdown automatically and the indicator will flash.

^{*2} When "AUTO KEYSTN (Automatic Keystone)" is set to ON, the keystone distortion is corrected automatically with this value during automatic setup.

^{*3} Warning of the lamp cumulative usage time and shutdown use the conversion time for 155 W.

file:///E|/PTLB10/ALL/PT-LB10NTU/SVC/s0302000000.html

TOP PREVIOUS NEXT

3.3 Canceling the self-check mode

TOP PREVIOUS NEXT

Press "MENU" button on the main unit or remote control unit.

4 Service Mode

TOP PREVIOUS NEXT

This mode is used to display seven kinds of test patterns [Horizontal lines, Vertical lines, Dots, Crosshatch, White cross, Black cross and White (No pattern)] in the four colors (White, Red, Green and Blue)..

Note:

• On the service mode, displays above patterns by each color without test equipment such as PC or SG. Use the service mode for simplified adjustments by your eyes and so on.

4.1 Procedure to enter the service mode

4.2 Canceling the service mode

4.1 Procedure to enter the service mode

TOP PREVIOUS NEXT

Select "SERVICE MODE" on "EXT OPTION" menu and press "ENTER" button on the main unit or remote control unit.

Note:

- In the service mode, pressing the up-arrow "
 - **▲**" or down-arrow "
 - *" button allows the test pattern selection and theleft-arrow "
 - **◄**" or right-arrow "
 - ▶" button the color selection (White / Red / Green / Blue).

4.2 Canceling the service mode

TOP PREVIOUS NEXT

Press "MENU" button on the main unit or remote control unit.

5 Flicker Adjustment Mode

TOP PREVIOUS NEXT

If replacing the optical parts (Analysis / LCD / Lens block) of this projector and/or A-P.C.Board (assembly), enter the flicker adjustment mode and minimize the flicker.

- 5.1 Procedure to enter the adjustment mode
- 5.2 Adjustment Display and Contents
- 5.3 Canceling the flicker adjustment mode

5.1 Procedure to enter the adjustment mode

TOP PREVIOUS NEXT

Select "FLICKER ADJ" on "EXT OPTION" menu and press "ENTER" button on the main unit or remote control unit.

Note:


"DESK setting (blue)" is displayed when entering the adjustment mode.



Adjustment Display when DESK setting

5.2 Adjustment Display and Contents

TOP PREVIOUS NEXT

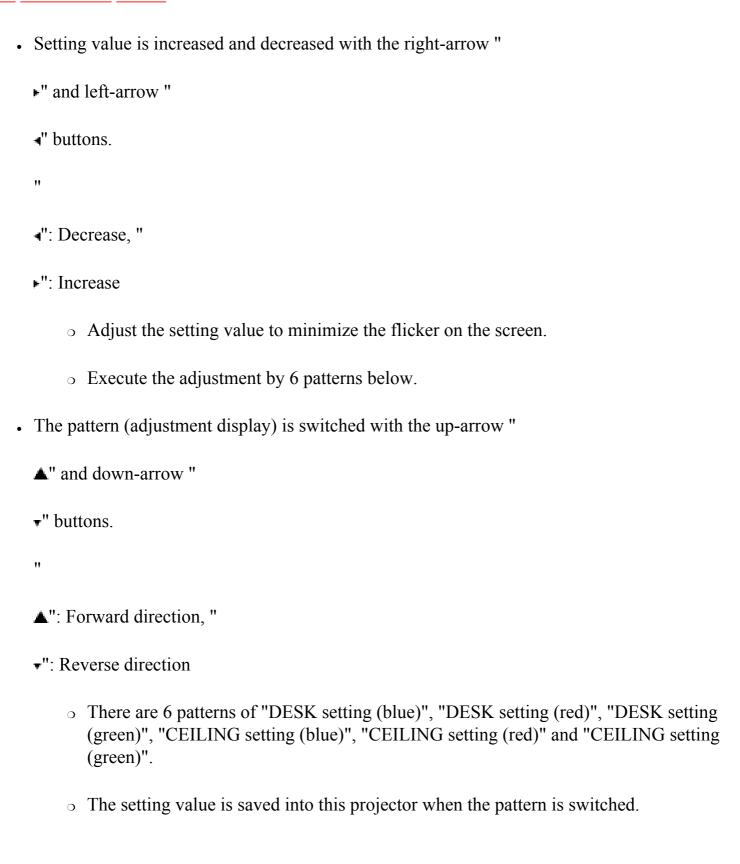

5.3 Canceling the flicker adjustment mode

TOP PREVIOUS NEXT

Press "MENU" button on the main unit or remote control unit.

Note:

When "MENU" button is pressed, the setting value at that time is saved into this projector and the adjustment mode is canceled.

6 Using the SERIAL Connector

TOP PREVIOUS NEXT

The serial connector which is on the back connector panel of the projector conforms to RS-232C standard. This projector can be controlled by a PC which is connected as shown in "6.1. Connection".

For controlling this projector by a PC, requires communication software on the market, and inputs control commands according to communication settings and basic format below.

6.1 Connection

6.2 Pin Layout and Signal Names for SERIAL Connector

6.3 Communication Settings

6.4 Basic Format


6.5 Control / Query Commands

6.6 Communication Cable Specifications

<u>6.7 Signal Selector Connecting Cable Specifications</u>

6.1 Connection

TOP PREVIOUS NEXT

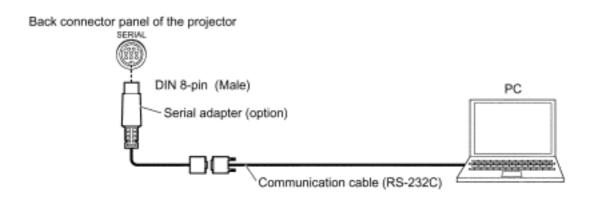


Note:

Use a proper communication cable which is suitable for the PC to connect the optional serial adapter, which is connected with SERIAL connector of this projector, and the PC.

6.2 Pin Layout and Signal Names for SERIAL Connector

TOP PREVIOUS NEXT



Pin No	Signal Name	Contents
3	RXD	Receive data
4	GND	Ground
5	TXD	Transmit data
1		
2		Connected internally
6		
7		NC
8		NC

6.3 Communication Settings


TOP PREVIOUS NEXT

Signal Level	Contents		Description
Sync. method	Asynchronous		Synchronizes every 1 character (8 bits)
Baud rate	Conforms to	9 600 bps	Data transfer speed
Parity	RS-232C	None	Error detection method
Character length	standard	8 bits	Number of bit composing 1 character
Stop bit		1 bit	Uses stop bit when asynchronous method
X parameter		Not used	
S parameter		Not used	

6.4 Basic Format

TOP PREVIOUS NEXT

The data sent from the PC to the projector is transmitted in the format shown below.



Notes:

- If sending multiple commands, check that a call back has been received from the projector for 1 command before sending the next command.
- When a command which does not require parameters is sent, the colon (:) is not required.

6.5 Control/ Query Commands

TOP PREVIOUS NEXT

Control Commands

Command Name (Parameter format is shown in <>)	Function / Contents	Call back from Projector (Parameter format is shown in<>)	Minimum Value of Parameter	Maximum Value of Parameter
PON *1	POWER ON	PON		
POF *1	POWER OFF	POF		
AVL :(pl)	VOLUME	AVL :(pl)	0	63
IIS :(input signal)	INPUT SELECT	IIS : (input signal)		
OST	STANDARD	OST		
OFZ :(off_on)	FREEZE	OFZ :(off_on)	0	1
OEN :	ENTER	OEN		
VPM : (picture mode)	PICTURE MODE	VPM : (picture mode)		
(NAT)	NATURAL	(NAT)		
(STD)	STANDARD	(STD)		
(DYN)	DYNAMIC	(DYN)		
⟨BBD⟩*2	BLACK-BD	(BBD)		
AUU	VOLUME UP	AUU		
AUD	VOLUME DOWN	AUD		
OMN	MENU	OMN		
OCU	CURSOR UP	ocu		
OCD	CURSOR DOWN	OCD		
OCL	CURSOR LEFT	OCL		
OCR	CURSOR RIGHT	OCR		
OAS	AUTO SETUP	OAS		
OSH *1	SHUTTER	OSH		
OIX	INDEX WINDOW (Double)	OIX		
DZU	D.ZOOM UP	DZU		
DZD	D.ZOOM DOWN	DZD		
OLP : (lamp power) *1 *3	LAMP POWER	OLP : (lamp power)	0	1

^{*1} Do not transmit the PON, POF, OSH and/or OLP commands continuously in a short time. The lamp may be damaged and/or cause malfunctions.

Query Commands

^{*2} The BBD parameter is non-correspondence to PT-LB10VU/E.

^{*3} The OLP command is invalid at a no signal.

Query Command	Contents	Call back from Projector (Parameter format is shown in < >)
QPW	POWER CONDITION	(power condition)
QIN	INPUT SIGNAL	(input signal)
QAV	VOLUME LEVEL	⟨pl⟩
QVC	COLOR LEVEL	⟨pl⟩
QVT	TINT LEVEL	(pl)
QVB	BRIGHT LEVEL	(pl)
QVR	CONTRAST LEVEL	⟨pl⟩
QVS	SHARPNESS LEVEL	(pl)
QWR	WHITE BALANCE LEVEL (RED)	⟨pl⟩
QWG	WHITE BALANCE LEVEL (GREEN)	(pl)
QWB	WHITE BALANCE LEVEL (BLUE)	(pl)
QHP	H-POSITION LEVEL	(pl)
QVP	V-POSITION LEVEL	⟨pl⟩
QCP	COLOR PHASE LEVEL	⟨pl⟩
QDC	DOT CLOCK LEVEL	⟨pl⟩
QSP	INSTALLATION	(installation)
QLG	LANGUAGE	(language)
QPM	PICTURE MODE	(NAT)=NATURAL
		(STD)=STANDARD
		(DYN)=DYNAMIC
		⟨BBD⟩=BLACK-BD *
QFZ	FREEZE	(off_on)
QLP	LAMP POWER	(lamp power)
Q\$L	LAMP ON TIME	(acctch)
QSH	SHUTTER	(off_on)
QKS	KEYSTONE	{pl}
QTE	COLOR TEMPERATURE	(color temp.)

^{*} The BBD parameter is non-correspondence to PT-LB10VU/E.

Parameters


Parameter Format	Parameter Size (Byte)	Parameter Definition
(pl)	3 (provided that	Decimal notation without plus/minus sign (0 to 999),
	approves of 1 byte or 2 bytes when control)	Decimal notation with plus/minus sign (-99 to +99) (Returns 3 bytes call back from the projector. Decimal notation without plus/minus sign (000, 001, 002,, 999), Decimal notation with plus/minus sign (-99, -98,, -01, +00, +01,, +99)
(off_on)	1	0=OFF, 1=ON
(input signal)	3	VID=VIDEO, SVD=S-VIDEO, RG1=RGB1,
		NWP = NETWORK (PT-LB10NTU/E only)
(installation)	1	0=FRONT/DESK, 1=REAR/DESK, 2=FRONT/CEILING, 3=REAR/CEILING
(language)	3	ENG=English, DEU=German, FRA=French, ESP=Spanish,
		ITA=Italian, JPN=Japanese, CHI=Chinese, KOR=Korean, RUS=Russian
(power condition)	3	000=Power OFF, 001=Power ON
(acctch)	4	Decimal notation without plus/minus sign: 0000 hour to 9999 hours
(lamp power)	1	0=LOW, 1=HIGH
(color temp.)	1	0=LOW, 1=STD, 2=HIGH

^{*} If an incorrect command is sent from the PC, the "ER401" command will be sent from the projector to the PC.

[Example]

When controls the audio volume to +30 by a PC

(Sends commands as the following:)



• When a command which does not require parameters is sent, the colon (:) is not required.

6.6 Communication Cable Specifications

TOP PREVIOUS NEXT

	Serial a	adapter			at	the PC (D	TE)
			1	NC	NC	1	
	5	2	2			2	
	3	3	3			3	
			4	NC	NC	4	
	4	5	5			5	
	6	6	6	DSR	NC	6	
+	1	7	7			7	
L	2	8	8			8	
			9	NC	NC	9	

6.7 Signal Selector Connecting Cable Specifications

TOP PREVIOUS NEXT

When connecting to a signal selector (ex. TW-SWS62J), use a cable with specifications below.

Connecting method: Connects a video signal cable from the signal selector to "VIDEO IN", and an RGB signal cable to "RGB1 IN".

At the signal selector			At the	serial adapter (DCE)	
D-sub 9p (male	e)			D-sub 9p (male)	
Signal Name	Pin No.		Pin No.	Signal Name	
NC	1		1	NC	
RD Receive data	2	-	2	SD Transmit data	
SD Transmit data	3	-	3	RD Receive data	
NC	4		4	NC	
GND Ground	5		5	GND Ground	
NC	6		6	DSR	
RS Transmit request	7		7	CS Transmit permission	
CS Transmit permission	8		8	RS Transmit request	
NC	9		9	NC	

Serial adapter				
Pin No.	Pin No.			
(cable side)	(projector side)			

2	5			
3	3			
5	4			
6	6			
7	1			
8	2			

Note:

Set VP control terminal switch of the signal selector to VP TYPE "B".

7 Disassembly Instructions

TOP PREVIOUS NEXT

Warning:

• Be sure to unplug the power cord from the power outlet before disassembling this projector.

Caution:


- While turning over a printed circuit board, be sure to put a insulating material under it to prevent a short circuit.
- Printed circuit boards and wires must not be pulled forcibly, but be handled carefully.
- Connectors also must be handled carefully.
- After repairing this projector, be sure to put back the wires and connectors to the original condition.
- 7.1 Printed Circuit Board and Main Parts Location
- 7.2 Removal of Upper Case
- 7.3 Removal of A-P.C.Board
- 7.4 Removal of WL-P.C.Board (PT-LB10NTU / E only)
- 7.5 Removal of S1-P.C.Board
- 7.6 Removal of S2-P.C.Board
- 7.7 Removal of K-P.C.Board
- 7.8 Removal of B / Q-Module
- 7.9 Removal of P-Module
- 7.10 Removal of Lamp Unit

- 7.11 Removal of Analysis Block and Lens
- 7.12 Removal of LCD Block
- 7.13 Replacement of LCD Panel
- 7.14 LCD Panel Discrimination
- 7.15 LCD Panel Combination
- 7.16 Replacement of Incidence Polarizer
- 7.17 Replacement of Projection Polarizer
- 7.18 Replacement of PBS Array (Analysis Block)


7.1 Printed Circuit Board and Main Parts Location

TOP PREVIOUS NEXT

Electrical Parts

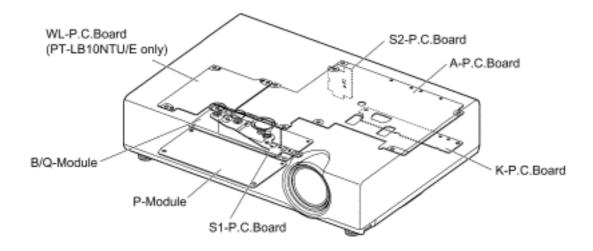

Optical Parts

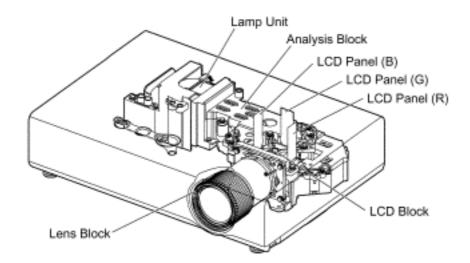


7.2 Removal of Upper Case


TOP PREVIOUS NEXT

Note.

- For PT-LB10NTU/E, remove a wireless card before disassembling.
- 1. Turn the projector upside down.
- 2. Unscrew the 6 screws.

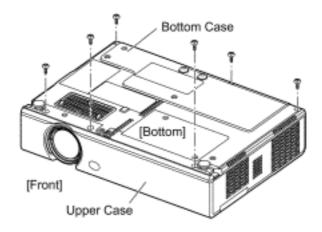


- 3. Return the projector to the normal position.
- 4. Lift the upper case upward (approx. 10 cm).
- 5. Disconnect the cable from S1-P.C.Board (connector A8 on A-P.C.Board) and remove the upper case.

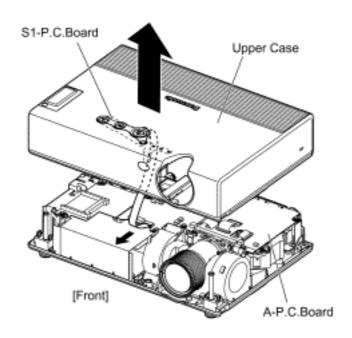


7.3 Removal of A-P.C.Board

TOP PREVIOUS NEXT

- 1. Remove the upper case according to the section 7.2. "Removal of Upper Case".
- 2. Unscrew the 1 screw on the backside and remove the connector cover.
- 3. Unscrew the 1 screw fixing the connector metal fittings on the backside.
- 4. Unscrew the 3 screws and remove the grounding metal (2).

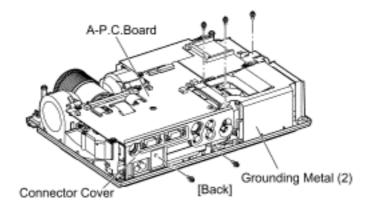


- 5. Disconnect the connectors from/to the A-P.C.Board.
- 6. Unscrew the screws (PT-LB10NTU/E: 5, Others: 2) and remove the A-P.C.Board block (PT-LB10NTU/E: with WL- and S2-P.C.Boards, Others: with S2-P.C.Board).

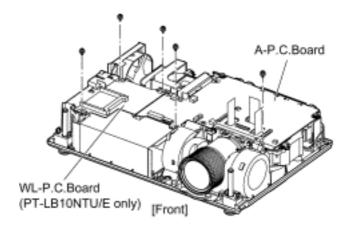


- 7. While disconnecting the 2 connectors, remove the WL-P.C.Board from the A-P.C.Board block (PT-LB10NTU/E only).
- 8. Unscrew the 10 screws and remove the connector metal fittings.

Note:

o Because the S2-P.C.Board block is attached, work carefully when removing the connector metal fittings.

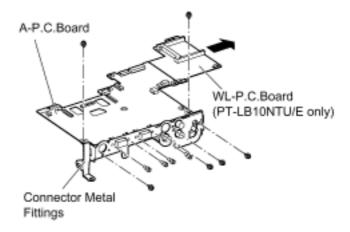

9. While disconnecting the connector between A- and S2-P.C.Boards, remove the S2-P.C.Board block.

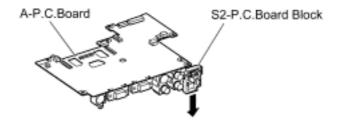

7.4 Removal of WL-P.C.Board (PT-LB10NTU/E only)


TOP PREVIOUS NEXT

Remove the WL-P.C.Board according to the steps 1 through 6 in the section 7.3. "Removal of A-P.C.Board".


7.5 Removal of S1-P.C.Board

TOP PREVIOUS NEXT

- 1. Remove the upper case according to the section 7.2. "Removal of Upper Case".
- 2. Remove the water guide plate.

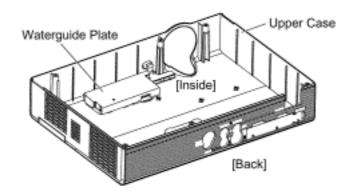

3. Unscrew the 2 screws and remove the S1-P.C.Board.

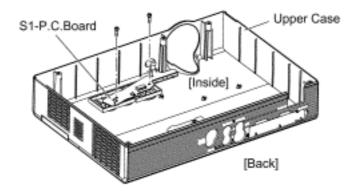


7.6 Removal of S2-P.C.Board

TOP PREVIOUS NEXT

- 1. Remove the S2-P.C.Board block according to the section 7.3. "Removal of A-P.C.Board".
- 2. Remove the holder while expanding the resin hooks outside.

Note:


o Work carefully not to damage the resin hook.

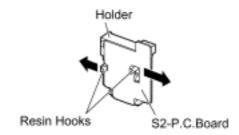


7.7 Removal of K-P.C.Board

TOP PREVIOUS NEXT

- 1. Remove the analysis block, LCD block and lens according to the steps 1 through 3 in the section 7.11. "Removal of Analysis Block and Lens".
- 2. Unscrew the screws (PT-LB10NTU/E: 1, Others: 3) and remove the grounding metal.

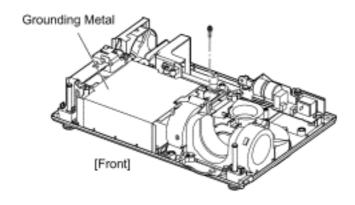


- 3. Unscrew the 2 screws and remove the lamp unit terminal.
- 4. Unscrew the 2 screws and remove the exhaust fan and speaker block.
- 5. Unscrew the 2 screws and remove the lamp house and thermofuse attachment fittings.
- 6. Unscrew the 2 screws and remove the K-P.C.Board.

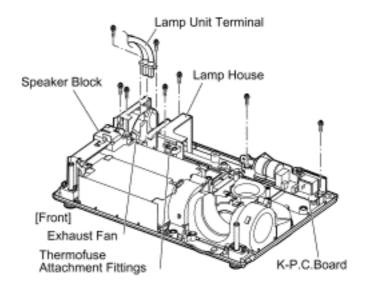


7.8 Removal of B/Q-Module

TOP PREVIOUS NEXT


- 1. Remove the A-P.C.Board block according to the steps 1 through 6 in the section 7.3. "Removal of A-P.C.Board".
- 2. Unscrew the screws (PT-LB10NTU/E: 1, Others: 3) and remove the grounding metal.

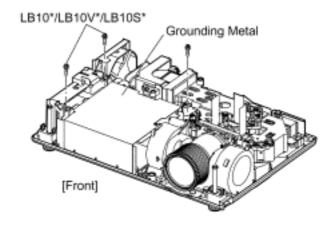

- 3. Unscrew the 2 screws and remove the lamp unit terminal.
- 4. Unscrew the 3 screws and remove the lamp house and thermofuse attachment fittings.
- 5. Unscrew the 1 screws and remove the exhaust fan and speaker block.

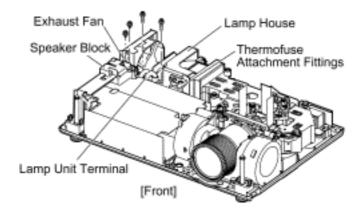


6. Unscrew the 4 screws and remove the B/Q-Module.

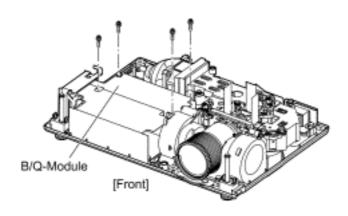


7.9 Removal of P-Module

TOP PREVIOUS NEXT

- 1. Remove the A-P.C.Board block according to the steps 1 through 6 in the section 7.3. "Removal of A-P.C.Board".
- 2. Unscrew the screws (PT-LB10NTU/E: 1, Others: 3) and remove the grounding metal.

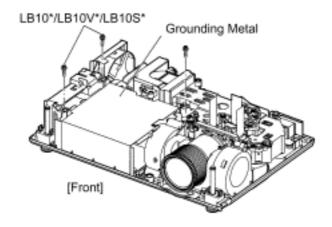


3. Unscrew the 4 screws and remove the P-Module.

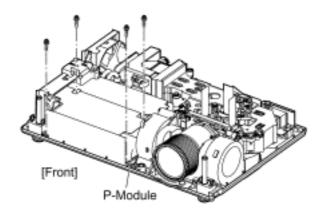


7.10 Removal of Lamp Unit

TOP PREVIOUS NEXT

- 1. Turn the projector upside down.
- 2. Loosen the 2 screws until they idle, remove the lamp unit cover.

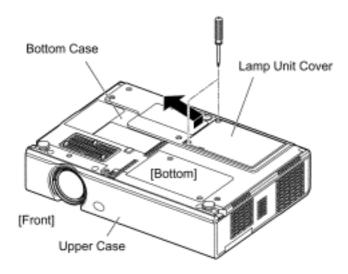


3. Loosen the 2 screws until they idle, remove the lamp unit with the handle.

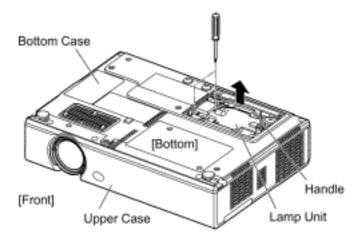

Note:

o When installing the lamp unit (or a new one) in the main unit, place it in a specified position and press the connector side and the opposite side of the lamp unit (arrow positions shown in the figure below), and confirm the lamp unit is inserted securely.


Then, tighten the 2 screws fixing the lamp unit, and attach the lamp unit cover.

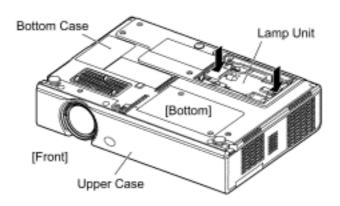


7.11 Removal of Analysis Block and Lens

TOP PREVIOUS NEXT

- 1. Remove the lamp unit according to the section 7.10. "Removal of Lamp Unit".
- 2. Remove the A-P.C.Board block according to the steps 1 through 6 in the section 7.3. "Removal of A-P.C.Board".
- 3. Unscrew the 3 screws and remove the analysis block, LCD block and lens.

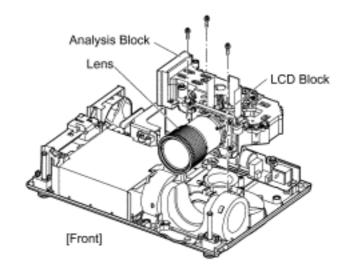

- 4. Unscrew the 4 screws A and remove the lens.
- 5. Unscrew the 2 screws B and remove the LCD block (the analysis block remains).

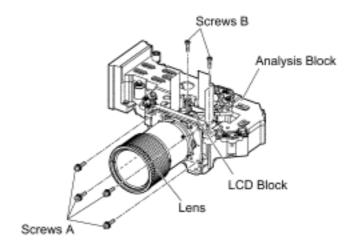


7.12 Removal of LCD Block

TOP PREVIOUS NEXT

- 1. Remove the A-P.C.Board block according to the steps 1 through 6 in the section 7.3. "Removal of A-P.C.Board".
- 2. Unscrew the 2 screws and remove the LCD block.

Note:

o Be careful not to touch the surface of prism and LCD panel.

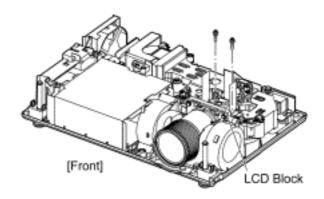


7.13 Replacement of LCD Panel

TOP PREVIOUS NEXT


- The procedure is described as an example of LCD panel (B).
- 1. Remove the LCD block according to the section 7.12. "Removal of LCD Block".
- 2. Cut the 4 LCD panel installation spindles at the position A and remove the LCD panel.
- 3. Cut the 4 LCD panel installation spindles at the position B and remove them.

Notes:

- Work carefully not to apply external force around the spindle part by using a cutter, cutting nipper or the like for cutting the spindle.
- o Adjust the height after the spindle is cut to 1 mm or less.

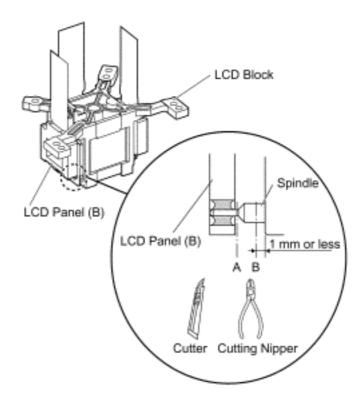


- 4. Attach the base plate with 4 screws.
- 5. Tighten the 2 screws temporarily just until new LCD panel (with the panel attachment and panel adjuster) can be shifted by your fingers.

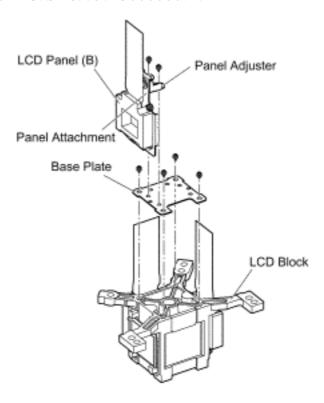

- 6. Reassemble the projector in the reverse order of disassembling, but leave the upper case and the screws fixing the A-P.C.Board block as they are removed.
- 7. Adjust the convergence according to the section 8.4. "Convergence Adjustment".
- 8. After the adjustment, while paying attention not to vary the adjusting result, tighten the 2 screws (upper) fixing the panel attachment temporarily with a hexagon head wrench.

Notes:

- Prepare a hexagon head wrench processed short.
- Service tool (Part No. TZSH070010), hexagon head wrench processed short, is available.
- 9. Remove the LCD block again.
- 10. Tighten the 3 screws fixing the panel attachment.

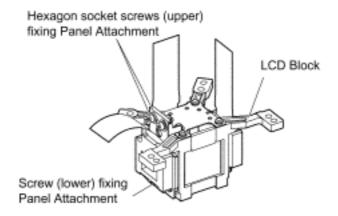

Note:


- o For PT-LB10NTU/E, the screw (lower) fixing the panel attachment holds the installation of the LCD panel concurrently.
- 11. Reassemble the projector as it was.

7.14 LCD Panel Discrimination

TOP PREVIOUS NEXT

ID-tag seal color	LCD panel	
Red	LCD panel (R)	
Blue	LCD panel (B)	
(No seal)	LCD panel (G)	

- Since the ID-tag seal is pasted to the FPC of LCD Panl, (R), (G) or (B) can be easily identified by the color of the seal.
- Finally, identify the panel color by the part number printed on the FPC.

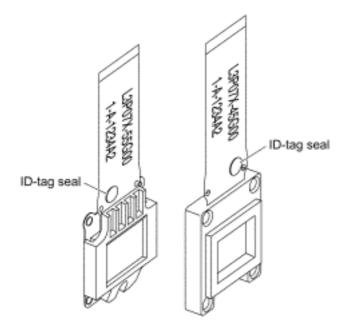

7.15 LCD Panel Combination

TOP PREVIOUS NEXT


- Part number is printed on the FPC of LCD Panel.
- When replacing LCD Panel, use a component which has the same part number as the original.

Model number	LCD panel	Part No.
	R	L5BDAXQ00143 (L3P07X-55G00)
PT-LB10NTU/E PT-LB10U/E	G	L5BDAXQ00144 (L3P07X-55G00)
	В	L5BDAXQ00145 (L3P07X-55G00)
	R	L5BDAXQ00131 (L3P07X-45G00)
PT-LB10VU/E	G	L5BDAXQ00132 (L3P07X-45G00)
	В	L5BDAXQ00133 (L3P07X-45G00)
	R	L5BDAXN00073 (L03P07S-46G00)
PT-LB10SU/E	G	L5BDAXN00074 (L03P07S-46G00)
	В	L5BDAXN00075 (L03P07S-46G00)

7.16 Replacement of Incidence Polarizer

TOP PREVIOUS NEXT

- 1. Remove the LCD block according to the section 7.12. "Removal of LCD Block".
- 2. Unscrew the 2 screws.
- 3. Remove the analysis case (upper) while expanding the hook of it outside.

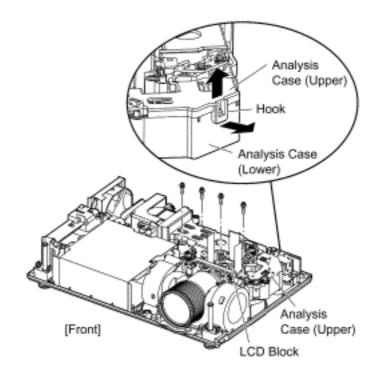


Note:

- o Because the hook is damaged easily, be careful not to expand it excessively.
- 4. Replace the incidence polarizer.

Note:

o Be careful not to touch the surface of incidence polarizer.

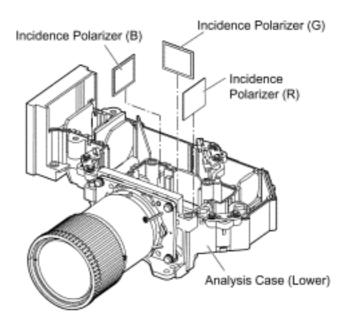


7.17 Replacement of Projection Polarizer

TOP PREVIOUS NEXT

- The procedure is described as an example of projection polarizer (B).
- 1. Remove the LCD block according to the section 7.12. "Removal of LCD Block".
- 2. Remove the projection polarizer which requires replacing. (The projection polarizer is secured with adhesive tape.)

Notes:

- o Be careful not to damage peripheral components (prism, LCD panel, etc.).
- Use tweezers.

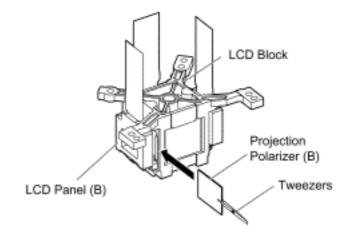


- 3. Install new projection polarizer.
 - A. Put adhesive tape on the projection polarizer.
 - B. Stick the projection polarizer on the specified position.

Notes:

- Align the projection polarizer with the guides (lower, side) of LCD block.
- Be careful not to touch the surface of projection polarizer.
- Use tweezers.

C. Press the adhesive part and secure the projection polarizer.

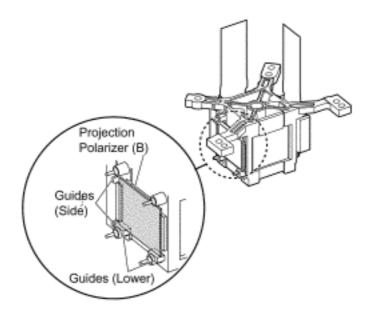


7.18 Replacement of PBS Array (Analysis Block)

TOP PREVIOUS NEXT

- 1. Remove the analysis case (upper) according to the steps 1 through 3 in the section 7.16. "Removal of Incidence Polarizer".
- 2. Remove the PBS array.
- 3. Install new PBS array.

Note:

- o Be careful not to mistake the direction (inside and outside, upper and lower).
- o Be careful not to touch the surface of PBS array.

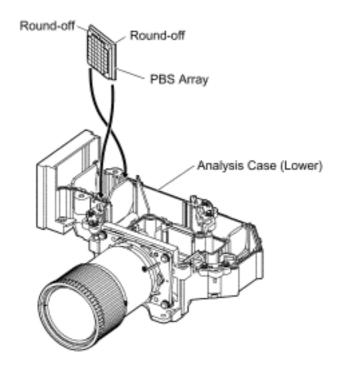

8 Measurement and Adjustments

TOP PREVIOUS NEX	XT
------------------	----

- 8.2 Cautions for Adjustment
- 8.3 Setting Before Adjustment
- 8.4 Convergence Adjustment
- 8.4.1 Tools to be used
- 8.4.2 Preparation
- 8.4.3 Adjustment Procedure
- 8.5 Lighting Area Adjustment
- 8.5.1 Tools to be used
- 8.5.2 Preparation
- 8.5.3 Adjustment Procedure
- 8.6 Software for Adjustment
- 8.6.1 Outline
- 8.6.2 Operating Procedure
- 8.6.3 Port Selection Menu
- 8.6.4 Data Transmission / Reception Menu
- 8.6.5 Adjustment Menu
- 8.7 Flicker Adjustment

8.8 Input Level Adjustment

8.8.1 Adjustment Menu


8.8.2 Explanation of Buttons

8.8.3 Equipment to be used

8.8.4 Adjustment Procedure

8.1 Adjustment Procedure Flowchart

TOP PREVIOUS NEXT

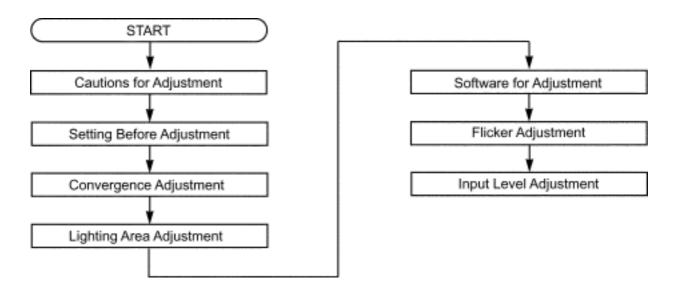

8.2 Cautions for Adjustment


TOP PREVIOUS NEXT

- Never unplug the power cord until the power indicator on the projector illuminates red.
- To maintain and ensure safety, always use the designated components for replacement parts.
- If removing any clamps, lead wires or connectors, always place them back in their proper locations.
- Be careful not to damage the lead wires or components when using a soldering iron or similar tool.

8.3 Setting Before Adjustment

TOP PREVIOUS NEXT

- Set up the projector to obtain the projection distance below.
- Turn the zoom ring of the projector to obtain the largest size of the picture.

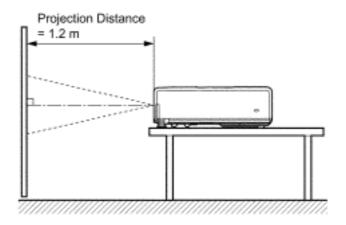

8.4 Convergence Adjustment

TOP PREVIOUS NEXT

Execute this adjustment when replacing the LCD panel.

8.4.1 Tools to be used

8.4.2 Preparation

8.4.3 Adjustment Procedure

8.4.1 Tools to be used

TOP PREVIOUS NEXT

Service Kit (Part No. TZSH07015): This kit is composed of 3 extension flexible cables and 3 connector extension cables.

Note:

• Consult your dealer or Authorized Service Center for the service kit.

8.4.2 Preparation

TOP PREVIOUS NEXT


1. Loosen 2 screws fixing the panel adjuster and 3 screws fixing the panel attachment, then tighten the 5 screws temporarily just until the LCD panel can be shifted by your fingers.

Note:

- See figures in the section 7.13. "Replacement of LCD Panel" for 2 screws fixing the panel adjuster and 3 screws fixing the panel attachment.
- 2. Reassemble the projector in the reverse order of disassembling, but leave the upper case and the screws fixing the A-P.C.Board block as they are removed.
- 3. Connect the service kit (extension cables).
 - o Each flexible cable of LCD Panels (R/G/B) Connectors (A1/A2/A3) on A-P.C.Board
 - o Power fan connector Connector (A16) on A-P.C.Board
 - Exhaust fan connector Connector (A17) on A-P.C.Board
 - o PBS fan connector Connector (A19) on A-P.C.Board
- 4. Covering with an insulator (cloth or the like) to prevent a short circuit, set the A-P.C.Board block on the main unit.

Note:

o Handle with care not to apply external force to connecting parts which connect the main unit and A-P.C.Board.

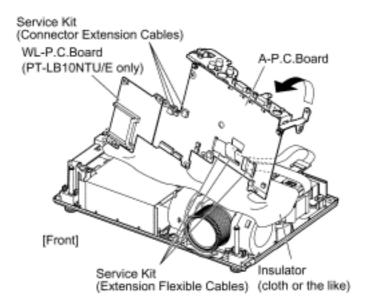

8.4.3 Adjustment Procedure


TOP PREVIOUS NEXT

Prepare 2 pieces of thick black paper (23 mm × 100 mm) that can be shaded.

• Cover and shade LCD panels with the paper except the panel for adjustment.


8.4.3.1 When replacing every LCD panel or LCD block

- 1. Display the green crosshatch pattern and adjust the lens focus.
- 2. Adjust focus by shifting the panel adjuster for LCD panel (G) back and forth, then tighten the 2 screws.
- 3. Display green and blue crosshatch patterns.
- 4. Adjust the LCD panel (B) position so that the vertical center of blue crosshatch pattern is overlapped with the vertical center of green crosshatch pattern.
- 5. Adjust the LCD panel (B) position so that the horizontal center of blue crosshatch pattern is overlapped with the horizontal center of green crosshatch pattern.
- 6. Correct the tilt of the blue crosshatch pattern by adjusting the LCD panel (B) position.
- 7. Adjust the LCD panel (R) position similarly.
- 8. Display green, red and blue crosshatch patterns and confirm the convergence. If it is necessary, fine adjust the convergence so that the red and/or blue crosshatch pattern is overlapped with green one.

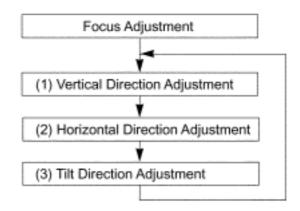

Repeat steps (1) to (3) until the green and blue crosshatch patterns merge into a cyan pattern.

9. After the adjustment, reassemble the projector according to the steps 8 through 11 in the section 7.13. "Replacement of LCD Panel".

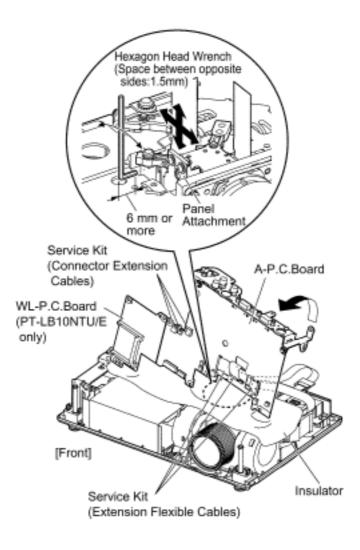

8.4.3.2 When replacing single LCD panel (R, G or B)

- The procedure is described as an example when LCD panel (B) is replaced.
- 1. Display the green crosshatch pattern and adjust the lens focus.
- 2. Display green and blue crosshatch patterns.
- 3. Adjust focus by shifting the panel adjuster for LCD panel (B) back and forth, then tighten the 2 screws.
- 4. Adjust the LCD panel (B) position so that the vertical center of blue crosshatch pattern is overlapped with the vertical center of green crosshatch pattern.

- 5. Adjust the LCD panel (B) position so that the horizontal center of blue crosshatch pattern is overlapped with the horizontal center of green crosshatch pattern.
- 6. Correct the tilt of the blue crosshatch pattern by adjusting the LCD panel (B) position.
- 7. Display green, red and blue crosshatch patterns and confirm the convergence. If it is necessary, fine adjust the convergence so that the red and/or blue crosshatch pattern is overlapped with green one.

8.5 Lighting Area Adjustment

TOP PREVIOUS NEXT

8.5.1 Tools to be used

8.5.2 Preparation

8.5.3 Adjustment Procedure

8.5.1 Tools to be used

TOP PREVIOUS NEXT

Service Kit (Part No. TZSH07015): This kit is composed of 3 extension flexible cables and 3 connector extension cables.


Note:

• Consult your dealer or Authorized Service Center for the service kit.

8.5.2 Preparation

TOP PREVIOUS NEXT


- 1. Remove the connector panel and grounding metal (2) according to the steps 1 through 4 in the section 7.3. "Removal of A-P.C.Board".
- 2. Unscrew the screws (PT-LB10NTU/E: 5, Others: 2).

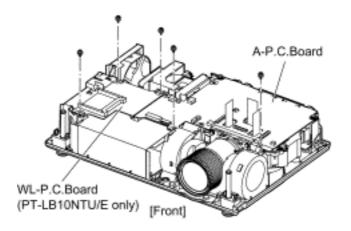

- 3. Connect the service kit (extension cables).
 - o Each flexible cable of LCD Panels (R/G/B) Connectors (A1/A2/A3) on A-P.C.Board
 - Power fan connector Connector (A16) on A-P.C.Board
 - o Exhaust fan connector Connector (A17) on A-P.C.Board
 - o PBS fan connector Connector (A19) on A-P.C.Board
- 4. Covering with an insulator (cloth or the like) to prevent a short circuit, set the A-P.C.Board block on the main unit.

Note:

o Handle with care not to apply external force to connecting parts which connect the main unit and A-P.C.Board.

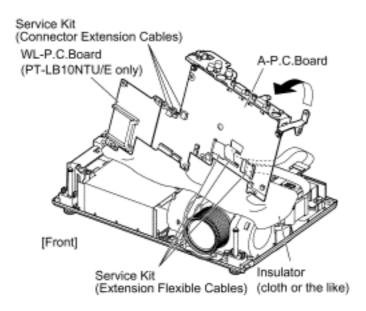

8.5.3 Adjustment Procedure


TOP PREVIOUS NEXT

8.5.3.1 Outline

When the lighting area is off from the adjustment and color unevenness appears, adjust the lighting area into correct position.

Symptom	Measure
Magenta unevenness	G Reflector Adjustment
Cyan unevenness	R Reflector Adjustment
Yellow unevenness	B Reflector Adjustment

- Shifting the mirror adjusting lever horizontally, adjust color unevenness on the screen upper/lower sides.
- Twisting the mirror adjusting lever, adjust color unevenness on the screen right/left sides.

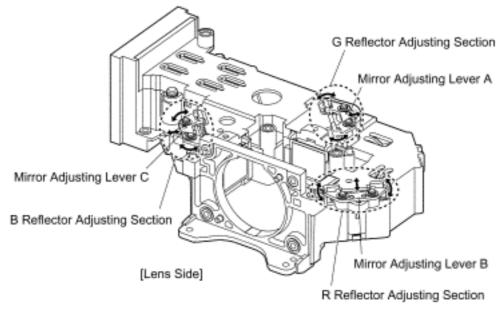

[Above figure is shown only the analysis block for explanation.]

8.5.3.2 G Reflector Adjustment

- 1. Turn on the power and display 100 % white pattern on the screen.
- 2. Loosen the 2 screws fixing the mirror adjusting lever A just until the lever can be shifted.

- 3. Adjust the mirror adjusting lever A position to minimize color unevenness on the screen by shifting the lever in arrow directions.
- 4. Tighten the 2 screws.

8.5.3.3 R Reflector Adjustment

- 1. Turn on the power and display 100 % white pattern on the screen.
- 2. Loosen the 2 screws fixing the mirror adjusting lever B just until the lever can be shifted.
- 3. Adjust the mirror adjusting lever B position to minimize color unevenness on the screen by shifting the lever in arrow directions.
- 4. Tighten the 2 screws.

8.5.3.4 B Reflector Adjustment

- 1. Turn on the power and display 100 % white pattern on the screen.
- 2. Loosen the 2 screws fixing the mirror adjusting lever C just until the lever can be shifted.
- 3. Adjust the mirror adjusting lever C position to minimize color unevenness on the screen by shifting the lever in arrow directions.
- 4. Tighten the 2 screws.

8.6 Software for Adjustment

TOP PREVIOUS NEXT

8.6.1 Outline

8.6.2 Operating Procedure

8.6.3 Port Selection Menu


8.6.4 Data Transmission / Reception Menu

8.6.5 Adjustment Menu

8.6.1 Outline

TOP PREVIOUS NEXT

- This projector needs computer-aided adjustments.
- After the software adjustments, this projector must be turned off and on again to memorize the settings.
- Connect the cable between the projector and a PC as shown below.
- Updating the software will change the version number.

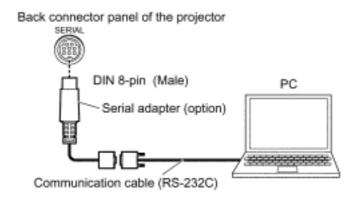

8.6.2 Operating Procedure

TOP PREVIOUS NEXT

1. Run software program by the keyboard entry.

Note:

o Use the software program as below.

Adjustment Tool [LB10]

- 2. The first menu is Port selection menu.
- 3. Adjust the projector by selecting the necessary item from the menu in each stage.

8.6.3 Port Selection Menu

TOP PREVIOUS NEXT



Select the applying item with the list box and click "Data" or "Adjustment".

8.6.3.1 Explanation of Buttons

Port:

Port name of PC which connects with the projector

Data:

Displays the data transmission/reception menu.

Adjustment:


Displays the adjustment menu.

Exit:

Exits this application.

8.6.4 Data Transmission/Reception Menu

TOP PREVIOUS NEXT

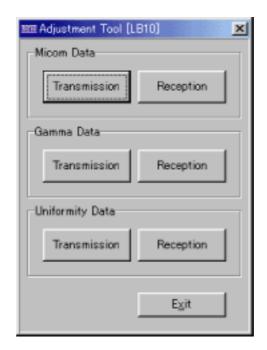

8.6.4.1 Explanation of Buttons

Micom Data Transmission:

Reads the microcomputer data from the file and transmits it to the projector.

Micom Data Reception:

Receives the microcomputer data from the projector and writes it in the file.

Gamma Data Transmission:

Reads the gamma data from the file and transmits it to the projector.

Gamma Data Reception:

Receives the gamma data from the projector and writes it in the file.

Uniformity Data Transmission:

Reads the color unevenness correction data from the file and transmits it to the projector.

Uniformity Data Reception:

Receives the color unevenness correction data from the projector and writes it in the file.

Exit:

Exits this application.

8.6.4.2 Receiving and transmitting of the data

Click a target button and specify a file name.

8.6.5 Adjustment Menu

TOP PREVIOUS NEXT



8.6.5.1 Explanation of Buttons

Input Level Adjustment RGB:

Displays the RGB input level adjustment menu.

Exit:

Exits this application.

8.7 Flicker Adjustment

TOP PREVIOUS NEXT

According to the procedure of chapter 5 "Flicker Adjustment Mode", minimize the flicker.

8.8 Input Level Adjustment

TOP PREVIOUS NEXT

8.8.1 Adjustment Menu

8.8.2 Explanation of Buttons

8.8.3 Equipment to be used

8.8.4 Adjustment Procedure

8.8.1 Adjustment Menu

TOP PREVIOUS NEXT



8.8.2 Explanation of Buttons

TOP PREVIOUS NEXT

OK:

Executes automatic sub contrast and sub brightness adjustments, then closes this dialog.

Cancel:

Cancels this menu.

8.8.3 Equipment to be used

TOP PREVIOUS NEXT

PC, RGB Signal Generator, Software for Adjustment

8.8.4 Adjustment Procedure

TOP PREVIOUS NEXT

- 1. Display the input level adjustment [RGB] menu.
- 2. Input a window pattern signal to RGB IN connector.

Note:

o Use approx. 15 % window pattern as follows.

```
Black background (screen width): White window width = 2:1
```

Black background (screen height): White window height = 3:1

- \circ PT-LB10NTU/E, LB10U/E, LB10VU/E must use the window pattern of XGA (1 024 \times 768).
- \circ PT-LB10SU/E must use the window pattern of S-VGA (800 \times 600).
- 3. Click the OK button.

9 Troubleshooting

TOP PREVIOUS NEXT

The letters in the left of the inspection items indicate the P.C.Boards or Modules related to their respective descriptions.


Note: A


The letter of the alphabet indicates the P.C.Board or Module name.


(Example) A: A-P.C.Board, B: B-Module


If replacing A-P.C.Board (assembly), read the ROM data from the old P.C.Board and write it in the new one according to the section 8.6. "Software for Adjustment". At this time, if the readout from the old P.C.Board does not succeed, remove IC1011 and IC1017 from the old P.C.Board and install them on the new one.


If replacing A-P.C.Board (assembly), adjust the RGB Input Level according to the chapter 8.8. "Input Level Adjustment".

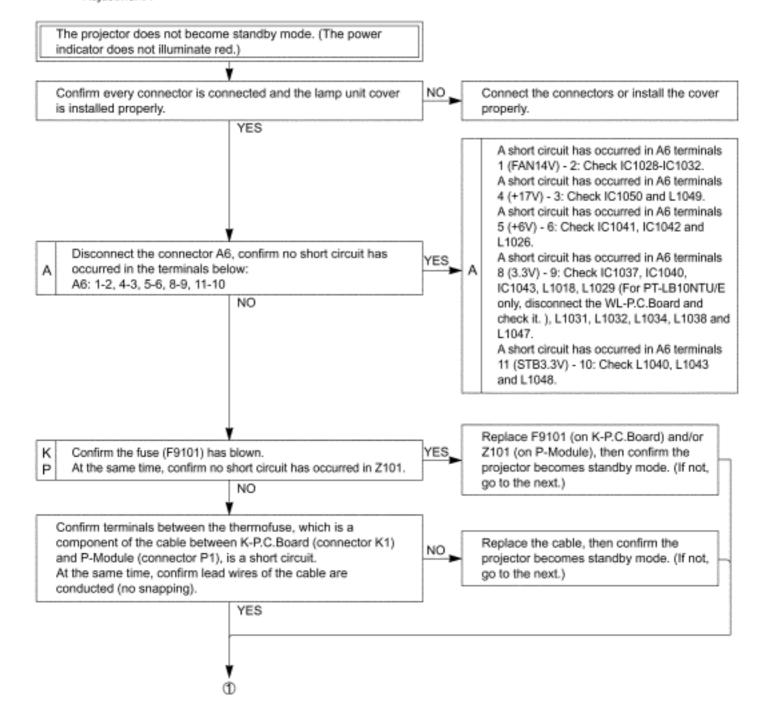


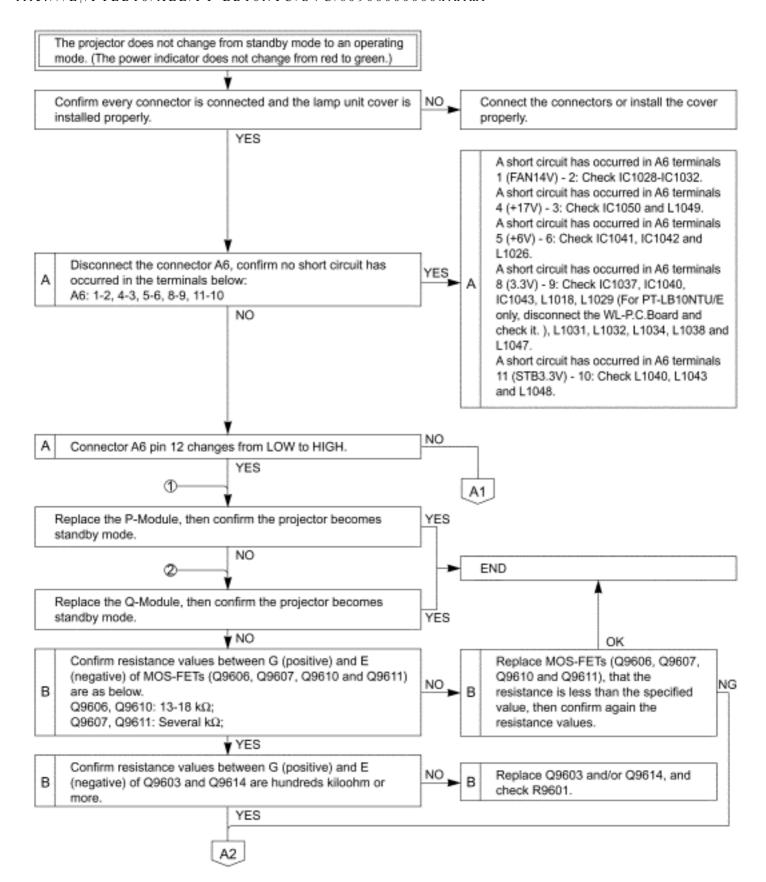


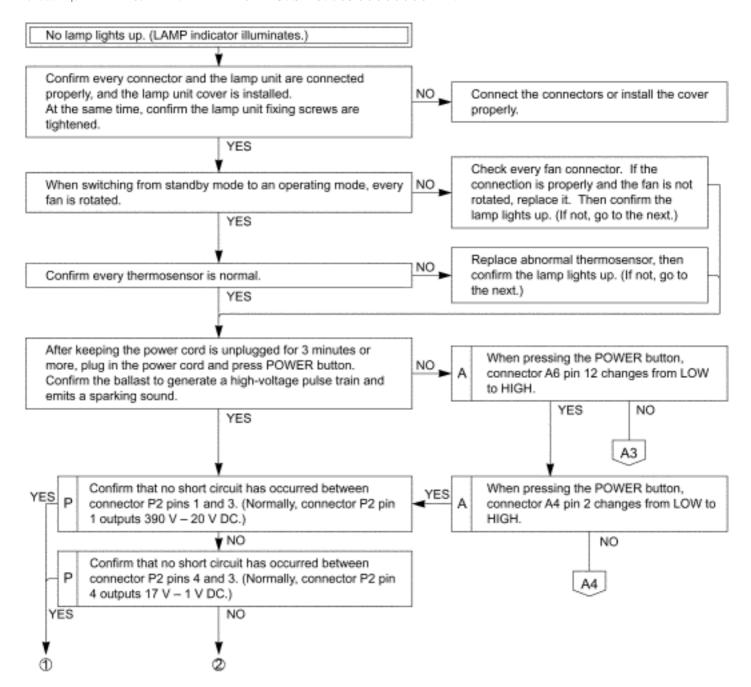


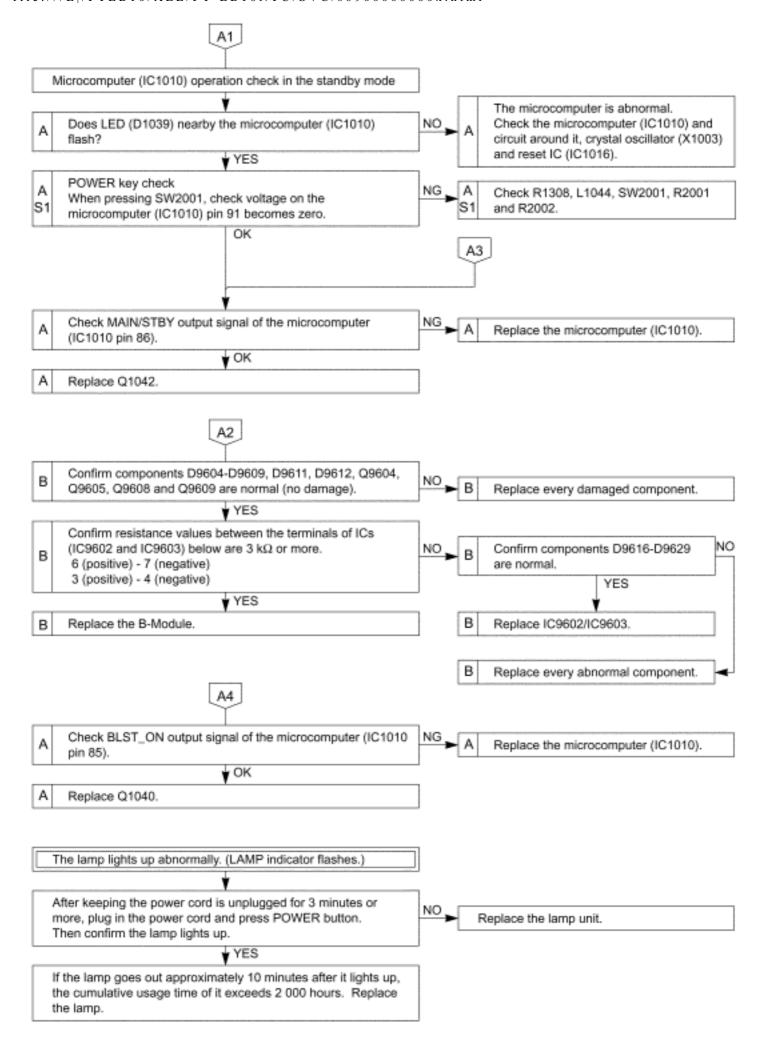


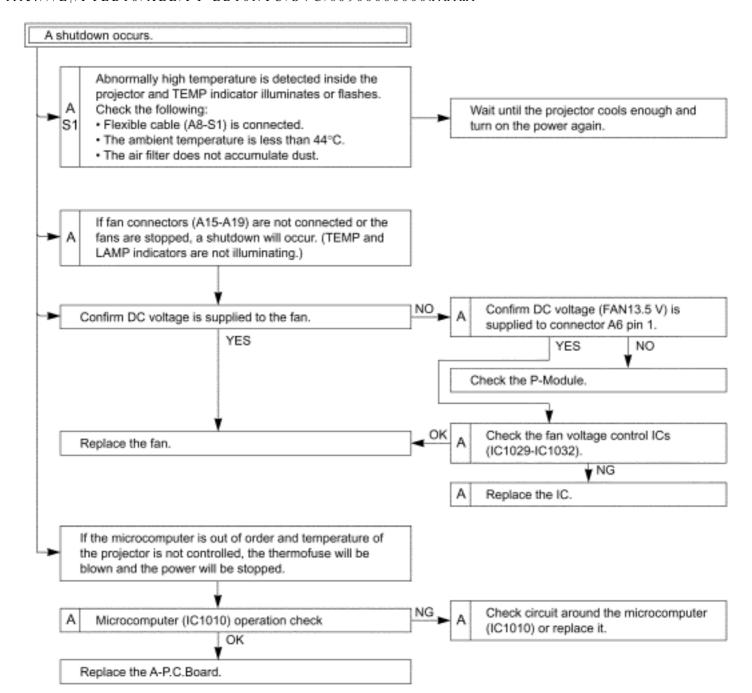


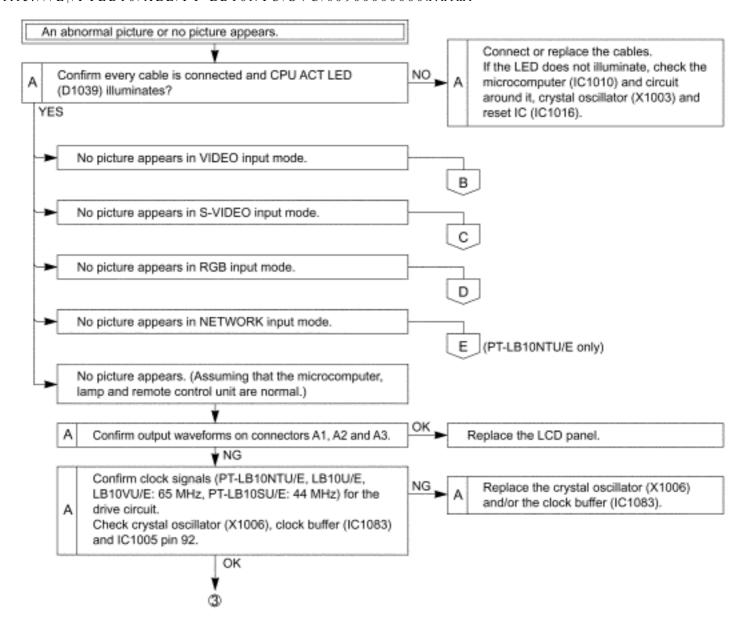

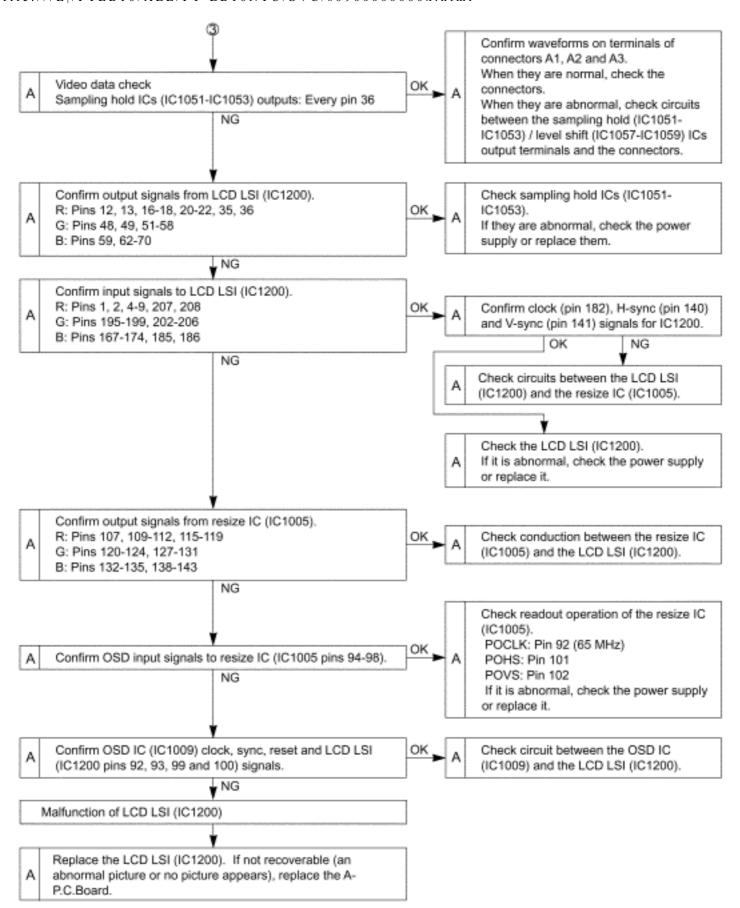

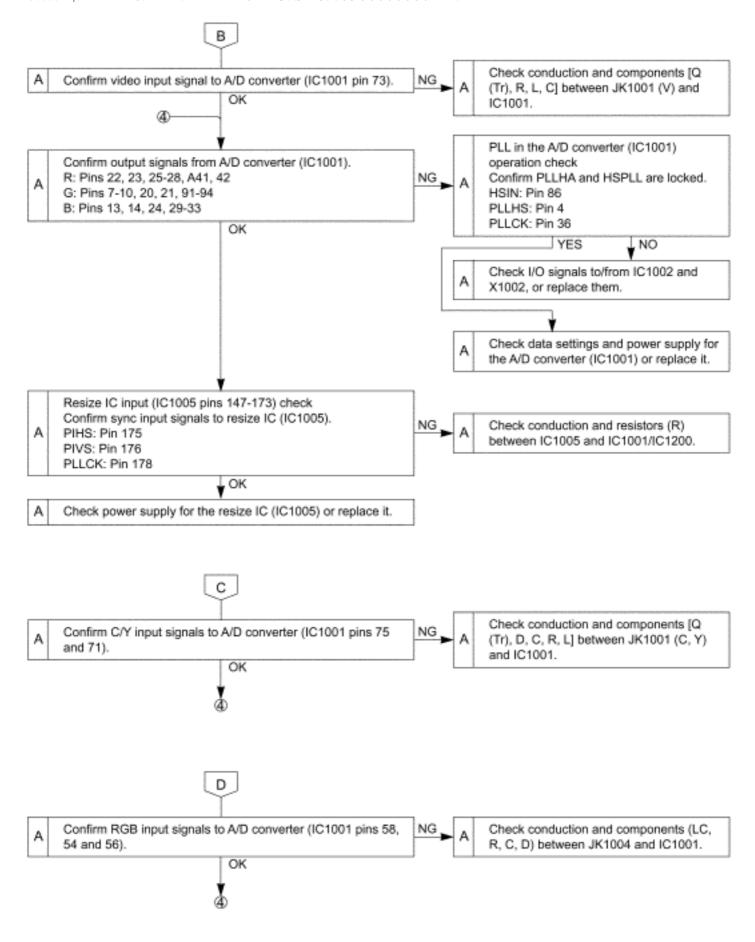

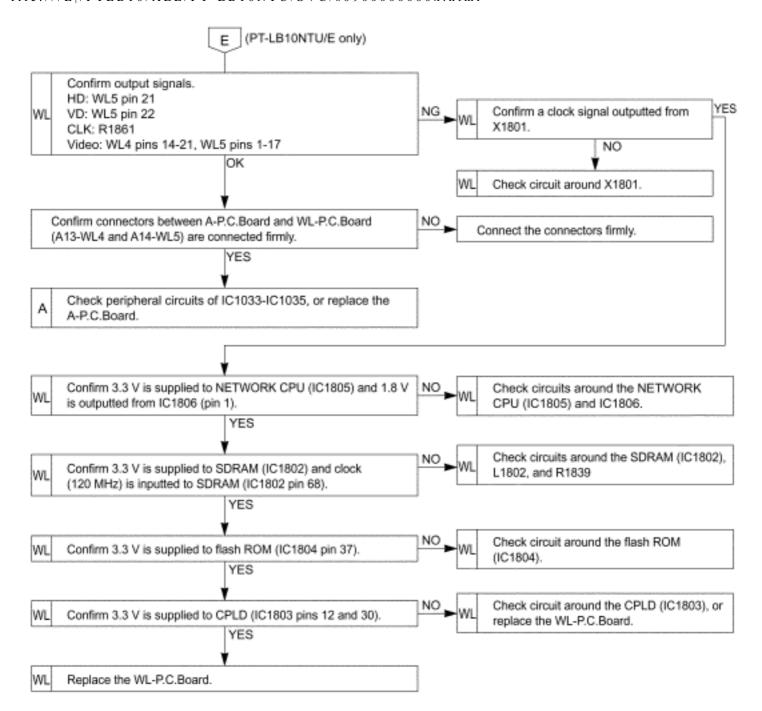

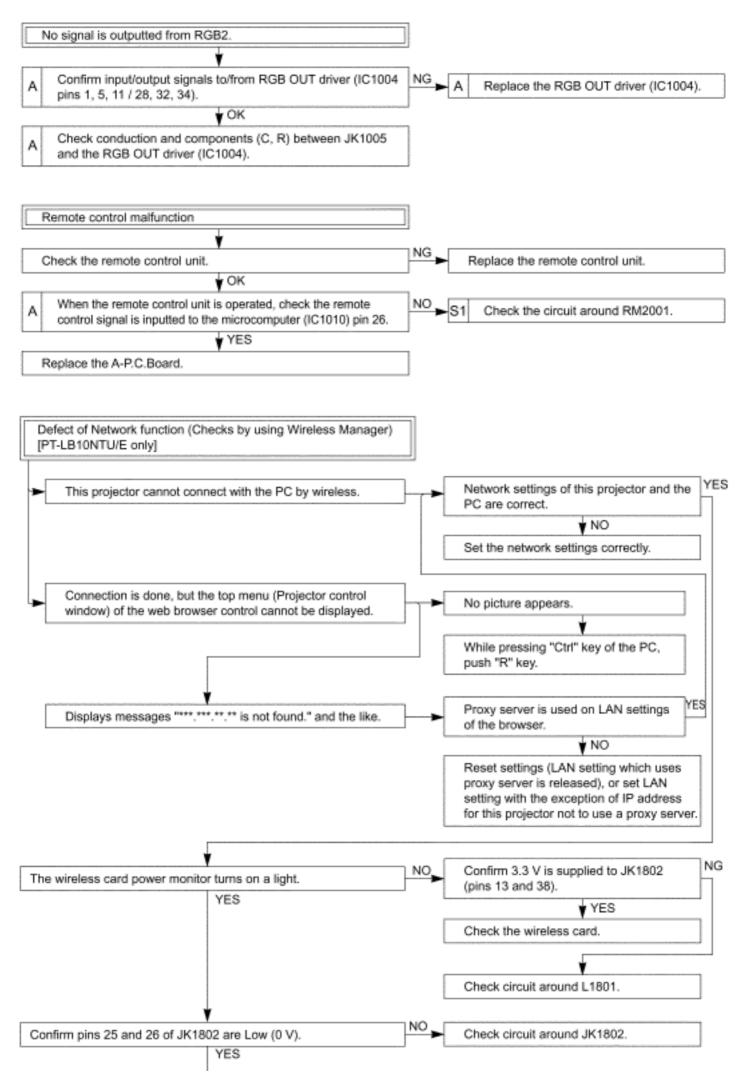

10 Interconnection Block Diagram

TOP PREVIOUS NEXT

10.1 Interconnection Block Diagram (1 / 2)

10.2 Interconnection Block Diagram (2 / 2)

10.1 Interconnection Block Diagram (1/2)

TOP PREVIOUS NEXT



10.2 Interconnection Block Diagram (2/2)

TOP PREVIOUS NEXT



11 Block Diagram

TOP PREVIOUS NEXT

11.1 Power Supply

11.2 Signal Processing (1/3)

11.3 Signal Processing (2 / 3)

11.4 Signal Processing (3 / 3)

11.1 Power Supply

TOP PREVIOUS NEXT



11.2 Signal Processing (1/3)

TOP PREVIOUS NEXT



11.3 Signal Processing (2/3)

TOP PREVIOUS NEXT



11.4 Signal Processing (3/3)

TOP PREVIOUS NEXT



12 Schematic Diagram

TOP PREVIOUS NEXT

Schematic Diagram for Model PT-LB10NTU/LB10U/LB10VU/LB10SU

IMPORTANT SAFETY NOTICE

THE SHADED AREA ON THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM FIRE AND ELECTRICAL SHOCK HAZARDS.

WHEN SERVICING, IT IS ESSENTIAL THAT ONLY MANUFACTURER'S SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SHADED AREAS OF THE SCHEMATIC.

Schematic Diagram for Model PT-LB10NTE/LB10E/LB10VE/LB10SE

Important Safety Notice

Components identified by the international symbol Ahave special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified ones.

Notes:

1. Resistor

All the resistors are carbon 1/4W resistors, unless marked as follows: The unit of resistance is an OHM $[\Omega]$ (K=1 000 M=1 000 000).

O : Nonflammable

Metal Oxide

△ : Solid

O : Metal Film

: Wire Wound

⊗ : Fuse

2. Capacitor

: Temperature Compensation

*# : Electrolytic

^{NP}∰ : Bipolar

m : Metalized Polyester

1 : Dipped Tantalum

: Polypropylene

(Z) : Z-Type

3. Coil

The unit of inductance is a H, unless otherwise noted

4. Test Point

: Test Point

5. Voltage Measurement

The voltage is measured by an electronic voltmeter receiving the colorbar signal when all the customer's controls are set to the standard condition.

6. Color code for the links between diagrams and circuit boards

From/To		To/From	Color code
Block diagram	←→	Schematic diagram	Magenta
Schematic diagram	←→	Schematic diagram	Green
Schematic diagram	←→	Circuit boards	Yellow
Schematic diagram	\leftarrow	Waveforms	Cyan (Light blue)

7. HOT and COLD indications

The power circuit board contains a circuit area using a separate power supply to isolate the ground connection. The circuit is defined by HOT and COLD indications in the schematic diagram. Take the precautions below:

file:///E|/PTLB10/ALL/PT-LB10NTU/SVC/s1200000000s.html (1 z 2) [2006-01-16 14:02:38]

8. This schematic diagram is the latest at the time of printing and the subject to change without notice.

Precautions:

- 1. NEVER touch the HOT part or the HOT and COLD parts at the same time, or you may get an electric shock.
- 2. NEVER short-circuit the HOT and COLD circuits, or the fuse may blow and the parts may break.
- 3. NEVER connect an instrument such oscilloscope to the HOT and COLD circuit simultaneously, or the fuse may blow. Connect the ground of instruments to the ground of the circuit being measured.
- 4. MAKE SURE to unplug the power cord from the power outlet before removing the chassis.

12.1 A-P.C.Board (1 / 4)

12.2 A-P.C.Board (2 / 4)

12.3 A-P.C.Board (3 / 4)

12.4 A-P.C.Board (4 / 4)

12.5 WL-P.C.Board (1 / 2)

12.6 WL-P.C.Board (2 / 2)

12.7 B-Module (1 / 2)

12.8 B-Module (2 / 2)

12.9 K-P.C.Board

12.10 S1-P.C.Board, S2-P.C.Board

12.1 A-P.C.Board (1/4)

TOP PREVIOUS NEXT



12.2 A-P.C.Board (2/4)

TOP PREVIOUS NEXT



12.3 A-P.C.Board (3/4)

TOP PREVIOUS NEXT



12.4 A-P.C.Board (4/4)

TOP PREVIOUS NEXT



12.5 WL-P.C.Board (1/2)

TOP PREVIOUS NEXT



12.6 WL-P.C.Board (2/2)

TOP PREVIOUS NEXT



12.7 B-Module (1/2)

TOP PREVIOUS NEXT



12.8 B-Module (2/2)

TOP PREVIOUS NEXT



12.9 K-P.C.Board

TOP PREVIOUS NEXT



12.10 S1-P.C.Board, S2-P.C.Board

TOP PREVIOUS NEXT



13 Circuit Boards

TOP PREVIOUS NEXT

13.1 A-P.C.Board (Foil Side) / WL-P.C.Board (Foil Side / Component Side)

13.2 A-P.C.Board (Component) / S1-P.C.Board (Foil Side / Component Side)

13.1 A-P.C.Board (Foil Side)/ WL-P.C.Board (Foil Side/Component Side)

TOP PREVIOUS NEXT




13.2 A-P.C.Board (Component)/ S1-P.C.Board (Foil Side/Component Side)


TOP PREVIOUS NEXT




14 Terminal guide of ICs and transistors

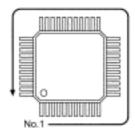

C1AB00001774 48 Pin C1AB00001673 48 Pin C1AB00001910 100 Pin TVRN203 48 Pin

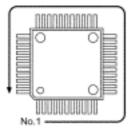


C1AB00001913 208 Pin C1AB00001721 208 Pin

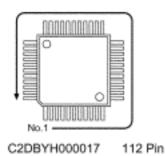


^	
CO TORRESSON	The state of the s

C2GBC0000199







24 Pin
28 Pin
28 Pin
20 Pin
86 Pin
20 Pin
36 Pin
20 Pin
20 Pin



C3ABQJ000023 86 Pin



M52036SP 20 Pin



C3BBFC000290 28 Pin





C0JBAA000244 14 Pin C3EBCC000020 8 Pin C0 JBA7002128 8 Pin



C1BB00000840 8 Pin C3EBJC000038 8 Pin



C1GB00000062 8 Pin



C0CBCAC0096	5 Pin
C0JBAE000239	5 Pin
C0JBAZ001870	5 Pin
C0JBAZ002115	5 Pin



C0DBZJD00003 5 Pin C0DBZHD00005 5 Pin



C0DBEZE00002 5 Pin C0DBEKG00004 5 Pin



C0DBZFF00004 6 Pin C0DBZFF00003 6 Pin C0DBZGF00002 6 Pin



2SB709A 2SD601AR 2SB710A

 $file: ///E\,|\,/\,P\,T\,L\,B\,1\,0\,/\,A\,L\,L\,/\,P\,T\,-\,L\,B\,1\,0\,N\,T\,U\,/\,S\,V\,C\,/\,s\,1\,4\,0\,0\,0\,0\,0\,0\,0\,x\,.\,h\,t\,m\,l$

TVRN126

48 Pin COJBAA00

C0JBAA000244 14 Pin C3EBCC000020 8 Pin C0JBAZ002128 8 Pin 2SD601AR 2SB710A

15 Exploded Views

TOP PREVIOUS NEXT







16 Replacement Parts List

TOP PREVIOUS NEXT

Important Safety Notice

Components identified by the International symbol \triangle have special characteristics important for safety. When replacing any of these components, use only the manufacturer's specified parts.

Abbreviation of part name and description

Resistor

Example:

ERD25TJ104 C 100KOHM, J, 1/4W

TYPE ALLOWANCE

TYPE	ALLOWANCE
C : Carbon	F:-1%
F : Fuse	G: -2%
M : Metal Oxide	J:-5%
Metal Film	K: -10%
S : Solid	M: -20%
W: Wire Wound	

Capacitor Example:

ECKF1H103ZF C 0.01PF, Z, 50V

TYPE ALLOWANCE
TYPE ALLOWANCE

TYPE	ALLOWANCE
TYPE C : Ceramic E : Electrolytic P : Polyecter PP : Polypropylene S : Polystyrol T : Tantalum	ALLOWANCE C :=0.25 pF D :=0.5 pF F := 1 pF J := 5 % K :=10 % L :=15 % M :=20 %
	P:+100%,-0% Z:+80%,-20%

Notes:

Printed circuit board assembly with mark (RTL) is no longer available after production discontinuation of the complete set.

Ref. No.	Part No.	Part Name & Description	Remarks
		[MECHANICAL PAR'	rs]
	D4CDH5030001	THERMISTER	
	J0KG00000036	CORE	<u>A</u>
2	K1HA15DA0002	CABLE	
3-1	K2CG3DR00005	POWER CORD	A LB10NTU, LB10U, LB10VU, LB10SU
3-2	K2CM3DR00002	POWER CORD (EUROPE)	LB10NTE, LB10E, LB10VE, LB10SE
3-3	K2CT3DR00005	POWER CORD (U.K)	LB10NTE, LB10E, LB10VE, LB10SE
<u>4</u>	L0AA04C00004	SPEAKER	
<u>5</u>	L5BDAXQ00143	LIQUID CRYSTAL DISPLAY(R)	LB10NTU/E, LB10U/E
	L5BDAXQ00131	LIQUID CRYSTAL DISPLAY(R)	LB10VU/E
	L5BDAXN00073	LIQUID CRYSTAL DISPLAY(R)	LB10SU/E

<u>6</u>	L5BDAXQ00144	LIQUID CRYSTAL DISPLAY(G)	LB10NTU/E, LB10U/E
	L5BDAXQ00132	LIQUID CRYSTAL DISPLAY(G)	LB10VU/E
	L5BDAXN00074	LIQUID CRYSTAL DISPLAY(G)	LB10SU/E
7	L5BDAXQ00145	LIQUID CRYSTAL DISPLAY(B)	LB10NTU/E, LB10U/E
	L5BDAXQ00133	LIQUID CRYSTAL DISPLAY(B)	LB10VU/E
	L5BDAXN00075	LIQUID CRYSTAL DISPLAY(B)	LB10SU/E
8	L6FAJACH0005	POWER FAN	\triangle
9	L6FAKDEH0005	VENTILATION FAN	⚠
10	L6FCHC9H0002	PBS FAN	<u>A</u>
<u>11</u>	L6FCKEAH0002	SIROCCO FAN	<u>A</u>
12	L6FCKEBH0002	SIROCCO FAN	<u>A</u>
13	N5HBD0000028	LAN CARD	$\Delta_{ m LB10NTU}$
	N5HBD0000029	LAN CARD	$\Delta_{ m LB10NTE}$
14	TBLB0046	ADJUST LEG	
<u>15</u>	TBLG3063	RUBBER LEG (REAR)	
<u>16</u>	TBMA150	PANASONIC BADGE	
	TBMF414	MODEL NAME PLATE	LB10NTU
	TBMF415	MODEL NAME PLATE	LB10NTE
	TBMF417	MODEL NAME PLATE	LB10U
	TBMF418	MODEL NAME PLATE	LB10E
	TBMF420	MODEL NAME PLATE	LB10VU
	TBMF421	MODEL NAME PLATE	LB10VE
	TBMF570	MODEL NAME PLATE	LB10SU
	TBMF571	MODEL NAME PLATE	LB10SE
	TBMF423	MODEL NO. LABEL	LB10NTU
	TBMF424	MODEL NO. LABEL	LB10NTE
	TBMF426	MODEL NO. LABEL	LB10U
	TBMF427	MODEL NO. LABEL	LB10E
	TBMF429	MODEL NO. LABEL	LB10VU
	TBMF430	MODEL NO. LABEL	LB10VE
	TBMF573	MODEL NO. LABEL	LB10SU
	TBMF574	MODEL NO. LABEL	LB10SE
7	1		

<u>18</u>	TBXA38301-1	CURSOR BUTTON	
<u>19</u>	TEEC5112	DUCT 1	
<u>20</u>	TEEC5148	DUCT 2	
<u>21</u>	TEEC5149	DUCT 3	
	THEA124N	SCREW	LB10NTU/E
<u>22</u>	THEC035N	SCREW	
<u>23</u>	TKGF0088-1	PBS	
<u>24</u>	TKGF0092-1	LENS	LB10NTU/E, LB10U/E, LB10SU/E
	TKGF0093	LENS	LB10VU/E
<u>25</u>	TKGP5226	POLARIZING PLATE/OUT(R)	
<u>26</u>	TKGP5227	POLARIZING PLATE/OUT(G)	
<u>27</u>	TKGP5228-1	POLARIZING PLATE/OUT(B)	
<u>28</u>	TKGP5229	POLARIZING PLATE/IN(R)	
<u>29</u>	TKGP5230	POLARIZING PLATE/IN(G)	
<u>30</u>	TKGP5231	POLARIZING PLATE/IN(B)	
31	TKKC5142	REMOTE RECEIVER PLATE(F)	
<u>32</u>	TKKC5167	LED PLATE	
<u>33</u>	TKKL5297	LENS CAP	
	TKLA0701	6 ANGLE WRENCH	LB10NTU/E
34	TKNE051	FILTER	
35	TKPA75202	BUTTON DECORATION BOARD	LB10NTU/E, LB10U/E, LB10SU/E
	TKPA75201	BUTTON DECORATION BOARD	LB10VU/E
<u>36</u>	TKPA86901	TERMINAL COVER	
<u>37</u>	TKXA17301	CARD LOCK	LB10NTU/E
38	TKZF5034	TERMINAL METAL	
<u>39</u>	TKZJ5053	VENTILATION FAN METAL	
	TKZJ5054	FAN GUARD METAL	
	TMKG389	FAN SPONGE	
	TMKG396-1	SPEAKER SPACER	
	TMKG422	SPACER	
41	TMKX100	WASHER	
	TMKX511	SHELTER SHEET	
42	TMKX661	POWER INSULATION SHEET	
43	TMKX662	BALLAST INSULATION SHEET	

44	TMKX663	VENTILATION FAN GUARD	
45	TMKX664	INSULATION SHEET (K-PCB)	
	TMKX665	GUIDE PLATE	
<u>46</u>	TMKX689	POWER FAN COVER	
<u>47</u>	TMKX703	SHEET	
48	TMXC020	TEMP FUSE METAL	
<u>49</u>	TMXE034-1	HOLDER	
<u>50</u>	TMZK5021	SPEAKER BOX	
<u>51</u>	TMZX5034	FILTER COVER	
<u>52</u>	TNQE239	REMOTE CONTROLLER	
<u>53</u>	TPCB57402	CARTON	LB10NTU
	TPCB57403	CARTON	LB10NTE
	TPCB57405	CARTON	LB10U
	TPCB57406	CARTON	LB10E
	TPCB57408	CARTON	LB10VU
	TPCB57409	CARTON	LB10VE
	TPCB57412	CARTON	LB10SU
	TPCB57413	CARTON	LB10SE
<u>54</u>	TPDF1041	CUSHION 1	
<u>55</u>	TPDF1042	ACCESSORY CARTON	
<u>56</u>	TPDF1066	CUSHION 2	
<u>57</u>	TPEH124-1	SET COVER	
<u>58</u>	TPEP013	CARRING CASE	
	TQB817002-1	SAFETY SHEET	LB10NTU, LB10U, LB10VU, LB10SU
<u>60</u>	TQBH0149	INSTRUCTION BOOK (SUB)	∆ LB10NTU/E
<u>61</u>	TQBH7017	SHEET (PASSWORD)	
<u>59</u>	TQBJ0141	INSTRUCTION BOOK	⚠ LB10NTU, LB10U, LB10VU, LB10SU
	TQBJ0142	INSTRUCTION BOOK	LB10NTE, LB10E, LB10VE, LB10SE
	TQD1712010	LABEL	
	TQDJ18004	GUARANTEE CARD (CANADA)	LB10NTU, LB10U, LB10VU, LB10SU
	TQDJ18015-6	GUARANTEE CARD (USA)	LB10NTU, LB10U, LB10VU, LB10SU
	TQDJ19009	SIMPLE SHEET	LB10NTU
	TQDJ19010	SIMPLE SHEET (U.K,SPAIN)	LB10NTE

	TQDJ19011	SIMPLE SHEET (FRANCE,ITALY)	LB10NTE
	TQDJ19012	SIMPLE SHEET (GERMANY,KOREA)	LB10NTE
	TQF86202	LABEL	
	TSKA159	CORE	J0KG00000011
	TSXL405	FLEX CABLE	Δ
	TUCB5027	ALUMINUM SHEET	
<u>62</u>	TUCX5161	EARTH METAL 1	
<u>63</u>	TUCX5162	EARTH METAL 2	
<u>64</u>	TUCX5163	EARTH METAL(A-PCB)	
<u>65</u>	TUCX5164	EARTH METAL(WL-PCB)	
<u>66</u>	TUWC051	INTERLOCK METAL	
<u>67</u>	TUWC052	METAL	
<u>68</u>	TXFEE01VJW5	LAMP HOUSE	
<u>69</u>	TXFKL01VJW5	LAMP COVER ASSY	
	TXJ/B1VJW5	LEAD WIRE (B1-P2)	Δ
	TXJ/L2VJW5	LAMP CABLE	
	TXJ/P1VJW5	LEAD WIRE (K1-P1)	Δ
	TXJ/P3VJW5	LEAD WIRE (P3-A6)	<u>A</u>
	TXJ/Q3VJW5	LEAD WIRE (Q3-A4)	⚠
	XSB3+8FN	SCREW	
<u>70</u>	XTBT969Z	SCREW	
	XTN3+6G	SCREW	
	XTW3+8P	TAPPING SCREW	
	XYN2+F6	SCREW	
	XYN2+J10	SCREW	
	XYN3+F10	SCREW	
	XYN3+F14	SCREW	
	XYN3+F30FZ	SCREW	
	XYN3+F8	SCREW	LB10NTU/E
	XYN3+J8	SCREW	
	XYN4+E8	SCREW	
<u>71</u>	XZBT6532	POLY BAG	LB10NTU/E, LB10U, LB10VU
<u>72</u>	TXFKF99PVMZ	UPPER COVER	LB10NTU/E
	TXFKF99PVNZ	UPPER COVER	LB10U/E, LB10SU/E
	TXFKF99PVPZ	UPPER COVER	LB10VU/E

<u>73</u>	TXFKF98PVMZ	BOTTOM COVER	LB10NTU
	TXFKF98PVQZ	BOTTOM COVER	LB10NTE
	TXFKF98PVNZ	BOTTOM COVER	LB10U
	TXFKF99PVRZ	BOTTOM COVER	LB10E
	TXFKF98PVPZ	BOTTOM COVER	LB10VU
	TXFKF99PVSZ	BOTTOM COVER	LB10VE
	TXFKF99PXAZ	BOTTOM COVER	LB10SU
	TXFKF99PXBZ	BOTTOM COVER	LB10SE
<u>74</u>	TXFEC98VJW5	ANALYSIS BLOCK	
<u>75</u>	TXFEC99VJW5	OPTICAL BLOCK	LB10NTU/E, LB10U/E
	TXFEC99VJW7	OPTICAL BLOCK	LB10VU/E
	TXFEC99PXAZ	OPTICAL BLOCK	LB10SU/E
<u>76</u>	TXFQB99VJW5	CD-ROM	∆ _{LB10NTU/E}
		[INTEGRATED CIRCUI	T]
IC1001	C1AB00001988	I.C	
IC1002	C0JBAA000233	I.C	
IC1003	M52036SP	I.C	C1AA00000392
IC1004	AN5870SB	I.C	
IC1005	C1AB00001913	I.C	
IC1006	C3ABPJ000035	I.C	
IC1009	C0ZBZ0000890	I.C	
IC1010	C2DBYH000017	I.C	
IC1011	TVRN126	I.C	LB10NTU/E, LB10U/E, LB10VU/E
	TVRN266	I.C	LB10SU/E
IC1012	74LVC574APWL	I.C	C0JBAF000379
IC1013	C0JBAE000239	I.C	
IC1015	74LVC574APWL	I.C	C0JBAF000379
IC1016	C0EBE0000336	I.C	
IC1017	C3EBJC000038	I.C	
IC1018	C1GB00000062	I.C	
IC1019	C0CBCAC00096	I.C	
IC1020	C0JBAA000345	I.C	
IC1021	M62398FP	I.C	C0FBBD000087
		ł	
IC1023	C0JBAE000239	I.C	
IC1023 IC1024	C0JBAE000239 24LC21T-I/SN	I.C I.C	C3EBCC000020

IC1028 COE IC1029 COE IC1030 COE IC1031 COE IC1032 COE IC1033 COJ IC1034 COJ IC1035 COJ IC1037 COE IC1038 COJ IC1039 COJ IC1040 COE IC1041 COE IC1042 COE IC1043 COE IC1050 COE IC1051 C1A IC1052 C1A IC1053 C1A IC1055 C1A IC1059 C1A IC1068 COJ	BBFC000290 DBZJD00003 DBEZE00002 DBEZE00002 DBEZE00002 DBEZE00002 DBZD001633 DBZF00003 DBZFF00003 DBZFF00004 DBZFD0004 DBZHD00005 DBZGF00002 DBZFD00018 DBZFD00018 DBEKG00004 AB00001774	I.C	LB10NTU/E LB10NTU/E LB10NTU/E LB10NTU/E
IC1029 COI IC1030 COI IC1031 COI IC1032 COI IC1033 COJ IC1034 COJ IC1035 COJ IC1037 COI IC1038 COJ IC1039 COJ IC1040 COI IC1041 COI IC1042 COI IC1043 COI IC1050 COI IC1051 C1A IC1052 C1A IC1053 C1A IC1055 C1A IC1056 C1A IC1057 C1A IC1058 C1A IC1068 C0J	DBEZE00002 DBEZE00002 DBEZE00002 DBEZE00002 DBEZE00002 DBAZ001633 DBAZ001633 DBZFF00003 DBAZ001870 DBAZ002115 DBZFF00004 DBZHD00005 DBZGF00002 DBZFD00018 DBEKG00004	I.C	LB10NTU/E
IC1030 COL IC1031 COL IC1032 COL IC1033 COJ IC1034 COJ IC1035 COJ IC1037 COL IC1038 COJ IC1039 COJ IC1040 COL IC1041 COL IC1042 COL IC1043 COL IC1050 COL IC1051 C1A IC1052 C1A IC1053 C1A IC1055 C1A IC1058 C1A IC1068 COJ	DBEZE00002 DBEZE00002 DBEZE00002 DBEZE00002 DBAZ001633 DBAZ001633 DBZFF00003 DBAZ001870 DBAZ002115 DBZFF00004 DBZHD00005 DBZGF00002 DBZFD00018 DBEKG00004	I.C	LB10NTU/E
IC1031 COI IC1032 COI IC1033 COJ IC1034 COJ IC1035 COJ IC1037 COI IC1038 COJ IC1039 COJ IC1040 COI IC1041 COI IC1042 COI IC1043 COI IC1050 COI IC1051 C1A IC1052 C1A IC1053 C1A IC1058 C1A IC1059 C1A IC1068 COJ	DBEZE00002 DBEZE00002 DBEZE00002 DBAZ001633 DBAZ001633 DBZFF00003 DBAZ001870 DBAZ002115 DBZFF00004 DBZHD00005 DBZGF00002 DBZFD00018 DBEKG00004	I.C	LB10NTU/E
IC1032 COI IC1033 COJ IC1034 COJ IC1035 COJ IC1037 COI IC1038 COJ IC1039 COJ IC1040 COI IC1041 COI IC1042 COI IC1043 COI IC1050 COI IC1051 C1A IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A	DBEZE00002 DBAZ001633 DBAZ001633 DBZFF00003 DBAZ001870 DBAZ002115 DBZFF00004 DBZHD00005 DBZGF00002 DBZFD00018 DBEKG00004	I.C	LB10NTU/E
IC1033 C0J IC1034 C0J IC1035 C0J IC1037 C0I IC1038 C0J IC1039 C0J IC1040 C0I IC1041 C0I IC1042 C0I IC1043 C0I IC1050 C0I IC1051 C1A IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A	BAZ001633 BAZ001633 BAZ001633 BBAZ001633 BBAZ001870 BBAZ002115 DBZFF00004 DBZHD00005 DBZGF00002 DBZFD00018 DBEKG00004	I.C	LB10NTU/E
IC1034 C0J IC1035 C0J IC1037 C0E IC1038 C0J IC1039 C0J IC1040 C0E IC1041 C0E IC1042 C0E IC1043 C0E IC1050 C0E IC1051 C1A IC1052 C1A IC1053 C1A IC1056 C1A IC1057 C1A IC1059 C1A IC1068 C0J	BAZ001633 BAZ001633 DBZFF00003 BAZ001870 BAZ002115 DBZFF00004 DBZHD00005 DBZGF00002 DBZFD00018 DBEKG00004	I.C	LB10NTU/E
IC1035 C0J IC1037 C0E IC1038 C0J IC1039 C0J IC1040 C0E IC1041 C0E IC1042 C0E IC1043 C0E IC1050 C0E IC1051 C1A IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A	DBZFF00003 DBZFF00003 DBZFF00004 DBZFF00004 DBZFF00002 DBZFD00018 DBEKG00004	I.C I.C I.C I.C I.C I.C I.C I.C I.C	
IC1037 COE IC1038 COJ IC1039 COJ IC1040 COE IC1041 COE IC1042 COE IC1043 COE IC1050 COE IC1051 C1A IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A	DBZFF00003 DBAZ001870 DBAZ002115 DBZFF00004 DBZHD00005 DBZGF00002 DBZFD00018 DBEKG00004	I.C I.C I.C I.C I.C I.C I.C I.C	LB10NTU/E
IC1038 C0J IC1039 C0J IC1040 C0I IC1041 C0I IC1042 C0I IC1043 C0I IC1050 C0I IC1051 C1A IC1052 C1A IC1057 C1A IC1058 C1A IC1059 C1A	DBZFF00004 DBZFF00005 DBZFF000018 DBZFD0004 DBZFD00018	I.C I.C I.C I.C I.C I.C I.C	
IC1039 C0J IC1040 C0E IC1041 C0E IC1042 C0E IC1043 C0E IC1050 C0E IC1051 C1A IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A	DBZFF00004 DBZHD00005 DBZGF00002 DBZFD00018 DBEKG00004	I.C I.C I.C I.C I.C	
IC1040 COE IC1041 COE IC1042 COE IC1043 COE IC1050 COE IC1051 C1A IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A	DBZFF00004 DBZHD00005 DBZGF00002 DBZFD00018 DBEKG00004	I.C I.C I.C I.C	
IC1041 COL IC1042 COL IC1043 COL IC1050 COL IC1051 C1A IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A	DBZHD00005 DBZGF00002 DBZFD00018 DBEKG00004	I.C I.C I.C	
IC1042 COE IC1043 COE IC1050 COE IC1051 C1A IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A	DBZGF00002 DBZFD00018 DBEKG00004	I.C I.C I.C	
IC1043 C0E IC1050 C0E IC1051 C1A IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A	DBZFD00018 DBEKG00004	I.C I.C	
IC1050 C0E IC1051 C1A IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A IC1068 C0J	DBEKG00004	I.C	
IC1051 C1A IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A IC1068 C0J		<u> </u>	
IC1052 C1A IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A IC1068 C0J	AB00001774	I.C	
IC1053 C1A IC1057 C1A IC1058 C1A IC1059 C1A IC1068 C0J			
IC1057 C1A IC1058 C1A IC1059 C1A IC1068 C0J	AB00001774	I.C	
IC1058 C1A IC1059 C1A IC1068 C0J	AB00001774	I.C	
IC1059 C1A IC1068 C0J	AB00001673	I.C	
IC1068 C0J	AB00001673	I.C	
	AB00001673	I.C	
IC1070 C10	BAZ000855	I.C	
1010/0 010	CB00001014	I.C	
IC1072 AN	78L05M	I.C	
IC1083 C0J	BAZ002128	I.C	
IC1200 C1A	AB00001721	I.C	
IC1802 C3A	ABQJ000023	I.C	LB10NTU/E
IC1803 TVI	RN203	I.C	LB10NTU/E
IC1804 TVI	RN150	I.C	LB10NTU/E
IC1805 C2C	GBC0000199	I.C	LB10NTU/E
IC1806 C0I	OBFFD00003	I.C	LB10NTU/E
IC9602 C0Z	ZAZ0000077	I.C	
IC9603 C0Z	ZAZ0000077	I.C	
]		TRANSISTORS]]

Q1006	2SD1819A0L	TRANSISTOR	
Q1007	2SB1218A0L	TRANSISTOR	
Q1008	2SD1819A0L	TRANSISTOR	
Q1009	2SD1819A0L	TRANSISTOR	
Q1011	2SB1218A0L	TRANSISTOR	
Q1012	2SD1819A0L	TRANSISTOR	
Q1013	2SD1819A0L	TRANSISTOR	
Q1014	2SB1218A0L	TRANSISTOR	
Q1017	2SD1819A0L	TRANSISTOR	
Q1019	2SD1819A0L	TRANSISTOR	
Q1020	2SD1819A0L	TRANSISTOR	
Q1021	2SD1819A0L	TRANSISTOR	
Q1022	B1DHDD000020	TRANSISTOR	
Q1027	2SD1819A0L	TRANSISTOR	
Q1032	2SD1819A0L	TRANSISTOR	
Q1033	2SD1819A0L	TRANSISTOR	
Q1034	2SD1819A0L	TRANSISTOR	
Q1035	2SD1819A0L	TRANSISTOR	
Q1036	2SB1218A0L	TRANSISTOR	
Q1038	B1CBHD000001	TRANSISTOR	
Q1039	B1CBHD000001	TRANSISTOR	
Q1040	2SD1819A0L	TRANSISTOR	
Q1041	2SD1819A0L	TRANSISTOR	
Q1042	2SD1819A0L	TRANSISTOR	
Q1043	2SD1819A0L	TRANSISTOR	
Q2001	2SD601A-R	TRANSISTOR	2SD0601AR
Q2002	2SD601A-R	TRANSISTOR	2SD0601AR
Q2003	2SD601A-R	TRANSISTOR	2SD0601AR
Q2004	2SB709A	TRANSISTOR	2SB0709A
Q2005	2SB709A	TRANSISTOR	2SB0709A
Q9603	B1DEGQ000017	TRANSISTOR	
Q9604	2SB710A	TRANSISTOR	2SB0710A
Q9605	2SB710A	TRANSISTOR	2SB0710A
Q9606	B1DEGM000022	TRANSISTOR	
Q9607	B1DEGM000022	TRANSISTOR	
Q9608	2SB710A	TRANSISTOR	2SB0710A
Q9609	2SB710A	TRANSISTOR	2SB0710A
Q9610	B1DEGM000022	TRANSISTOR	
Q9611	B1DEGM000022	TRANSISTOR	

Q9614	B1DEGQ000017	TRANSISTOR	
		[DIODES]	<u> </u>
D1001	MAZ80560ML	DIODE	
D1002	MAZ81500ML	DIODE	
D1003	MAZ81500ML	DIODE	
D1004	MAZ81500ML	DIODE	
D1005	MAZ81500ML	DIODE	
D1009	MAZ80560ML	DIODE	
D1010	MAZ80560ML	DIODE	
D1011	MAZ80560ML	DIODE	
D1012	MAZ80560ML	DIODE	
D1016	MAZ80560ML	DIODE	
D1017	MAZ80560ML	DIODE	
D1018	MAZ80560ML	DIODE	
D1019	MA157A	DIODE	MA3X157A
D1021	MAZ80560ML	DIODE	
D1022	MA157A	DIODE	MA3X157A
D1023	MA157A	DIODE	MA3X157A
D1024	MA157A	DIODE	MA3X157A
D1026	MA157A	DIODE	MA3X157A
D1028	MA157A	DIODE	MA3X157A
D1034	MA157A	DIODE	MA3X157A
D1035	MA157A	DIODE	MA3X157A
D1036	B0JCPD000010	DIODE	
D1037	B0JCPD000010	DIODE	
D1038	MA3X152E0L	DIODE	
D1039	LNJ208R8ARA	LED	
D1041	MA2S11100L	DIODE	
D1042	MAZY12000L	DIODE	
D1043	B0HCMM000001	DIODE	
D1065	D4CC1103A037	THERMISTOR	
D2001	B3AAB0000168	DIODE	
D2002	B3AAB0000168	DIODE	
D2003	B3ABB0000181	DIODE	
D2004	LNJ107W5ARA1	LED	
D2005	MA157A	DIODE	MA3X157A

D9101	ERZV10D751	VARISTOR	Δ
D9601	B0HASR000006	DIODE	
D9604	MA158	DIODE	MA3X158
D9605	MA2Z72000L	DIODE	
D9606	MA158	DIODE	MA3X158
D9607	MA2Z72000L	DIODE	
D9608	MA158	DIODE	MA3X158
D9609	MA2Z72000L	DIODE	
D9611	MA158	DIODE	MA3X158
D9612	MA2Z72000L	DIODE	
D9616	D1FL40F4063	DIODE	B0ECHP000001
D9617	MA2Z72000L	DIODE	
D9618	MA2Z72000L	DIODE	
D9619	MA2Z72000L	DIODE	
D9629	MA2Z72000L	DIODE	
D9621	MA2Z72000L	DIODE	
D9622	D1FL40F4063	DIODE	B0ECHP000001
D9623	D1FL40F4063	DIODE	B0ECHP000001
D9624	MA2Z72000L	DIODE	
D9625	MA2Z72000L	DIODE	
D9626	MA2Z72000L	DIODE	
D9627	MA2Z72000L	DIODE	
D9628	MA2Z72000L	DIODE	
D9629	D1FL40F4063	DIODE	B0ECHP000001
		[COILS]	
L1001	J0JCC0000168	FILTER	
L1002	J0JCC0000168	FILTER	
L1003	J0JCC0000168	FILTER	
L1004	J0JCC0000168	FILTER	
L1005	J0JJC0000022	EMI FILTER	
L1006	ELJFA150JF	COIL	,
L1007	ELJFA150JF	COIL	
L1008	J0JJC0000022	EMI FILTER	
L1009	J0JCC0000168	FILTER	,
L1010	J0JJC0000022	EMI FILTER	
L1011	J0JJC0000022	EMI FILTER	

L1012	J0JJC0000022	EMI FILTER	
L1014	J0JCC0000168	FILTER	
L1015	J0JJC0000022	EMI FILTER	
L1016	J0JCC0000168	FILTER	
L1017	J0JJC0000022	EMI FILTER	
L1018	J0JJC0000022	EMI FILTER	
L1019	J0JJC0000022	EMI FILTER	
L1020	J0JJC0000022	EMI FILTER	
L1021	EZASCE101M	CAPACITOR ARRAY	LB10NTU/E
L1022	EZASCE101M	CAPACITOR ARRAY	LB10NTU/E
L1023	EZASCE101M	CAPACITOR ARRAY	LB10NTU/E
L1023	EZASCE101M EZASCE101M	CAPACITOR ARRAY	LB10NTU/E
L1024	EZASCE101M EZASCE101M	CAPACITOR ARRAY	LB10NTU/E
	EZASCE101M		LB10NTU/E
L1026		CAPACITOR ARRAY	LB10N1 U/E
L1027	J0JJC0000022	EMI FILTER	I DIONELLE
L1028	J0JJC0000022	EMI FILTER	LB10NTU/E
L1029	J0JJC0000022	EMI FILTER	LB10NTU/E
L1030	J0JJC0000022	EMI FILTER	LB10NTU/E
L1031	J0JJC0000022	EMI FILTER	
L1032	J0JJC0000022	EMI FILTER	
L1033	ELJFA470JF	COIL	
L1034	J0JJC0000022	EMI FILTER	
L1035	J0JCC0000238	FILTER	LB10NTU/E, LB10U/E, LB10VU/E
	J0JCC0000168	FILTER	LB10SU/E
L1036	ELJFA6R8JB	CHIP COIL	
L1037	ELJFA470JF	COIL	
L1038	J0JJC0000022	EMI FILTER	
L1039	J0JCC0000238	FILTER	LB10NTU/E, LB10U/E, LB10VU/E
	J0JCC0000168	FILTER	LB10SU/E
L1040	J0JJC0000022	EMI FILTER	
L1041	J0JJC0000022	EMI FILTER	
L1042	J0JJC0000022	EMI FILTER	
L1043	J0JJC0000022	EMI FILTER	
L1044	J0JJC0000022	EMI FILTER	
L1045	J0JCC0000238	FILTER	LB10NTU/E, LB10U/E, LB10VU/E
	J0JCC0000168	FILTER	LB10SU/E
L1046	J0JCC0000238	FILTER	LB10NTU/E, LB10U/E, LB10VU/E
	J0JCC0000168	FILTER	LB10SU/E
L1047	J0JJC0000022	EMI FILTER	

L1048	J0JJC0000022	EMI FILTER	
L1049	J0JJC0000022	EMI FILTER	
L1050	J0JJC0000022	EMI FILTER	
L1051	J0JJC0000022	EMI FILTER	
L1052	J0JJC0000022	EMI FILTER	
L1053	J0JJC0000022	EMI FILTER	
L1054	ERJ3GEY0R00	M 0 OHM, 1/16W	
L1055	J0JJC0000022	EMI FILTER	
L1056	ERJ3GEY0R00	M 0 OHM, 1/16W	
L1057	J0JJC0000022	EMI FILTER	
L1058	ERJ3GEY0R00	M 0 OHM, 1/16W	
L1059	J0JJC0000022	EMI FILTER	
L1060	J0JJC0000022	EMI FILTER	
L1061	J0JJC0000022	EMI FILTER	
L1062	J0JJC0000022	EMI FILTER	
L1063	J0JJC0000022	EMI FILTER	
L1064	J0JJC0000022	EMI FILTER	
L1066	J0JCC0000168	FILTER	
L1067	J0JCC0000168	FILTER	
L1068	J0JCC0000168	FILTER	
L1069	J0JCC0000168	FILTER	
L1070	J0JCC0000168	COIL	
L1071	J0JCC0000168	COIL	
L1072	J0JCC0000168	COIL	
L1073	J0JCC0000168	COIL	
L1074	J0JCC0000168	COIL	
L1075	J0JCC0000168	COIL	
L1077	J0JCC0000168	COIL	
L1082	J0JJC0000022	EMI FILTER	LB10NTU/E
L1801	EXCML16A270	COIL	LB10NTU/E
L1803	J0JBD0000007	COIL	LB10NTU/E
L1804	J0JBD0000007	COIL	LB10NTU/E
L1805	J0JBD0000007	COIL	LB10NTU/E
L1806	J0JBD0000007	COIL	LB10NTU/E
L1807	J0JBD0000007	COIL	LB10NTU/E
L1808	J0JBD0000007	COIL	LB10NTU/E
L1809	J0JBD0000007	COIL	LB10NTU/E
L1810	J0JBD0000007	COIL	LB10NTU/E
LC1801	EZASCE101M	CAPACITOR ARRAY	LB10NTU/E

LF9001	G0B592H00001	COIL	
LF9002	G0B592H00001	COIL	
LF9101	G0B592H00001	COIL	Δ
LF9102	G0B592H00001	COIL	A
		[RESISTORS]	
R1001	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R1016	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	
R1017	ERJ6GEYJ472	M 4.7KOHM,J,1/10W	
R1021	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R1022	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R1024	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	
R1025	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R1027	ERJ6ENF75R0	M 75 OHM, 1/10W	
R1029	ERJ6ENF75R0	M 75 OHM, 1/10W	
R1030	ERJ6ENF75R0	M 75 OHM, 1/10W	
R1039	ERJ2GEJ100	M 10 OHM, 0.063W	
R1041	ERJ6GEYJ750	M 75 OHM,J,1/10W	
R1042	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1044	ERJ3GEYJ223	M 22K OHM,J,1/16W	
R1045	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R1047	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	
R1048	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	
R1049	ERJ3GEYJ183	M 18K OHM,J,1/16W	
R1050	ERJ3GEYJ223	M 22K OHM,J,1/16W	
R1051	ERJ3GEYJ473	M 47K OHM,J,1/16W	
R1052	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1053	ERJ3GEYJ5R1	M 5.1 OHM,J,1/16W	
R1054	ERJ3GEYJ5R1	M 5.1 OHM,J,1/16W	
R1055	ERJ3GEYJ5R1	M 5.1 OHM,J,1/16W	
R1056	ERJ3GEYJ102	M 1K OHM,J,1/16W	
R1057	ERJ6GEYJ750	M 75 OHM,J,1/10W	
R1058	ERJ3GEYJ104	M 100KOHM,J,1/16W	
R1059	ERJ3GEYJ471	M 470 OHM,J,1/16W	
R1060	ERJ3GEYJ330	M 33 OHM,J,1/16W	
R1061	ERJ3GEYJ330	M 33 OHM,J,1/16W	
R1064	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	
	1 52.10.172	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	

R1065	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	
R1070	ERJ3GEYJ681	M 680 OHM,J,1/16W	
R1071	ERJ6GEYJ750	M 75 OHM,J,1/10W	
R1072	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1073	ERJ3GEYJ471	M 470 OHM,J,1/16W	
R1074	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1075	ERJ3GEYJ681	M 680 OHM,J,1/16W	
R1078	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1079	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1081	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1082	ERJ3GEYJ682	M 6.8KOHM,J,1/16W	
R1083	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	
R1084	ERJ3GEYJ122	M 1.2KOHM,J,1/16W	
R1085	ERJ3GEYJ332	M 3.3KOHM,J,1/16W	
R1087	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R1088	ERJ3GEYJ471	M 470 OHM,J,1/16W	
R1089	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	
R1090	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1091	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R1092	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1093	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1094	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R1095	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R1098	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1100	ERJ3GEYJ223	M 22K OHM,J,1/16W	
R1102	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1103	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R1104	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R1105	ERJ3GEYJ472	M 4.7KOHM,J,1/16W	
R1106	ERJ3GEYJ562	M 5.6KOHM,J,1/16W	
R1107	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1108	ERJ3GEYJ223	M 22K OHM,J,1/16W	
R1109	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1113	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1114	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1115	ERJ3GEYJ471	M 470 OHM,J,1/16W	
R1116	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1117	ERJ3GEYJ223	M 22K OHM,J,1/16W	
R1118	ERJ3GEYJ223	M 22K OHM,J,1/16W	

R1121	ERJ3GEYJ180	M 18 OHM,J,1/16W	
R1122	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R1123	ERJ3GEYJ180	M 18 OHM,J,1/16W	
R1128	ERJ3GEYJ180	M 18 OHM,J,1/16W	
R1142	ERJ6ENF2001	M 2KOHM, 1/10W	
R1143	ERJ8ENF1501	M 1.5KOHM, 1/8W	
R1144	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1145	ERJ6ENF39R0	M 39 OHM, 1/10W	
R1147	ERJ3GEYJ180	M 18 OHM,J,1/16W	
R1148	ERJ6ENF2700	M 270 OHM, 1/10W	
R1151	ERJ3EKF1002	M 10K OHM, 1/16W	
R1154	ERJ3EKF3302	M 33K OHM, 1/16W	
R1155	ERJ3GEYJ180	M 18 OHM,J,1/16W	
R1156	ERJ3GEYJ180	M 18 OHM,J,1/16W	
R1163	ERJ3GEYJ391	M 390 OHM,J,1/16W	D0GB391JA002
R1164	ERJ3EKF1371	M 1.37KOHM,0.063W	
R1165	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1166	ERJ3GEYJ102	M 1K OHM,J,1/16W	
R1167	ERJ6ENF2001	M 2KOHM, 1/10W	
R1168	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1169	ERJ2GEJ220	M 22 OHM, 0.063W	
R1170	ERJ8ENF1501	M 1.5KOHM, 1/8W	
R1171	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1172	ERJ6ENF39R0	M 39 OHM, 1/10W	
R1173	ERJ3EKF1741	M 1.74KOHM,0.063W	
R1174	ERJ2GE0R00	M 0 OHM, 0.063W	
R1175	ERJ6ENF2700	M 270 OHM, 1/10W	
R1177	ERJ2GEJ220	M 22 OHM, 0.063W	
R1178	ERJ2GEJ220	M 22 OHM, 0.063W	
R1179	ERJ2GEJ220	M 22 OHM, 0.063W	
R1180	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1181	ERJ3EKF1002	M 10K OHM, 1/16W	
R1182	ERJ3GEYJ104	M 100KOHM,J,1/16W	
R1183	ERJ3EKF3302	M 33K OHM, 1/16W	
R1184	ERJ2GEJ220	M 22 OHM, 0.063W	
R1188	ERJ3GEYJ392	M 3.9KOHM,J,1/16W	
R1189	ERJ3GEYJ105	M 1M OHM,J,1/16W	,
R1190	ERJ3GEYJ822	M 8.2KOHM,J,1/16W	,
R1191	ERJ3GEYJ183	M 18K OHM,J,1/16W	,

R1192		3 4 3 3 O I I 4 1 1 1 4 C I I	
	ERJ3GEYJ220	M 22 OHM,J,1/16W	
R1193	EXB28V220J	RESISTOR ARRAY	
R1194	EXB28V220J	RESISTOR ARRAY	
R1195	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1196	EXB28V560J	RESISTOR ARRAY	
R1197	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1199	ERJ6ENF2001	M 2KOHM, 1/10W	
R1200	ERJ3GEYJ330	M 33 OHM,J,1/16W	
R1201	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1202	ERJ3GEYJ183	M 18K OHM,J,1/16W	
R1203	ERJ8ENF1201	M 1.2KOHM, 1/8W	
R1204	ERJ3EKF3302	M 33K OHM, 1/16W	
R1205	ERJ6ENF39R0	M 39 OHM, 1/10W	
R1206	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1208	ERJ6ENF2702	M 27KOHM, 1/10W	
R1209	ERJ6ENF2700	M 270 OHM, 1/10W	
R1210	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1211	ERJ3EKF1002	M 10K OHM, 1/16W	
R1212	EXB28V560J	RESISTOR ARRAY	
R1213	EXB28V560J	RESISTOR ARRAY	
R1214	ERJ2GEJ220	M 22 OHM, 0.063W	
R1216	EXB28V220J	RESISTOR ARRAY	
R1217	ERJ3GEYJ182	M 1.8KOHM,J,1/16W	
R1218	ERJ3GEYJ272	M 2.7KOHMJ,J1/16W	
R1219	ERJ3GEYJ182	M 1.8KOHM,J,1/16W	
R1221	ERJ3GEYJ560	M 56 OHM,J,1/16W	
R1222	ERJ6ENF2001	M 2KOHM, 1/10W	
R1223	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1224	ERJ8ENF1201	M 1.2KOHM, 1/8W	
R1225	ERJ3EKF3302	M 33K OHM, 1/16W	
R1226	ERJ6ENF39R0	M 39 OHM, 1/10W	
R1227	ERJ3GEYJ103	M 10K OHM,J,1/16W	
R1228	ERJ6ENF2700	M 270 OHM, 1/10W	
R1229	ERJ3EKF1002	M 10K OHM, 1/16W	
R1230	ERJ3GEYJ104	M 100KOHM,J,1/16W	
R1231	ERJ3GEYJ391	M 390 OHM,J,1/16W	D0GB391JA002
R1237	ERJ2GEJ472	M 4.7KOHM, 0.063W	
R1238	ERJ2GEJ101	M 100 OHM, 0.063W	
R1240	ERJ2GEJ472	M 4.7KOHM, 0.063W	

		1	
R1241	ERJ2GEJ220	M 22 OHM, 0.063W	
R1242	ERJ2GEJ472	M 4.7KOHM, 0.063W	
R1244	ERJ2GEJ220	M 22 OHM, 0.063W	
R1246	ERJ2GEJ681	M 680 OHM, 0.063W	
R1247	ERJ2GEJ681	M 680 OHM, 0.063W	
R1248	ERJ2GEJ103	M 10K OHM, 0.063W	LB10NTU/E
R1249	ERJ2GEJ220	M 22 OHM, 0.063W	
R1250	ERJ2GEJ220	M 22 OHM, 0.063W	
R1251	ERJ2GEJ220	M 22 OHM, 0.063W	
R1252	ERJ3GEYJ220	M 22 OHM,J,1/16W	
R1253	ERJ3GEYJ220	M 22 OHM,J,1/16W	
R1254	ERJ3GEYJ220	M 22 OHM,J,1/16W	
R1255	ERJ2GEJ101	M 100 OHM, 0.063W	
R1257	ERJ2GEJ220	M 22 OHM, 0.063W	
R1260	EXB28V220J	RESISTOR ARRAY	LB10NTU/E
R1261	EXB28V220J	RESISTOR ARRAY	LB10NTU/E
R1262	EXB28V220J	RESISTOR ARRAY	LB10NTU/E
R1263	EXB28V220J	RESISTOR ARRAY	LB10NTU/E
R1264	EXB28V220J	RESISTOR ARRAY	LB10NTU/E
R1265	EXB28V220J	RESISTOR ARRAY	LB10NTU/E
R1266	EXB28V560J	RESISTOR ARRAY	
R1268	ERJ2GEJ220	M 22 OHM, 0.063W	
R1270	EXB28V560J	RESISTOR ARRAY	
R1271	EXB28V560J	RESISTOR ARRAY	
R1272	ERJ3GEYJ102	M 1K OHM,J,1/16W	
R1273	EXB28V560J	RESISTOR ARRAY	
R1274	EXB28V560J	RESISTOR ARRAY	
R1275	EXB28V560J	RESISTOR ARRAY	
R1276	EXB28V560J	RESISTOR ARRAY	
R1277	EXB28V560J	RESISTOR ARRAY	
R1278	EXB28V560J	RESISTOR ARRAY	<u> </u>
R1281	ERJ2GEJ220	M 22 OHM, 0.063W	,
R1282	ERJ3GEYJ681	M 680 OHM,J,1/16W	,
R1285	ERJ3GEYJ220	M 22 OHM,J,1/16W	<u> </u>
R1290	ERJ3GEYJ301	M 300 OHM,J,1/16W	,
R1291	ERJ2GEJ102	M 1K OHM, 0.063W	,
R1295	ERJ6ENF1203	M 120KOHM, 1/10W	,
R1298	ERJ6ENF1203	M 120KOHM, 1/10W	,
R1299	ERJ3GEYJ220	M 22 OHM,J,1/16W	,

R1300	ERJ2GEJ472	M 4.7KOHM, 0.063W	
R1301	ERJ2GEJ472	M 4.7KOHM, 0.063W	
R1302	ERJ2GE0R00	M 0 OHM, 0.063W	LB10NTU/E, LB10U/E, LB10VU/E
R1303	ERJ2GE0R00	M 0 OHM, 0.063W	LB10NTU/E, LB10U/E, LB10VU/E
R1304	ERJ2GEJ103	M 10K OHM, 0.063W	
R1305	ERJ2GEJ472	M 4.7KOHM, 0.063W	
R1306	ERJ2GEJ472	M 4.7KOHM, 0.063W	
R1308	ERJ6ENF1004	M1000KOHM, 1/10W	
R1309	ERJ2GEJ103	M 10K OHM, 0.063W	
R1310	ERJ3GEYJ220	M 22 OHM,J,1/16W	
R1311	ERJ2GEJ221	M 220 OHM, 0.063W	
R1312	ERJ2GEJ472	M 4.7KOHM, 0.063W	
R1313	ERJ2GEJ472	M 4.7KOHM, 0.063W	
R1314	ERJ2GEJ221	M 220 OHM, 0.063W	
R1315	ERJ2GEJ272	M 2.7KOHM, 0.063W	
R1321	ERJ2GEJ101	M 100 OHM, 0.063W	
R1322	ERJ2GEJ220	M 22 OHM, 0.063W	
R1323	EXB28V103J	RESISTOR ARRAY	
R1325	EXB28V103J	RESISTOR ARRAY	
R1326	ERJ2GEJ105	M 1M OHM, 0.063W	LB10NTU/E, LB10U/E
R1328	EXB28V103J	RESISTOR ARRAY	
R1331	ERJ2GEJ105	M 1M OHM, 0.063W	
R1332	EXB28V103J	RESISTOR ARRAY	
R1333	EXB28V103J	RESISTOR ARRAY	
R1334	ERJ2GEJ220	M 22 OHM, 0.063W	
R1335	ERJ2GEJ220	M 22 OHM, 0.063W	
R1336	ERJ2GEJ102	M 1K OHM, 0.063W	
R1337	ERJ2GEJ105	M 1M OHM, 0.063W	
R1338	ERJ2GEJ102	M 1K OHM, 0.063W	
R1339	ERJ2GEJ103	M 10K OHM, 0.063W	
R1340	ERJ2GEJ101	M 100 OHM, 0.063W	
R1346	ERJ2GEJ103	M 10K OHM, 0.063W	
R1348	EXB28V220J	RESISTOR ARRAY	
R1349	ERJ2GEJ220	M 22 OHM, 0.063W	
R1355	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1356	ERJ2GEJ103	M 10K OHM, 0.063W	
R1357	ERJ6GEYJ100	M 10 OHM,J,1/10W	
R1358	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1359	EXB28V220J	RESISTOR ARRAY	

R1360	ERJ6GEYJ100	M 10 OHM,J,1/10W
R1361	EXB28V220J	RESISTOR ARRAY
R1362	ERJ6GEYJ560	M 56 OHM,J,1/10W
R1363	EXB28V220J	RESISTOR ARRAY
R1364	ERJ2GEJ220	M 22 OHM, 0.063W
R1365	ERJ6ENF6801	M 6.8KOHM, 1/10W
R1366	ERJ3GEYJ331	M 330 OHM,J,1/16W
R1367	ERJ3GEYJ102	M 1K OHM,J,1/16W
R1368	ERJ2GEJ220	M 22 OHM, 0.063W
R1370	ERJ6ENF6801	M 6.8KOHM, 1/10W
R1372	ERJ3GEYJ102	M 1K OHM,J,1/16W
R1373	ERJ2GEJ220	M 22 OHM, 0.063W
R1374	EXB28V220J	RESISTOR ARRAY
R1376	ERJ2GEJ221	M 220 OHM, 0.063W
R1378	EXB28V220J	RESISTOR ARRAY
R1379	ERJ2GEJ331	M 330 OHM, 0.063W
R1380	EXB28V220J	RESISTOR ARRAY
R1381	EXB28V102J	RESISTOR ARRAY
R1382	EXB28V220J	RESISTOR ARRAY
R1383	EXB28V102J	RESISTOR ARRAY
R1384	EXB28V220J	RESISTOR ARRAY
R1385	EXB28V102J	RESISTOR ARRAY
R1386	EXB28V220J	RESISTOR ARRAY
R1388	EXB28V220J	RESISTOR ARRAY
R1389	EXB28V220J	RESISTOR ARRAY
R1390	ERJ2GEJ101	M 100 OHM, 0.063W
R1391	ERJ3GEY0R00	M 0 OHM, 1/16W
R1392	ERJ3GEY0R00	M 0 OHM, 1/16W
R1393	EXB28V220J	RESISTOR ARRAY
R1394	EXB28V220J	RESISTOR ARRAY
R1395	EXB28V220J	RESISTOR ARRAY
R1396	ERJ2GEJ220	M 22 OHM, 0.063W
R1397	ERJ2GEJ220	M 22 OHM, 0.063W
R1398	EXB28V220J	RESISTOR ARRAY
R1399	EXB28V220J	RESISTOR ARRAY
R1400	EXB28V220J	RESISTOR ARRAY
R1401	EXB28V220J	RESISTOR ARRAY
R1402	ERJ3GEY0R00	M 0 OHM, 1/16W
R1403	ERJ3GEY0R00	M 0 OHM, 1/16W

R1404	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1405	ERJ2GEJ102	M 1K OHM, 0.063W	
R1406	ERJ2GEJ103	M 10K OHM, 0.063W	
R1407	ERJ2GEJ562	M 5.6KOHM, 0.063W	
R1408	ERJ3EKF1473	M 147KOHM, 0.063W	
R1409	ERJ3EKF1002	M 10KOHM, 1/16W	
R1410	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R1411	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R1412	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R1416	ERJ2GEJ220	M 22 OHM, 0.063W	
R1417	ERJ2GEJ220	M 22 OHM, 0.063W	
R1418	ERJ2GEJ220	M 22 OHM, 0.063W	
R1419	ERJ2GEJ473	M 47K OHM, 0.063W	
R1420	ERJ2GEJ473	M 47K OHM, 0.063W	
R1421	ERJ2GEJ473	M 47K OHM, 0.063W	
R1422	ERJ2GEJ104	M 100KOHM, 0.063W	
R1423	ERJ2GEJ104	M 100KOHM, 0.063W	
R1424	ERJ2GEJ104	M 100KOHM, 0.063W	
R1425	ERJ2GEJ220	M 22 OHM, 0.063W	
R1426	ERJ2GEJ220	M 22 OHM, 0.063W	
R1427	ERJ3GEYJ561	M 560 OHM,J,1/16W	
R1429	ERJ3GEY0R00	M 0 OHM,J,1/16W	
R1430	ERJ1TYJ221	M 220 OHM, 1W	
R1431	ERJ1TYJ221	M 220 OHM, 1W	
R1432	ERJ2GEJ105	M 1M OHM, 0.063W	LB10VU/E
R1433	ERJ3GEY0R00	M 0 OHMJ,J1/16W	
R1434	ERJ3GEYJ272	M 2.7KOHMJ,J1/16W	
R1435	ERJ3GEYJ272	M 2.7KOHMJ,J1/16W	
R1436	ERJ3GEYJ272	M 2.7KOHMJ,J1/16W	
R1437	ERJ3GEYJ272	M 2.7KOHMJ,J1/16W	
R1438	ERJ3GEYJ272	M 2.7KOHMJ,J1/16W	
R1439	ERJ2GE0R00	M 0 OHM, 0.063W	LB10NTU/E, LB10U/E, LB10VU/E
R1440	ERJ2GE0R00	M 0 OHM, 0.063W	LB10SU/E
R1441	ERJ2GEJ104	M 100KOHM, 0.063W	
R1442	ERJ2GEJ104	M 100KOHM, 0.063W	
R1443	ERJ2GE0R00	M 0 OHM, 0.063W	LB10SU/E
R1444	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1445	ERJ3GEY0R00	M 0 OHM, 1/16W	
R1446	ERJ3GEY0R00	M 0 OHM, 1/16W	

R1447	ERJ2GEJ220	M 22 OHM 0 062W	
		M 22 OHM, 0.063W	I DIONELLE
R1801	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1803	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1804	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1805	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1810	ERJ3GEYJ222	M 2.2KOHM,J,1/16W	LB10NTU/E
R1812	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1814	ERJ3GEYJ560	M 560 OHM,1/16W	LB10NTU/E
R1815	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1818	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1819	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1820	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1821	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1823	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1824	ERJ3GEY0R00	M 0 OHM, 1/16W	LB10NTU/E
R1829	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1830	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1833	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1834	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1835	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1836	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1837	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1838	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1839	ERJ3GEYJ560	M 560 OHM,1/16W	LB10NTU/E
R1840	ERJ3GEY0R00	M 0 OHM, 1/16W	LB10NTU/E
R1844	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002 (LB10NTU/E)
R1846	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002 (LB10NTU/E)
R1854	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R1860	ERJ3GEYJ105	M 1M OHM,J,1/16W	LB10NTU/E
R1861	ERJ3GEYJ100	M 100 OHM, 1/16W	LB10NTU/E
R1862	ERJ3GEY0R00	M 0 OHM, 1/16W	LB10NTU/E
R1863	ERJ3GEYJ105	M 1M OHM,J,1/16W	LB10NTU/E
R1870	ERJ3GEY0R00	M 0 OHM, 1/16W	LB10NTU/E
R1871	ERJ3GEY0R00	M 0 OHM, 1/16W	LB10NTU/E
R1872	ERJ3GEY0R00	M 0 OHM, 1/16W	LB10NTU/E
R1873	ERJ3GEY0R00	M 0 OHM, 1/16W	LB10NTU/E
R1875	ERJ3GEY0R00	M 0 OHM, 1/16W	LB10NTU/E
R1877	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
		,,,	

R1879	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002 (LB10NTU/E)
R1894	ERJ3GEYJ103	M 10K OHM,J,1/16W	LB10NTU/E
R2001	ERJ3GEYJ100	M 10 OHM,J,1/16W	
R2002	ERJ6ENF5601	M 5.6KOHM, 1/10W	
R2003	ERJ6ENF2201	M 2.2KOHM, 1/10W	
R2004	ERJ6ENF6801	M 6.8KOHM, 1/10W	
R2005	ERJ6ENF3302	M 33KOHM, 1/10W	
R2006	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R2007	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R2008	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R2009	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R2010	ERJ3GEYJ101	M 100 OHM,J,1/16W	D0GB101JA002
R2011	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R2012	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R2013	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R2014	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R2015	ERJ3GEYJ331	M 330 OHM,J,1/16W	
R2016	ERJ6GEYJ470	M 47 OHM,J,1/10W	
R2017	ERJ3GEYJ102	M 1K OHM,J,1/16W	
R2019	ERJ3GEY0R00	M 0 OHM,J,1/16W	
R3001	ERJ3GEYJ100	M 10 OHM,J,1/16W	
R3002	ERJ6ENF5601	M 5.6KOHM, 1/10W	
R3003	ERJ6ENF3302	M 33KOHM, 1/10W	
R3004	ERJ6ENF1002	M 10KOHM, 1/10W	
R3005	ERJ3GEYJ100	M 10 OHM,J,1/16W	
R3006	ERJ6ENF1002	M 10KOHM, 1/10W	
R3007	ERJ6ENF2201	M 2.2KOHM, 1/10W	
R3008	ERJ6ENF1001	M 1KOHM, 1/10W	
R3009	ERJ6ENF2201	M 2.2KOHM, 1/10W	
R3010	ERJ6ENF1001	M 1KOHM, 1/10W	
R3011	ERJ6ENF2201	M 2.2KOHM, 1/10W	
R3012	ERJ6ENF1003	M 100KOHM, 1/10W	
R9101	ERDS1TJ474	C 4.7KOHM, J,1/2W	Δ
R9102	D0A1825JA015	RESISTOR	Δ
R9601	ERX2SJR47	M 0.47OHM,J, 2W	
R9630	ERJ14YJ3R3	M 3.3 OHM,J, 1/4W	
R9631	ERJ8GEYJ220	M 22 OHM,J, 1/8W	,
R9632	ERJ14YJ5R6	M 5.6 OHM,J, 1/4W	

	1	
R9633	ERJ8GEYJ100	M 10 OHM,J, 1/8W
R9634	ERJ8GEYJ120	M 12 OHM,J, 1/8W
R9636	ERJ14YJ3R3	M 3.3 OHM,J, 1/4W
R9637	ERJ8GEYJ220	M 22 OHM,J, 1/8W
R9638	ERJ14YJ5R6	M 5.6 OHM,J, 1/4W
R9639	ERJ8GEYJ100	M 10 OHM,J, 1/8W
R9640	ERJ8GEYJ120	M 12 OHM,J, 1/8W
R9653	D0XGR22KA001	RESISTOR
		[CAPACITORS]
C1001	EEVHB0J221U	E 220UF, 6.3V
C1002	ECJ0EB1C103K	C 0.01UF, 16V
C1003	EEVHB0J221U	E 220UF, 6.3V
C1004	ECJ0EB1C103K	C 0.01UF, 16V
C1005	EEVHB0J221U	E 220UF, 6.3V
C1006	ECJ0EB1C103K	C 0.01UF, 16V
C1007	ECJ0EF1C104Z	C 0.1UF, 16V
C1008	ECJ1XB1H472K	C 4700PF, K, 50V
C1009	ECJ2XF1C105Z	C 1UF, Z, 16V
C1010	EEVHB0J330	E 33UF, 6.3V
C1011	ECJ0EF1C104Z	C 0.1UF, 16V
C1012	EEVHB0J330	E 33UF, 6.3V
C1013	EEVHB1A101	E 100UF, 10V
C1014	ECJ0EF1C104Z	C 0.1UF, 16V
C1015	ECJ0EF1C104Z	C 0.1UF, 16V
C1016	ECJ0EB1C103K	C 0.01UF, 16V
C1017	ECJ0EF1C104Z	C 0.1UF, 16V
C1018	ECJ0EB1C103K	C 0.01UF, 16V
C1019	ECJ1XC1H102J	C 1000PF, J, 50V
C1020	ECUX1H120JCV	C 12PF, 50V
C1021	ECJ0EF1C104Z	C 0.1UF, 16V
C1022	ECJ0EB1C103K	C 0.01UF, 16V
C1023	ECJ0EB1C103K	C 0.01UF, 16V
C1024	EEVHB1C470	E 47UF, 16V
C1025	ECUX1H270JCV	C 27PF, 50V
C1026	ECUX1H120JCV	C 12PF, 50V
C1027	ECJ1XF1A105Z	C 100UF, 10V
C1028	ECUX1H270JCV	C 27PF, 50V
		1

C1029	ECJ0EF1C104Z	C 0.1UF, 16V
C1032	ECJ0EF1C104Z	C 0.1UF, 16V
C1033	ECJ1XF1A105Z	C 100UF, 10V
C1034	EEVHB0J470	E 47UF, 6.3V
C1035	ECJ1XF1A105Z	C 100UF, 10V
C1036	ECJ0EB1C103K	C 0.01UF, 16V
C1037	ECJ0EB1C103K	C 0.01UF, 16V
C1038	ECJ0EB1C103K	C 0.01UF, 16V
C1039	ECJ1XF1A105Z	C 100UF, 10V
C1040	ECJ1XF1A105Z	C 100UF, 10V
C1041	ECJ1XF1A105Z	C 100UF, 10V
C1042	ECJ1XF1A105Z	C 100UF, 10V
C1043	ECJ1XF1A105Z	C 100UF, 10V
C1044	ECJ1XF1A105Z	C 100UF, 10V
C1047	ECJ2XF1C225Z	C 2.2UF, Z, 16V
C1049	ECJ2XF1C225Z	C 2.2UF, Z, 16V
C1050	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1051	ECJ1XF1A105Z	C 100UF, 10V
C1052	ECJ1XF1A105Z	C 100UF, 10V
C1053	ECJ1XF1A105Z	C 100UF, 10V
C1054	ECJ0EF1C104Z	C 0.1UF, 16V
C1058	EEVHB0J470	E 47UF, 6.3V
C1061	ECJ0EF1C104Z	C 0.1UF, 16V
C1062	EEVHB0J330	E 33UF, 6.3V
C1072	EEVHB1C470	E 47UF, 16V
C1075	EEVHB1C100	E 10UF, 16V
C1076	ECJ3XB0J106M	C 10UF, 6.3V
C1077	ECJ0EF1C104Z	C 0.1UF, 16V
C1078	ECJ0EF1C104Z	C 0.1UF, 16V
C1079	ECJ0EB1C103K	C 0.01UF, 16V
C1080	ECJ3XB0J106M	C 10UF, 6.3V
C1081	EEVHB1C100	E 10UF, 16V
C1082	ECJ0EF1C104Z	C 0.1UF, 16V
C1083	ECJ0EF1C104Z	C 0.1UF, 16V
C1084	ECJ2XF1C225Z	C 2.2UF, Z, 16V
C1085	ECJ0EF1C104Z	C 0.1UF, 16V
C1086	ECJ0EB1C103K	C 0.01UF, 16V
C1087	ECJ0EF1C104Z	C 0.1UF, 16V
C1088	ECJ0EF1C104Z	C 0.1UF, 16V

C1089	ECJ0EF1C104Z	C 0.1UF, 16V	
C1090	ECJ0EF1C104Z	C 0.1UF, 16V	
C1091	ECJ0EF1C104Z	C 0.1UF, 16V	
C1092	ECJ0EF1C104Z	C 0.1UF, 16V	
C1093	ECJ1XC1H102J	C 1000PF, J, 50V	
C1094	EEVHB0G101	E 100UF, 4V	
C1095	ECJ0EF1C104Z	C 0.1UF, 16V	
C1096	ECJ0EF1C104Z	C 0.1UF, 16V	
C1097	ECJ0EF1C104Z	C 0.1UF, 16V	
C1098	ECJ0EF1C104Z	C 0.1UF, 16V	
C1099	ECJ0EF1C104Z	C 0.1UF, 16V	
C1100	ECJ1XC1H151J	C 150PF, 50V	
C1101	EEVHB1C100	E 10UF, 16V	
C1102	ECJ0EF1C104Z	C 0.1UF, 16V	
C1103	EEVHB0J101	E 100UF, 6.3V	EEVHB0J101P
C1104	EEVHB1C470	E 47UF, 16V	
C1107	ECJ0EF1C104Z	C 0.1UF, 16V	
C1108	ECJ0EF1C104Z	C 0.1UF, 16V	
C1109	ECUV1C823KBV	C 0.082PF, 16V	ECJ1VB1C823K
C1110	ECUX1H822KBV	C 8200PF, 50V	ECJ1XB1H822K
C1111	ECJ2XF1C105Z	C 1UF, Z, 16V	
C1113	ECJ0EB1C103K	C 0.01UF, 16V	
C1114	ECJ0EF1C104Z	C 0.1UF, 16V	
C1116	ECJ1XB1H472K	C 4700PF, K, 50V	
C1117	ECJ0EB1C103K	C 0.01UF, 16V	
C1118	ECJ3XF1C475Z	C 4.7UF, Z, 16V	
C1119	ECJ3XF1C475Z	C 4.7UF, Z, 16V	
C1120	ECJ3XF1C475Z	C 4.7UF, Z, 16V	
C1121	ECJ0EF1C104Z	C 0.1UF, 16V	
C1122	ECJ1XC1H150J	C 150PF, 50V	
C1123	ECJ0EF1C104Z	C 0.1UF, 16V	
C1124	ECJ1XC1H221J	C 220PF, 50V	
C1125	ECJ0EF1C104Z	C 0.1UF, 16V	
C1126	ECJ1XC1H150J	C 150PF, 50V	
C1127	ECJ0EF1C104Z	C 0.1UF, 16V	
C1128	EEFUD0J101R	CAPACITOR	
C1129	ECJ2XC1H391J	C 390PF, J, 50V	
C1130	EEVHB1C100	E 10UF, 16V	
C1131	ECJ0EF1C104Z	C 0.1UF, 16V	

C1132	ECJ0EF1C104Z	C 0.1UF, 16V	
C1133	ECJ0EF1C104Z	C 0.1UF, 16V	
C1134	ECJ1XC1H181J	C 180PF, J, 50V	
C1135	ECJ0EF1C104Z	C 0.1UF, 16V	
C1136	ECJ1XF1A105Z	C 100UF, 10V	
C1137	EEVHB0G101	E 100UF, 4V	
C1138	ECJ0EF1C104Z	C 0.1UF, 16V	
C1139	ECJ0EF1C104Z	C 0.1UF, 16V	
C1140	ECJ0EF1C104Z	C 0.1UF, 16V	
C1141	ECJ2XF1C225Z	C 2.2UF, Z, 16V	
C1142	EEVHB0J101	E 100UF, 6.3V	EEVHB0J101P
C1143	EEVHB1C470	E 47UF, 16V	
C1145	ECJ0EF1C104Z	C 0.1UF, 16V	
C1146	EEVHB1C470	E 47UF, 16V	
C1147	ECJ3XF1C475Z	C 4.7UF, Z, 16V	
C1149	ECJ0EF1C104Z	C 0.1UF, 16V	
C1150	ECJ0EF1C104Z	C 0.1UF, 16V	
C1152	ECJ0EF1C104Z	C 0.1UF, 16V	
C1154	ECJ0EF1C104Z	C 0.1UF, 16V	
C1155	ECJ1XF1C104Z	C 0.1UF, Z, 16V	
C1156	ECJ1XF1A105Z	C 100UF, 10V	
C1157	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1158	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1159	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1160	EEVHB0J470	E 47UF, 6.3V	LB10NTU/E
C1161	ECJ2XF1C105Z	C 1UF, Z, 16V	
C1162	ECJ0EF1C104Z	C 0.1UF, 16V	
C1163	ECJ0EF1C104Z	C 0.1UF, 16V	
C1164	ECJ0EF1C104Z	C 0.1UF, 16V	
C1165	ECJ0EF1C104Z	C 0.1UF, 16V	
C1166	ECJ0EF1C104Z	C 0.1UF, 16V	
C1167	ECJ0EF1C104Z	C 0.1UF, 16V	
C1168	ECJ0EF1C104Z	C 0.1UF, 16V	
C1169	ECJ0EF1C104Z	C 0.1UF, 16V	
C1170	ECJ0EF1C104Z	C 0.1UF, 16V	
C1171	ECJ0EF1C104Z	C 0.1UF, 16V	
C1172	ECJ0EF1C104Z	C 0.1UF, 16V	
C1173	ECJ0EF1C104Z	C 0.1UF, 16V	
C1174	ECJ0EF1C104Z	C 0.1UF, 16V	

C1175	ECJ0EF1C104Z	C 0.1UF, 16V	
C1176	ECJ0EF1C104Z	C 0.1UF, 16V	
C1177	ECJ0EF1C104Z	C 0.1UF, 16V	
C1178	ECJ0EF1C104Z	C 0.1UF, 16V	
C1179	ECJ0EF1C104Z	C 0.1UF, 16V	
C1180	ECJ0EF1C104Z	C 0.1UF, 16V	
C1181	ECJ0EF1C104Z	C 0.1UF, 16V	
C1182	ECJ0EF1C104Z	C 0.1UF, 16V	
C1183	ECJ0EF1C104Z	C 0.1UF, 16V	
C1184	ECJ0EF1C104Z	C 0.1UF, 16V	
C1185	ECJ0EF1C104Z	C 0.1UF, 16V	
C1186	ECJ0EF1C104Z	C 0.1UF, 16V	
C1187	EEVHB0J470	E 47UF, 6.3V	
C1188	ECJ0EF1C104Z	C 0.1UF, 16V	
C1189	ECJ0EF1C104Z	C 0.1UF, 16V	
C1190	ECJ0EF1C104Z	C 0.1UF, 16V	
C1191	ECJ0EF1C104Z	C 0.1UF, 16V	
C1192	ECJ0EF1C104Z	C 0.1UF, 16V	
C1193	ECJ0EF1C104Z	C 0.1UF, 16V	
C1194	ECJ0EF1C104Z	C 0.1UF, 16V	
C1195	ECJ0EF1C104Z	C 0.1UF, 16V	
C1196	ECJ0EF1C104Z	C 0.1UF, 16V	
C1197	ECJ0EF1C104Z	C 0.1UF, 16V	
C1198	ECJ0EF1C104Z	C 0.1UF, 16V	
C1199	EEVHB0J470	E 47UF, 6.3V	
C1200	ECJ1XF1A105Z	C 100UF, 10V	
C1201	ECJ1XF1A105Z	C 100UF, 10V	
C1202	ECJ0EF1C104Z	C 0.1UF, 16V	
C1203	ECJ0EF1C104Z	C 0.1UF, 16V	
C1204	ECJ0EF1C104Z	C 0.1UF, 16V	
C1206	ECJ0EF1C104Z	C 0.1UF, 16V	
C1207	ECJ0EF1C104Z	C 0.1UF, 16V	
C1208	ECJ0EF1C104Z	C 0.1UF, 16V	
C1209	ECJ0EF1C104Z	C 0.1UF, 16V	
C1210	ECJ1XF1H333Z	C 0.033UF, 50V	
C1212	ECJ0EF1C104Z	C 0.1UF, 16V	
C1213	ECJ0EF1C104Z	C 0.1UF, 16V	
C1214	ECJ0EF1C104Z	C 0.1UF, 16V	
C1215	ECJ0EF1C104Z	C 0.1UF, 16V	

C1216	ECJ0EF1C104Z	C 0.1UF, 16V
C1217	ECJ1XC1H471J	C 470PF, J, 50V
C1218	ECJ0EF1C104Z	C 0.1UF, 16V
C1219	ECJ1XC1H100C	C 10PF, 50V
C1220	ECJ0EF1C104Z	C 0.1UF, 16V
C1221	ECJ1XC1H100C	C 10PF, 50V
C1222	ECJ0EF1C104Z	C 0.1UF, 16V
C1223	ECJ0EF1C104Z	C 0.1UF, 16V
C1224	EEVHB0J470	E 47UF, 6.3V
C1225	ECJ0EF1C104Z	C 0.1UF, 16V
C1228	EEVHB0J330	E 33UF, 6.3V
C1229	ECJ0EF1C104Z	C 0.1UF, 16V
C1230	EEVHB0G101	E 100UF, 4V
C1232	ECJ0EF1C104Z	C 0.1UF, 16V
C1233	ECJ0EF1C104Z	C 0.1UF, 16V
C1234	ECJ0EF1C104Z	C 0.1UF, 16V
C1235	ECJ0EF1C104Z	C 0.1UF, 16V
C1236	ECJ0EF1C104Z	C 0.1UF, 16V
C1237	ECJ0EF1C104Z	C 0.1UF, 16V
C1238	ECJ0EF1C104Z	C 0.1UF, 16V
C1239	ECJ0EF1C104Z	C 0.1UF, 16V
C1240	ECJ0EF1C104Z	C 0.1UF, 16V
C1241	ECJ0EF1C104Z	C 0.1UF, 16V
C1242	ECJ0EF1C104Z	C 0.1UF, 16V
C1243	ECJ0EF1C104Z	C 0.1UF, 16V
C1244	ECJ0EF1C104Z	C 0.1UF, 16V
C1245	ECJ0EF1C104Z	C 0.1UF, 16V
C1246	ECJ0EF1C104Z	C 0.1UF, 16V
C1247	ECJ0EF1C104Z	C 0.1UF, 16V
C1248	ECJ0EF1C104Z	C 0.1UF, 16V
C1249	ECJ0EF1C104Z	C 0.1UF, 16V
C1250	ECJ0EF1C104Z	C 0.1UF, 16V
C1251	ECJ0EF1C104Z	C 0.1UF, 16V
C1252	ECJ0EF1C104Z	C 0.1UF, 16V
C1253	ECJ0EF1C104Z	C 0.1UF, 16V
C1254	ECJ0EF1C104Z	C 0.1UF, 16V
C1255	ECJ0EF1C104Z	C 0.1UF, 16V
C1256	ECJ0EF1C104Z	C 0.1UF, 16V
C1257	ECJ0EF1C104Z	C 0.1UF, 16V

C1258	ECJ0EF1C104Z	C 0.1UF, 16V	
C1259	ECJ0EF1C104Z	C 0.1UF, 16V	
C1260	ECJ0EF1C104Z	C 0.1UF, 16V	
C1261	ECJ0EF1C104Z	C 0.1UF, 16V	
C1262	ECJ0EF1C104Z	C 0.1UF, 16V	
C1263	ECJ0EF1C104Z	C 0.1UF, 16V	
C1264	ECJ0EF1C104Z	C 0.1UF, 16V	
C1265	ECJ0EF1C104Z	C 0.1UF, 16V	
C1266	ECJ0EF1C104Z	C 0.1UF, 16V	
C1267	EEVHB1E4R7	E 4.7UF, 25V	
C1268	EEVHB1E4R7	E 4.7UF, 25V	
C1269	EEVHB1A221	E 220UF, 10V	
C1270	EEVHB0J101	E 100UF, 6.3V	EEVHB0J101P
C1271	EEVHB0J101	E 100UF, 6.3V	EEVHB0J101P
C1272	EEVHB0J470	E 47UF, 6.3V	
C1273	ECJ0EF1C104Z	C 0.1UF, 16V	
C1274	ECJ0EF1C104Z	C 0.1UF, 16V	
C1275	ECJ0EF1C104Z	C 0.1UF, 16V	
C1276	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1277	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1278	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1279	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1280	EEVHB1E330	E 33UF, 25V	
C1281	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1282	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1283	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1284	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1285	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1286	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1287	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1288	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1289	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1290	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1291	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1292	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1293	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1294	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1295	ECJ1XF1E104Z	C 0.1UF, Z, 25V	
C1296	ECJ1XF1E104Z	C 0.1UF, Z, 25V	

C1297	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1298	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1299	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1300	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1301	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1304	EEVHB1E330	E 33UF, 25V
C1306	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1307	ECJ0EF1C104Z	C 0.1UF, 16V
C1308	ECJ0EF1C104Z	C 0.1UF, 16V
C1309	ECJ0EF1C104Z	C 0.1UF, 16V
C1310	ECJ0EF1C104Z	C 0.1UF, 16V
C1311	ECJ0EF1C104Z	C 0.1UF, 16V
C1312	ECJ0EF1C104Z	C 0.1UF, 16V
C1313	ECJ0EF1C104Z	C 0.1UF, 16V
C1314	ECJ0EF1C104Z	C 0.1UF, 16V
C1315	ECJ0EF1C104Z	C 0.1UF, 16V
C1316	ECJ0EF1C104Z	C 0.1UF, 16V
C1317	ECJ0EF1C104Z	C 0.1UF, 16V
C1318	ECJ0EF1C104Z	C 0.1UF, 16V
C1319	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1320	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1321	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1322	EEVHB1E4R7	E 4.7UF, 25V
C1323	ECJ0EF1C104Z	C 0.1UF, 16V
C1324	ECJ0EF1C104Z	C 0.1UF, 16V
C1325	ECJ0EF1C104Z	C 0.1UF, 16V
C1326	ECJ0EF1C104Z	C 0.1UF, 16V
C1327	ECJ0EF1C104Z	C 0.1UF, 16V
C1328	ECJ0EF1C104Z	C 0.1UF, 16V
C1329	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1330	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1331	ECJ1XF1E104Z	C 0.1UF, Z, 25V
C1332	F2G1E3300022	CAPACITOR
C1333	EEVHB1E330	E 33UF, 25V
C1334	EEVHB1E330	E 33UF, 25V
C1335	EEVHB1A330	E 33UF, 10V
C1336	F2G1A3300022	CAPACITOR
C1337	EEVHB1A330	E 33UF, 10V
C1341	ECJ2XF1C105Z	C 1UF, Z, 16V

		1	
C1342	ECJ2XF1C105Z	C 1UF, Z, 16V	
C1343	ECJ2XF1C105Z	C 1UF, Z, 16V	
C1344	ECJ0EF1C104Z	C 0.1UF, 16V	LB10NTU/E
C1345	ECJ0EF1C104Z	C 0.1UF, 16V	
C1346	ECJ0EF1C104Z	C 0.1UF, 16V	
C1347	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1351	ECJ1XF1C104Z	C 0.1UF, Z, 16V (WL-PCB)	LB10NTU/E
C1353	F4D272750002	CAPACITOR	
C1354	ECJ1XF1C104Z	C 0.1UF, Z, 16V (WL-PCB)	LB10NTU/E
C1354	F4D272750002	CAPACITOR	
C1355	F4D272750002	CAPACITOR	
C1356	ECJ1XF1C104Z	C 0.1UF, Z, 16V (WL-PCB)	LB10NTU/E
C1356	F4D272750002	CAPACITOR	
C1357	F4D272750002	CAPACITOR	
C1360	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1539	EEVHB1E330	E 33UF, 25V	
C1801	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1805	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1806	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1807	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1808	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1813	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1814	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1815	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1816	F2G0J4700024	CAPACITOR	LB10NTU/E
C1817	F2G0J4700024	CAPACITOR	LB10NTU/E
C1818	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1819	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1820	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1824	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1825	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1830	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C1837	F2G0J4700024	CAPACITOR	LB10NTU/E
C1843	ECJ1XF1C104Z	C 0.1UF, Z, 16V	LB10NTU/E
C2001	EEVHB0J470	E 47UF, 6.3V	
C2002	ECJ1XF1C104Z	C 0.1UF, Z, 16V	
C2003	ECJ0EF1C104Z	C 0.1UF, 16V	

C2004	EEVHB0J470	E 47UF, 6.3V	
C3001	EEVHB0J330	E 33UF, 6.3V	
C3002	ECJ1XF1C104Z	C 0.1UF, Z, 16V	
C3003	ECJ1XF1C104Z	C 0.1UF, Z, 16V	
C9101	ECQU2A334MLA	CAPACITOR	⚠
C9102	F1BAH1020016	CAPACITOR	<u>A</u>
C9103	F1BAH1020016	CAPACITOR	⚠
C9603	F0CZZ4740002	CAPACITOR	
C9610	F0C2E1050002	CAPACITOR	
C9617	F0C3C4720003	CAPACITOR	
C9618	F0C2J1540004	CAPACITOR	
C9619	F0C2J1540004	CAPACITOR	
		[OTHERS]	
A1	K1MN30B00115	30P CONNECTOR	
A2	K1MN30B00114	30P CONNECTOR	
A3	K1MN30B00115	30P CONNECTOR	
A4	K1KA05B00153	5P CONNECTOR	
A6	K1KA12B00079	12P CONNECTOR	
A8	TJSF21710	10P CONNECTOR	K1MN10B00060
A9	K1KB05A00027	5P CONNECTOR	
A10	K1KA02B00051	2P CONNECTOR	
A13	K1KB21A00007	21P CONNECTOR	LB10NTU/E
A14	K1KB21A00007	21P CONNECTOR	LB10NTU/E
A15	TJS6A8780	3P CONNECTOR	K1KA03B00006
A16	K1KA03B00098	3P CONNECTOR	
A17	TJS6A8780	3P CONNECTOR	K1KA03B00006
A18	K1KA03B00098	3P CONNECTOR	
A19	K1KA04B00007	4P CONNECTOR	
S1	K1MN10B00116	10P CONNECTOR	
S2	K1KA05B00150	5P CONNECTOR	
WL4	K1KA21A00006	21P CONNECTOR	LB10NTU/E
WL5	K1KA21A00006	21P CONNECTOR	LB10NTU/E
CF2001	D4CC1103A037	THERMISTOR	
DL1001	J0HABC000011	FILTER	
DL1002	J0HABC000011	FILTER	
DL1003	J0HABC000011	FILTER	
		I	

F9101-1	EYF52BCY	FUSE HOLDER	
F9101-2	EYF52BCY	FUSE HOLDER	
JK1001	K1CB205B0003	S-VIDEO/VIDEO IN TERMINAL	
JK1002	K2EZ8B000002	RS232C I/F TERMINAL	
JK1004	K1FB115B0098	RGB IN TERMINAL	
JK1005	K1FB115B0079	RGB OUT TERMINAL	
JK1009	K2HA202B0025	AUDIO IN TERMINAL	
JK1802	K1NA50E00027	PC CARD CONNECTOR	LB10NTU/E
JK9101	K2AH3B000020	AC INLET	⚠
RM2001	B3RAD0000058	REMOTE CONTROL RECEIVER	
S9602	A9BZ00000010	SPARK GAP	
SW2001	EVQPLHA15	SWITCH	
SW2002	EVQPLHA15	SWITCH	
SW2003	EVQPLHA15	SWITCH	
SW3001	EVQPLHA15	SWITCH	
SW3002	EVQWHA50K	SWITCH	
SW9601	T115AR3U3	SWITCH	<u>A</u>
T9604	G4F2A0000001	TRANS	⚠
X1002	H0J270500045	CRYSTAL	
X1003	Н0Ј983400016	CRYSTAL	
X1006	H1A6505B0006	CRYSTAL	LB10NTU/E, LB10U/E, LB10VU/E
	H1A4405B0009	CRYSTAL	LB10SU/E
X1801	H1A6005B0011	CRYSTAL	LB10NTU/E
ZA9101	TJC6137	EARTH LUG	
RTL	TXANP03VJW5	CIRCUIT BOARD K	
RTL	TNPA3143	CIRCUIT BOARD WL	LB10NTU/E
RTL	TXANP01PVMZ	CIRCUIT BOARD A	LB10NTU/E
	TXANP01PVNZ	CIRCUIT BOARD A	LB10U/E
	TXANP01PVPZ	CIRCUIT BOARD A	LB10VU/E
	TXANP01PXAZ	CIRCUIT BOARD A	LB10SU/E
RTL	TNPA3145	CIRCUIT BOARD S2	
RTL	TNPA3144	CIRCUIT BOARD S1	
	TXANP02VJW5	POWER UNIT ASSY	
	TXANP05VJW5	BALLAST UNIT ASSY	


TOP PREVIOUS NEXT


17 Schematic Diagram for printing with A4 size

TOP PREVIOUS



TOP PREVIOUS

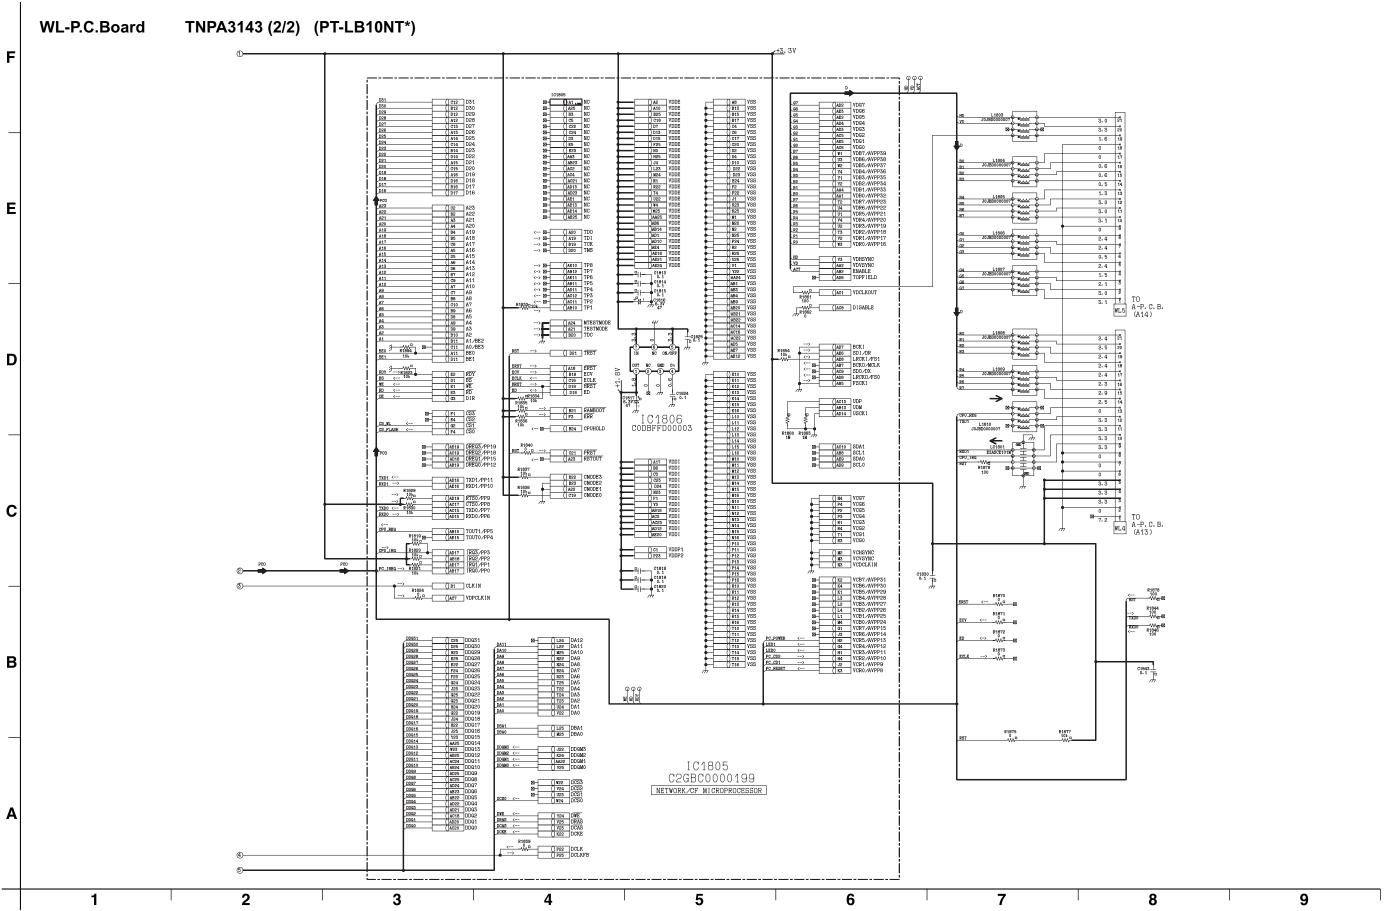


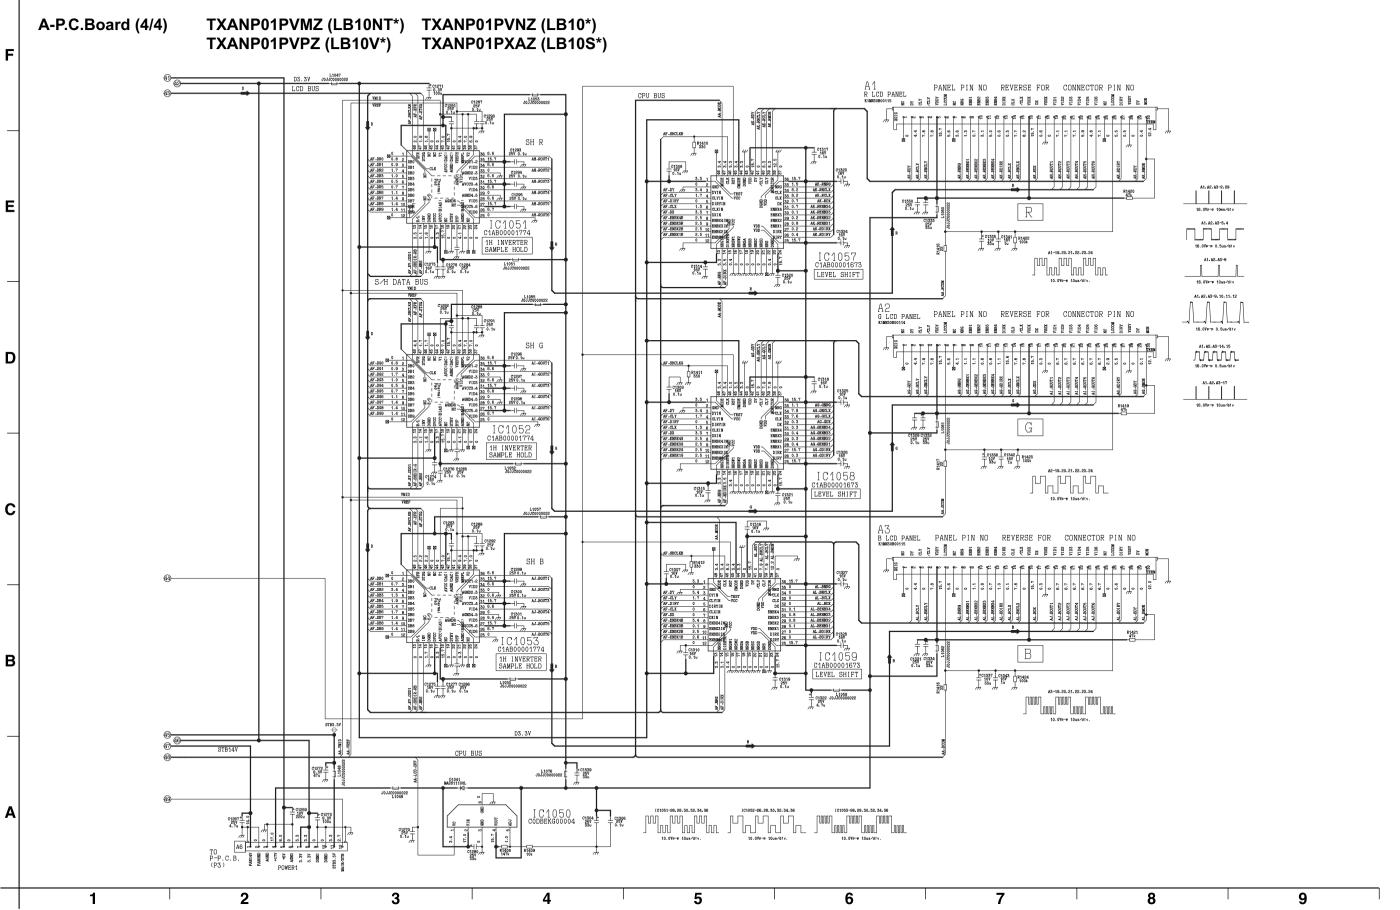


A-P.C.Board TXANP01PVMZ (LB10NT*)
(Component Side) TXANP01PVNZ (LB10*)
TXANP01PVPZ (LB10V*)
TXANP01P000 (LB10S*)

A-P.C.Board(Component Side)					
IC	IC				ISTOR
IC1001	A-2	IC1034	B-2	Q1007	A-2
IC1002	B-3	IC1035	B-2	Q1009	A-2
IC1003	A-4	IC1037	C-2	Q1013	C-3
IC1011	C-2	IC1038	B-2	Q1020	B-3
IC1014	B-3	IC1039	B-2	Q1027	B-2
IC1015	C-1	IC1041	B-3	Q1032	B-2
IC1017	C-1	IC1042	B-3	Q1033	B-4
IC1019	A-2	IC1043	B-3	Q1035	C-2
IC1020	B-3	IC1050	B-5	Q1036	B-4
IC1025	B-3	IC1057	C-5	Q1038	C-1
IC1026	C-2	IC1058	C-4	Q1039	C-1
IC1028	B-5	IC1059	C-3	Q1042	D-1
IC1030	B-5	IC1070	A-5		
IC1031	C-2	IC1072	B-5		
IC1033	C-2	IC1200	B-4		
			l	1	l

ADDRESS INFORMATION

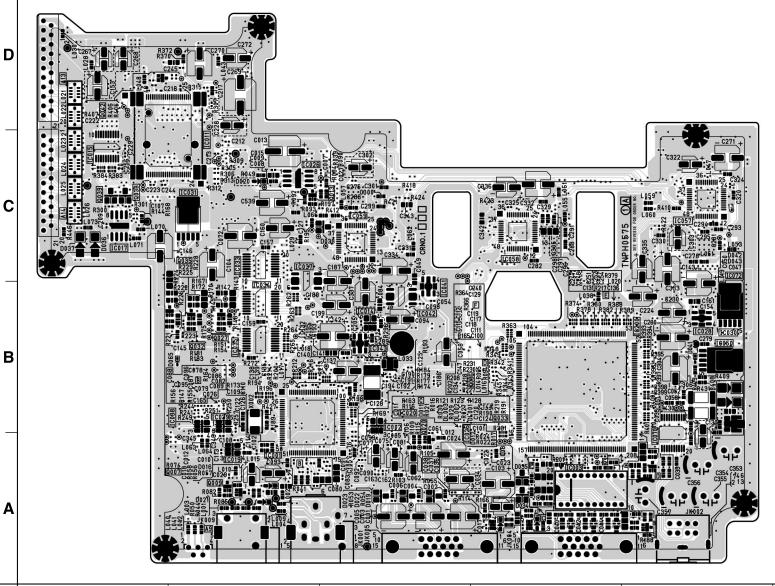


S1-P.C.Board TNPA3144 (File Side)

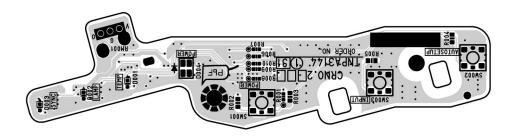

S1-P.C.Board TNPA3144 (Component Side)

S1-P.C.Board(Component Side)					
TRANSISTOR					
Q2001 Q2002 Q2003	B-7 B-6 B-6	Q2004 Q2005	B-7 B-7		

ADDRESS INFORMATION

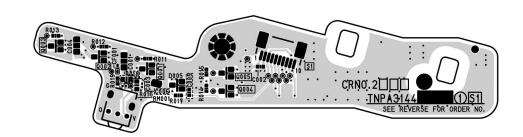


2 3 4 5 6 7 8

A-P.C.Board (Foil Side) TXANP01PVMZ (LB10NT*)
TXANP01PVNZ (LB10*)
TXANP01PVPZ (LB10V*)
TXANP01P000 (LB10S*)

	A-P.C.Board(Foil Side)									
IC				TRANSISTOR			TP			
IC1003	A-2	IC1023	B-3	Q1006	B-4	Q1022	B-1	TPA11	C-3	
IC1004	A-2	IC1024	A-2	Q1008	A-4	Q1034	B-1	TPA12	C-4	
IC1005	B-3	IC1027	C-4	Q1011	A-4	Q1040	C-4			
IC1006	B-4	IC1029	B-4	Q1012	A-4	Q1041	C-4			
IC1009	B-2	IC1032	C-4	Q1014	A-4	Q1043	B-1			
IC1010	C-4	IC1040	B-2	Q1015	B-1					
IC1012	C-4	IC1051	C-1	Q1016	B-1					
IC1013	C-5	IC1052	C-2	Q1017	B-1					
IC1016	B-3	IC1053	C-3	Q1018	B-1					
IC1018	C-5	IC1068	B-4	Q1019	B-1					
IC1021	B-1	IC1083	B-3	Q1021	B-1					

2

ADDRESS INFORMATION

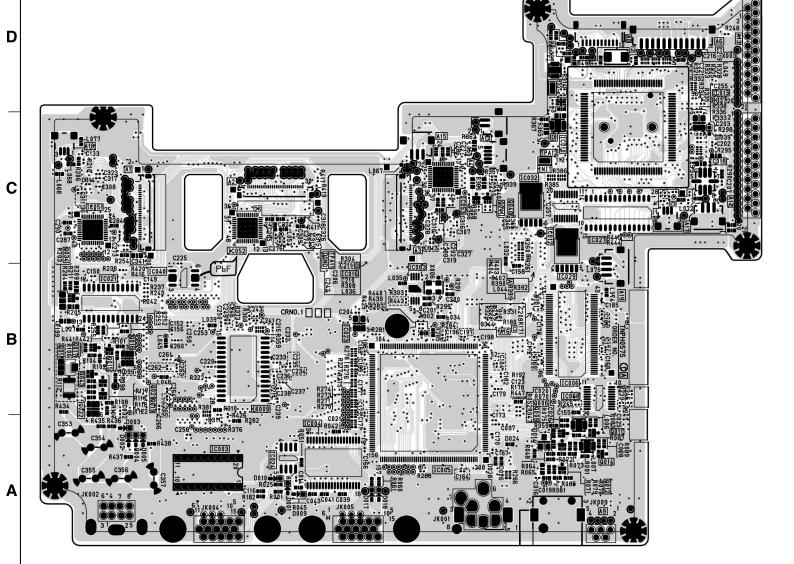

3


5

6

WL-P.C.Board TNPA3143 (LB10NT*) (File Side)

WL-P.C.Board(Foil Side)								
	TP							
D-7	TPA11	E-7						
E-7	TPA12	D-7						
	D-7	TP D-7 TPA11						

ADDRESS INFORMATION

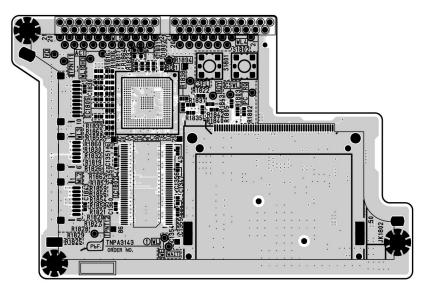


WL-P.C.Board TNPA3143 (LB10NT*) (Component Side)

WL-P.C.Board(Component Side)									
IC									
IC1803	B-8	IC1806	A-7						
IC1804	B-8								

7

ADDRESS INFORMATION

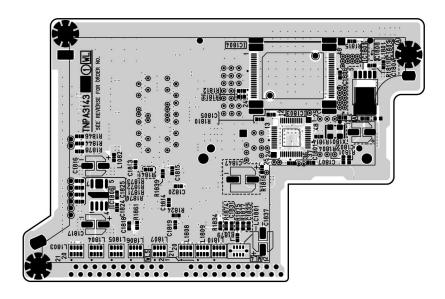

8


B-Module TXANP05VJW5 (1/2) Module Replacement Only supplied components IC9602-03, Q9603-11, Q9614, D9601, D9604-09, D9611-12, D9616-29, R9601, R9630-34, R9636-40, R9653, C9603, C9610, C9617-19, T9604, SW9601, S9602, TXJ/L2VJW5 TO P-P.C.B. B1 (P2) DC360V H-COM R9649 D9601 BOHARRO00007 TO Q-P.C.B. B3 (Q1) C9616 50V 1000p C9602 R9618 R9629 Q9613 25D1819A0L TO Q-P.C.B. (Q2) R9645 HOT-COM 1 Vin-SENS IC9603 cozazooooo77 T 09636 R9635 I-SENS I-SENS HOT-COM HOT-COM 2 3 5 7 8 4 6


Ε


D


С


В

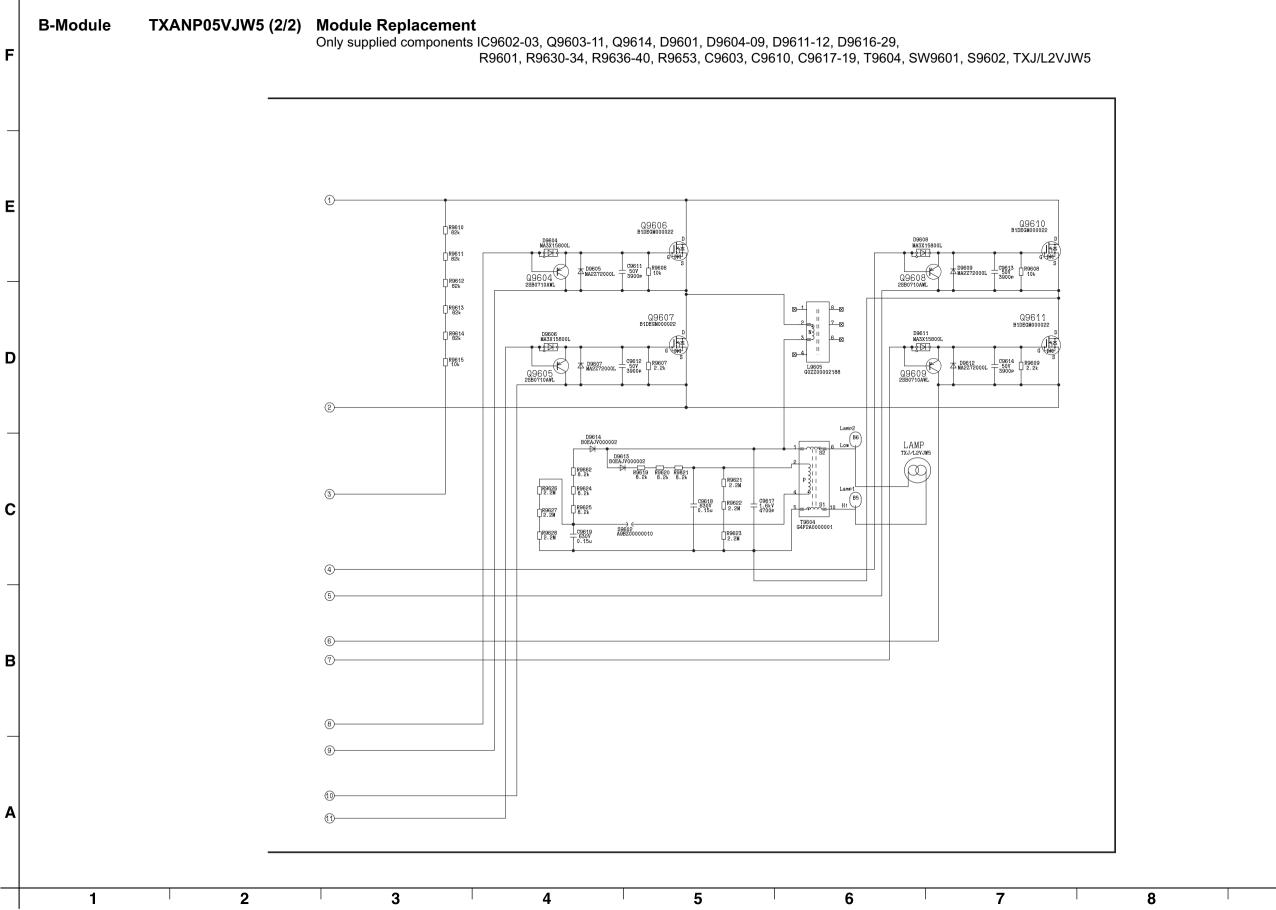


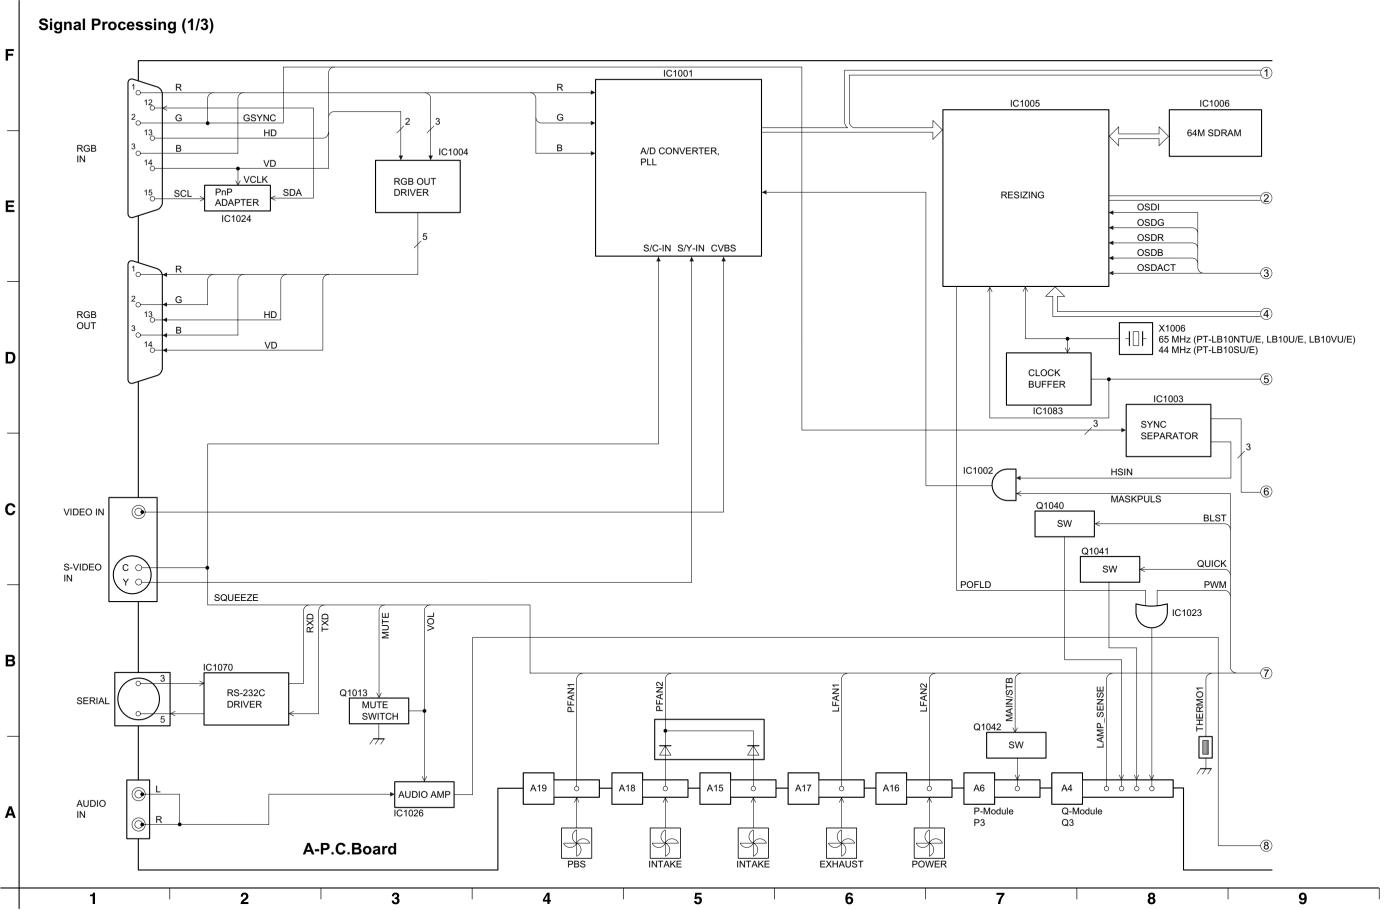


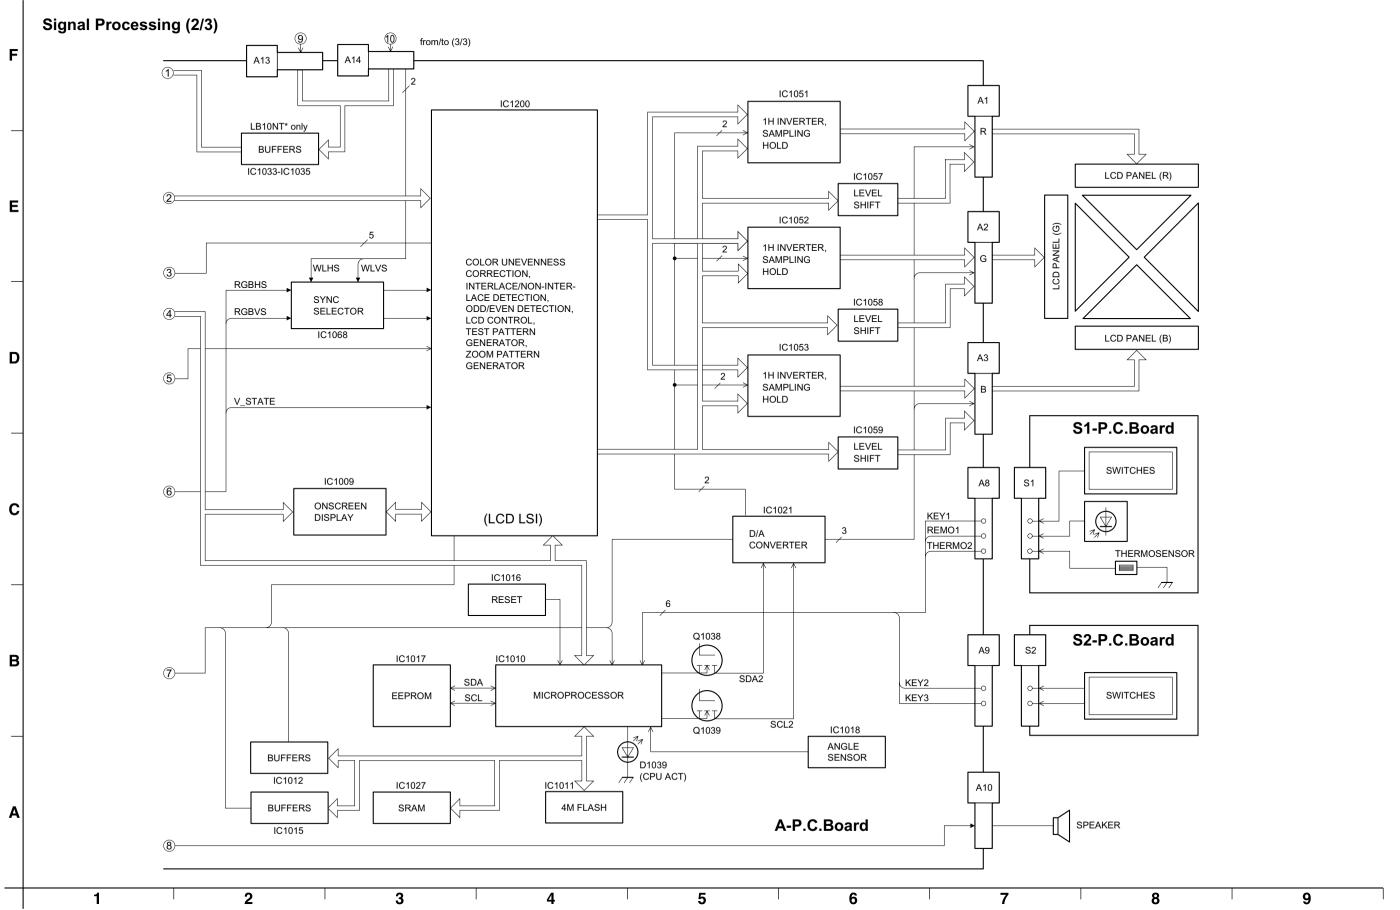

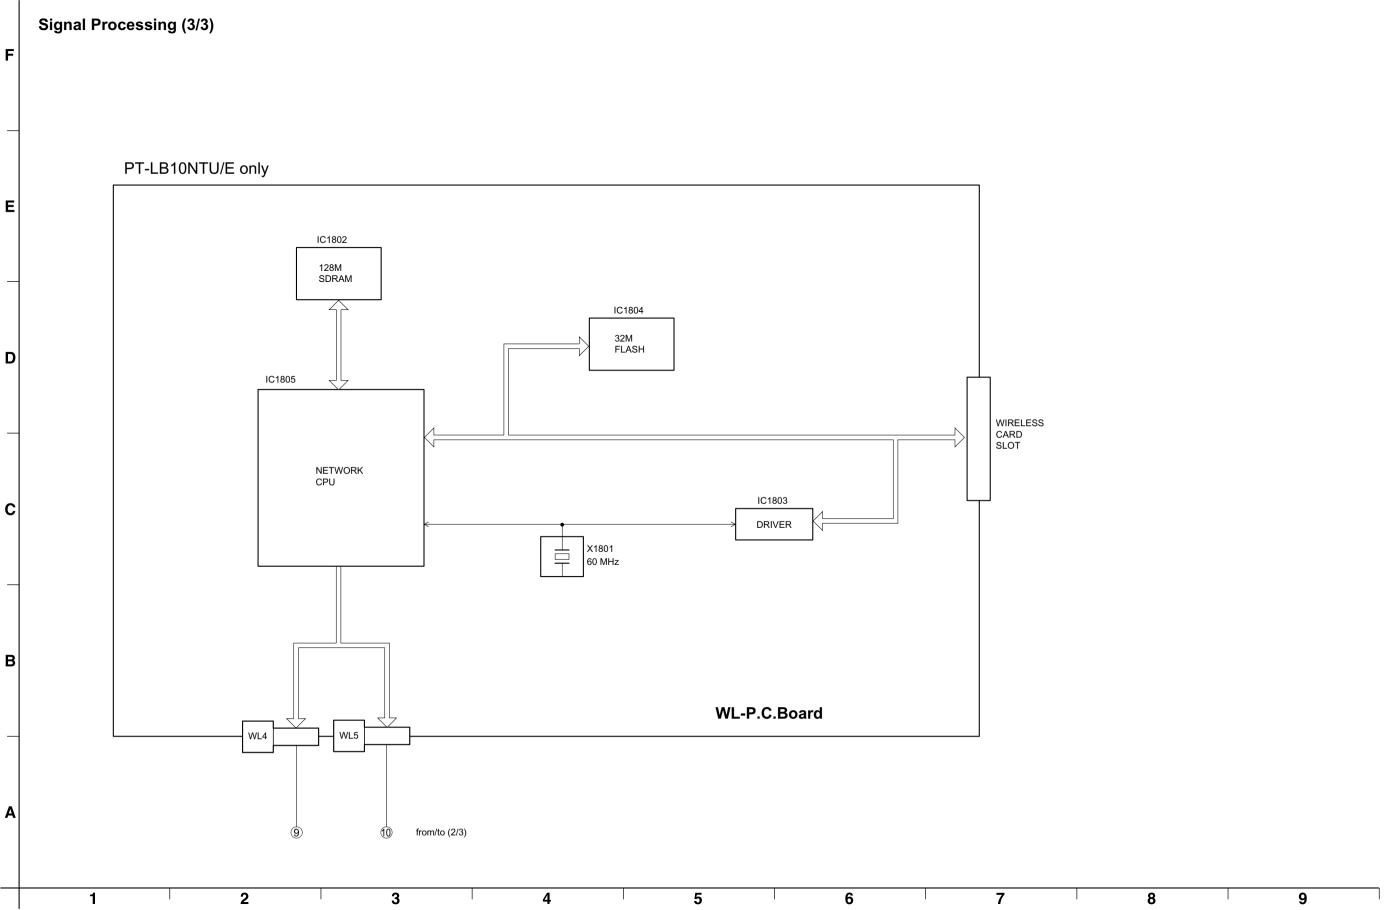

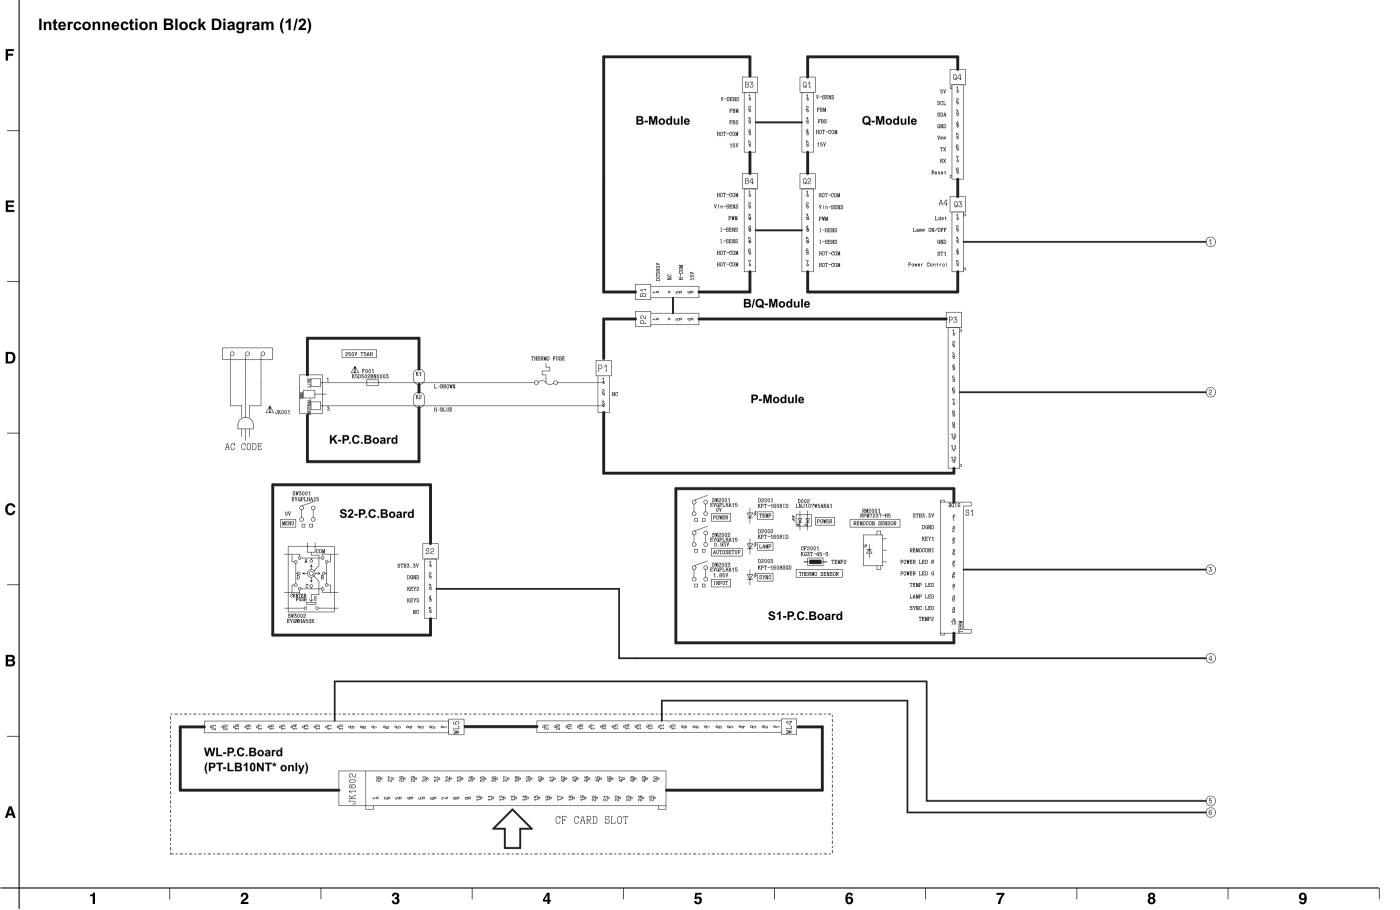

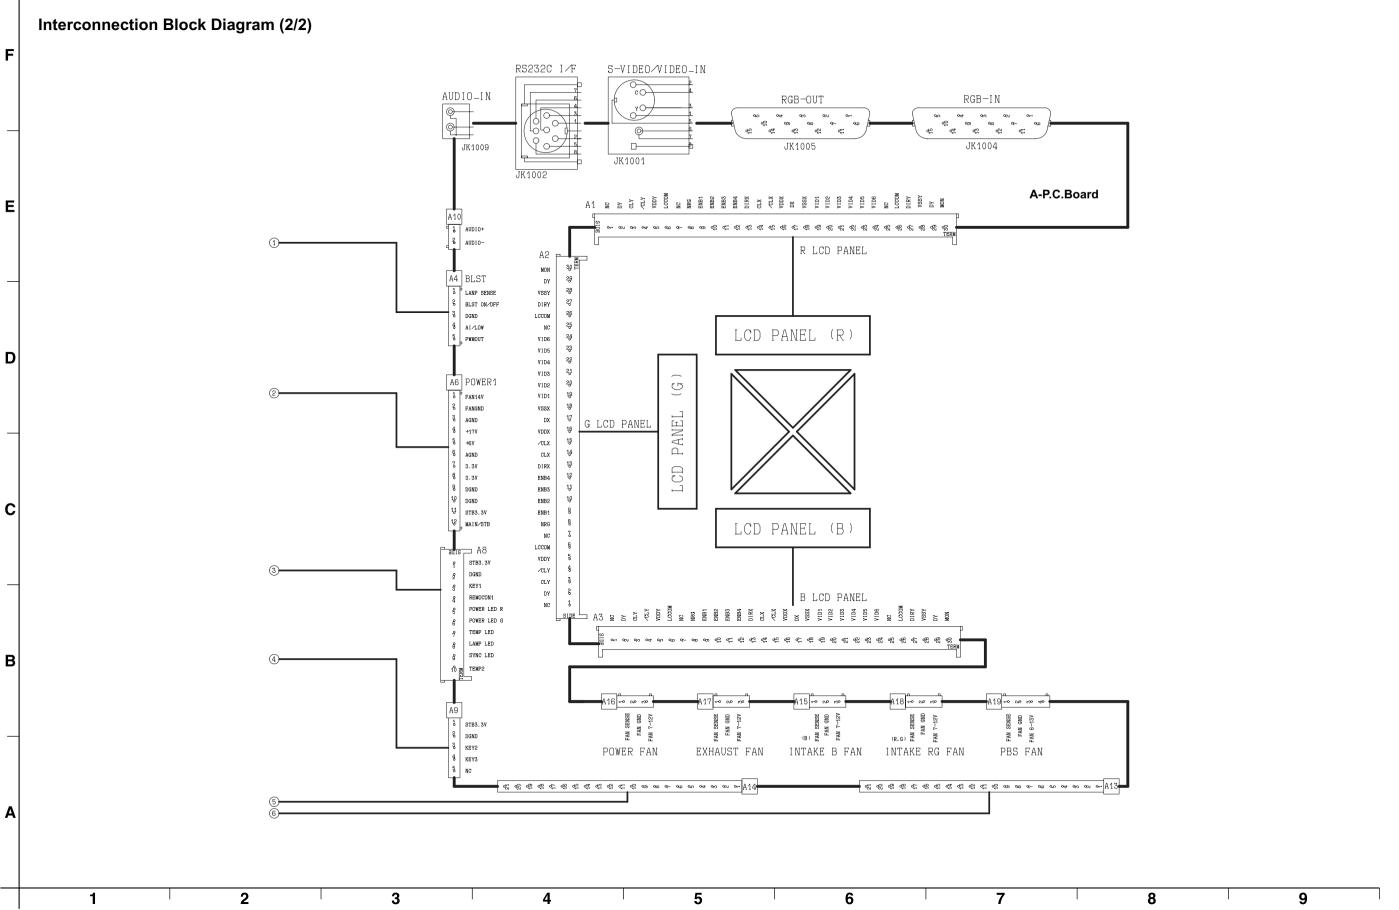

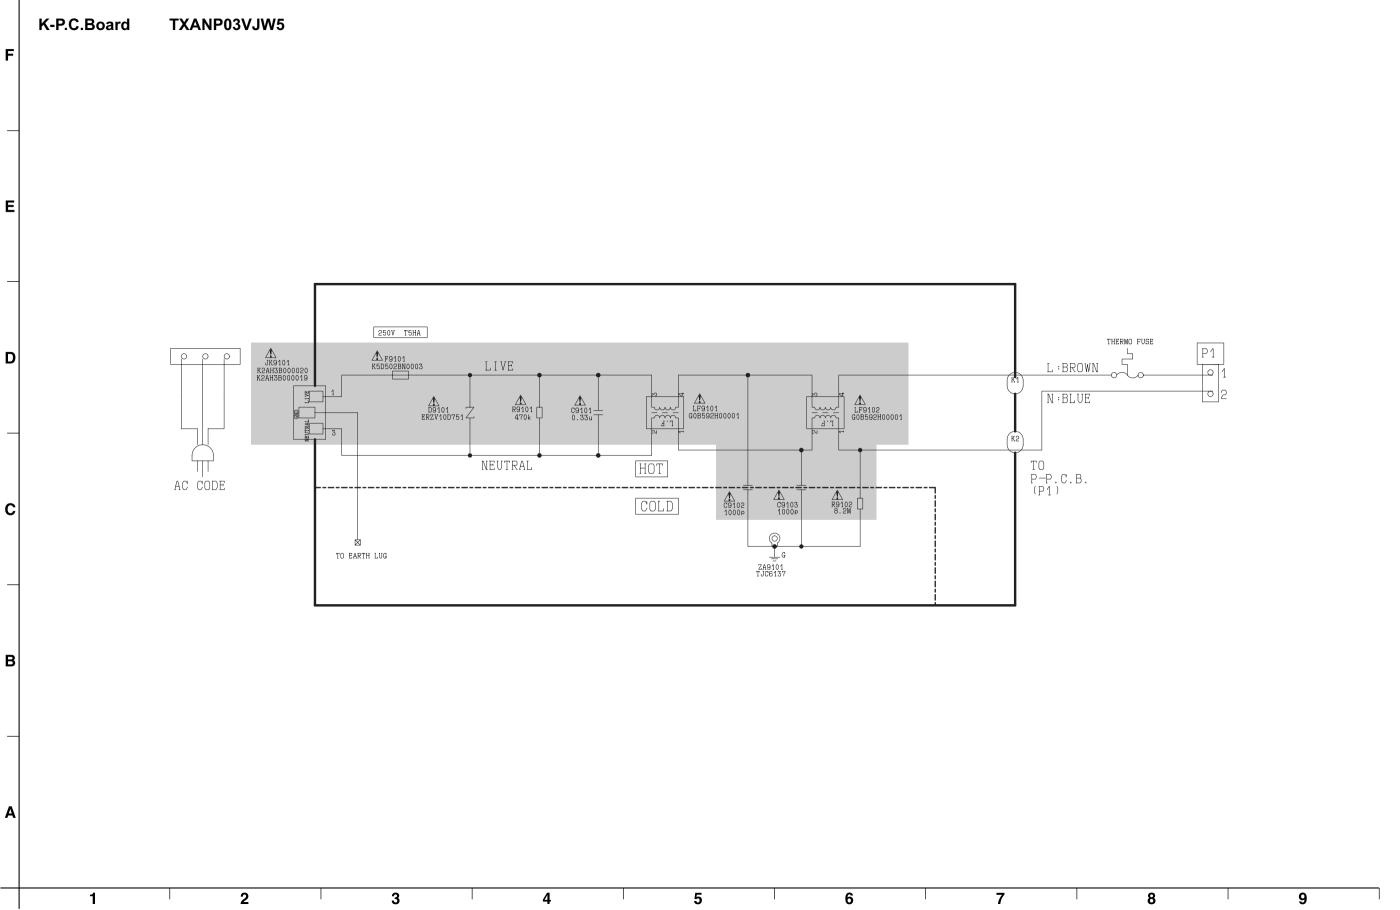

12 Schematic Diagram



Schematic Diagram for Model PT-LB10NTU/LB10U/LB10\

IMPORTANT SAFETY NOTICE

THE SHADED AREA ON THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTE HAZARDS.

WHEN SERVICING, IT IS ESSENTIAL THAT ONLY MANUFACTURER'S SPECIFIED PARTS BE USED FOR THE CRITICATION THE SCHEMATIC.

Schematic Diagram for Model PT-LB10NTE/LB10E/LB10V

Important Safety Notice

Components identified by the international symbol \triangle have special characteristics important for safety. When replacing any of specified ones.

Notes:

1. Resistor

All the resistors are carbon 1/4W resistors, unless marked as follows: The unit of resistance is an OHM $[\Omega]$ (K=1 000 M=1 000

X: Metal Oxide

O : Nonflammable

 Δ : Solid lacktriangle : Metal Film

2. Capacitor

3. Coil

The unit of inductance is a H, unless otherwise noted.

4. Test Point

: Test Point

5. Voltage Measurement

The voltage is measured by an electronic voltmeter receiving the colorbar signal when all the customer's controls are set to the

6. Color code for the links between diagrams and circuit boards

From/To	; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ; ;	To/From	Color code
Block diagram	_	Schematic diagram	Magenta
Schematic diagram	←→	Schematic diagram	Green
Schematic diagram	4	Circuit boards	Yellow
Schematic diagram	\\	Waveforms	Cyan (Light blue)

7. HOT and COLD indications

The power circuit board contains a circuit area using a separate power supply to isolate the ground connection. The circuit is diagram. Take the precautions below:

8. This schematic diagram is the latest at the time of printing and the subject to change without notice.

Precautions:

- 1. NEVER touch the HOT part or the HOT and COLD parts at the same time, or you may get an electric shock.
- 2. NEVER short-circuit the HOT and COLD circuits, or the fuse may blow and the parts may break.
- 3. NEVER connect an instrument such oscilloscope to the HOT and COLD circuit simultaneously, or the fuse may blow. Connect the ground structure of the HOT and COLD circuit simultaneously, or the fuse may blow. Connect the ground structure of the HOT and COLD circuit simultaneously, or the fuse may blow. Connect the ground structure of the HOT and COLD circuit simultaneously, or the fuse may blow. Connect the ground structure of the HOT and COLD circuit simultaneously, or the fuse may blow. Connect the ground structure of the HOT and COLD circuit simultaneously, or the fuse may blow. Connect the ground structure of the HOT and COLD circuit simultaneously, or the fuse may blow. Connect the ground structure of the HOT and COLD circuit simultaneously, or the fuse may blow. Connect the ground structure of the HOT and COLD circuit simultaneously, or the fuse may blow. Connect the ground structure of the HOT and COLD circuit simultaneously.
- 4. MAKE SURE to unplug the power cord from the power outlet before removing the chassis.



310U/LB10VU/LB10SU

MPORTANT FOR PROTECTION FROM FIRE AND ELECTRICAL SHOCK USED FOR THE CRITICAL COMPONENTS IN THE SHADED AREAS OF

310E/LB10VE/LB10SE

ty. When replacing any of these components, use only the manufacturer's

IM [Ω] (K=1 000 M=1 000 000).

er's controls are set to the standard condition.

onnection. The circuit is defined by HOT and COLD indications in the schematic


notice.

ctric shock.


may blow. Connect the ground of instruments to the ground of the circuit being measured.


12.1. A-P.C.Board (1/4)



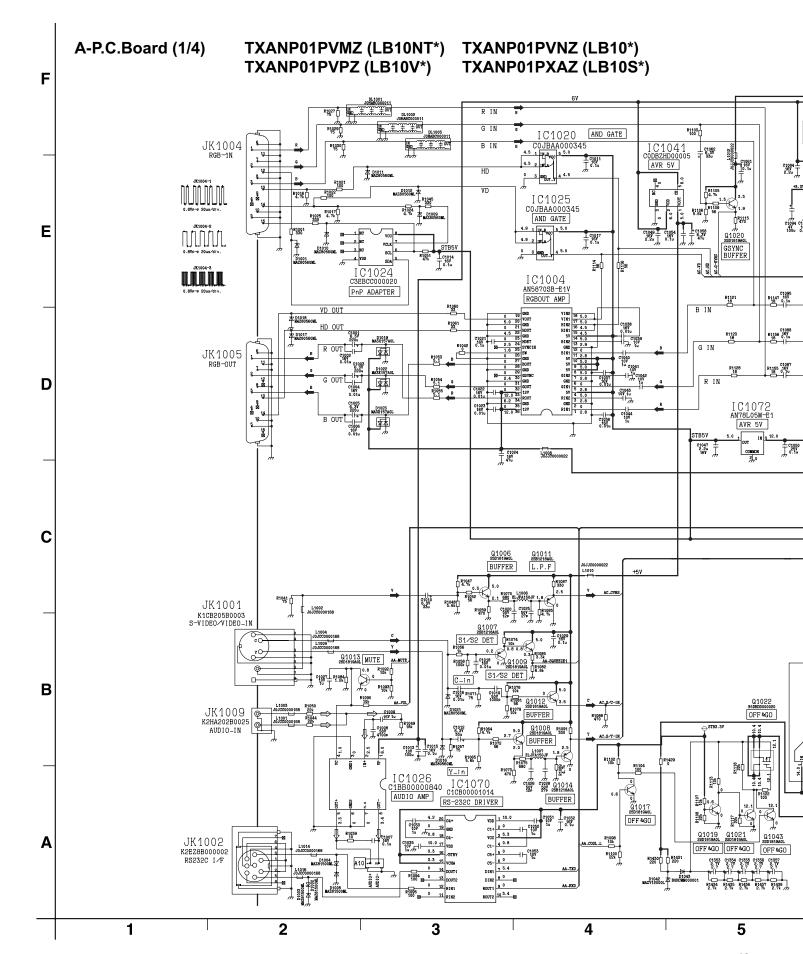




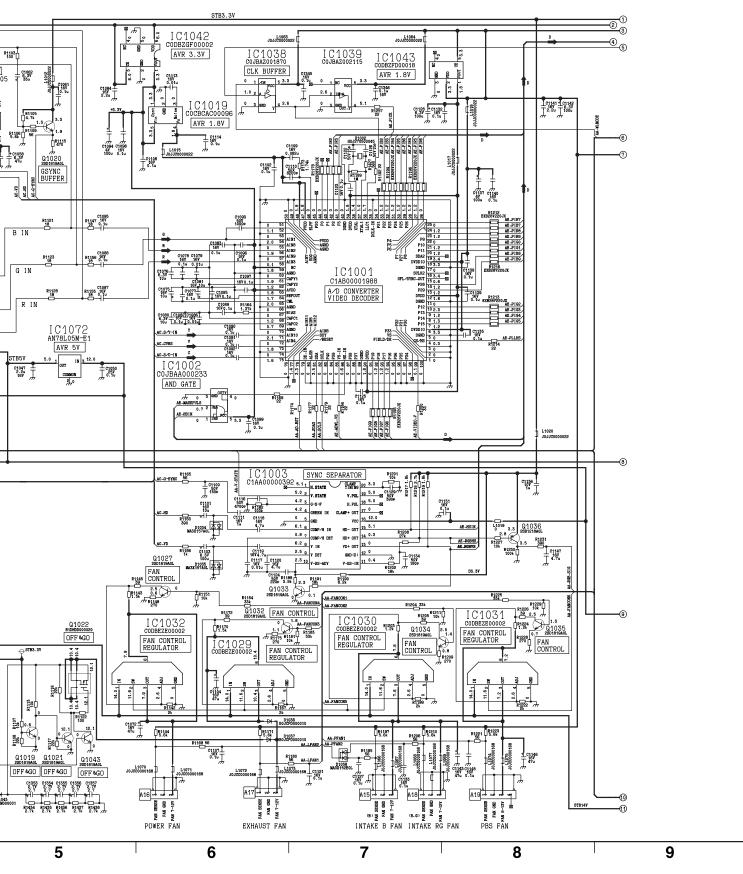

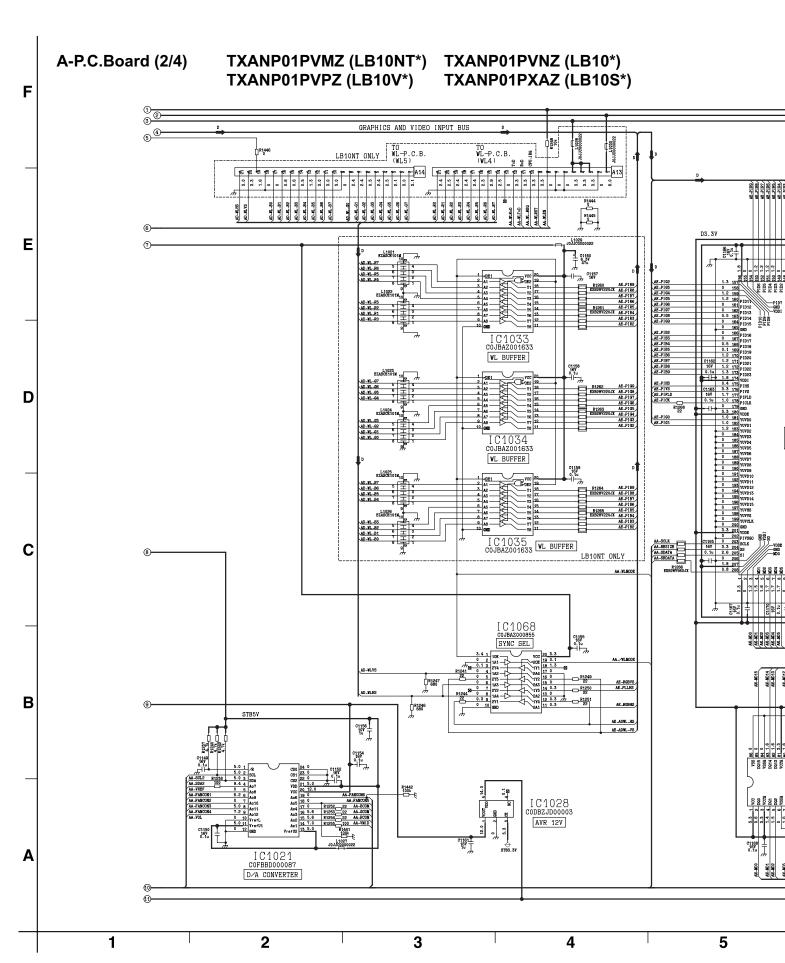




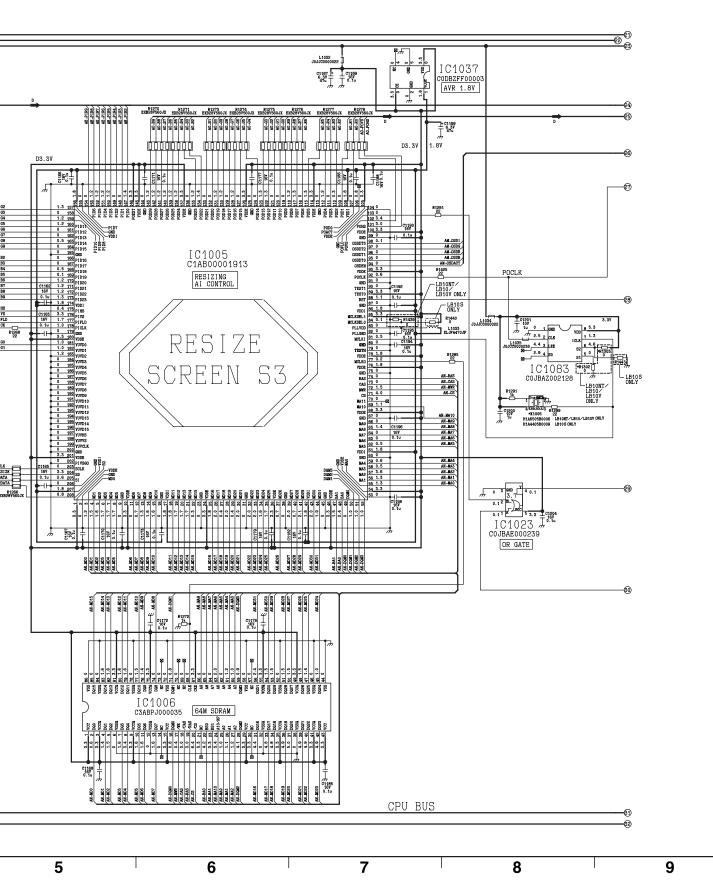


47

12.3. A-P.C.Board (3/4)




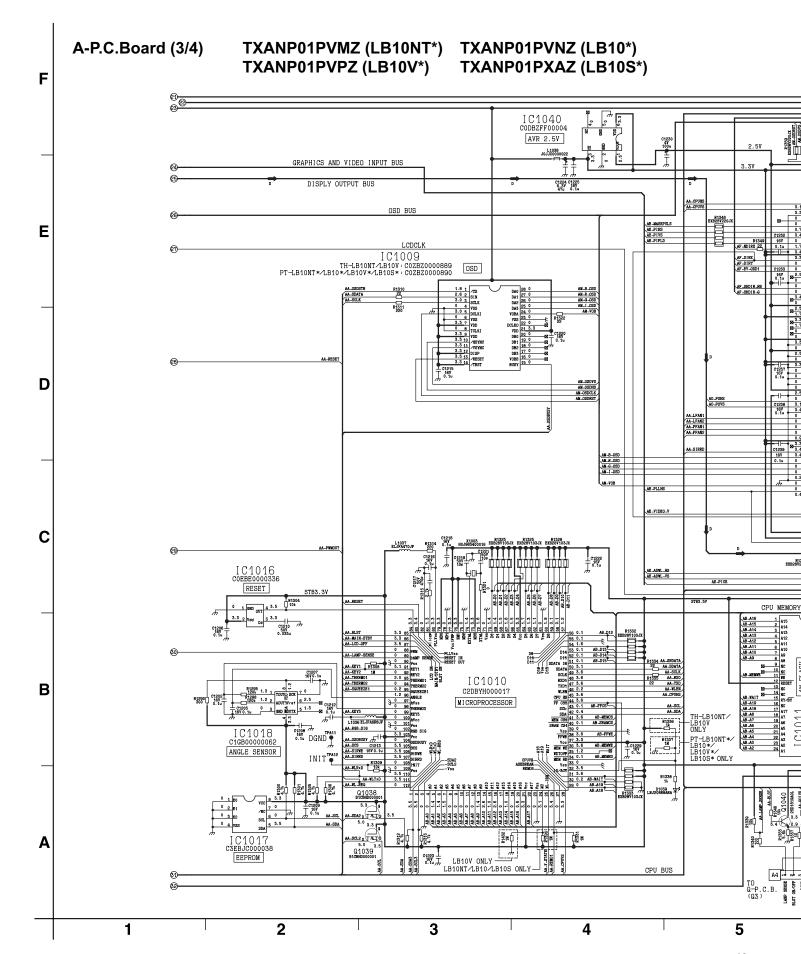




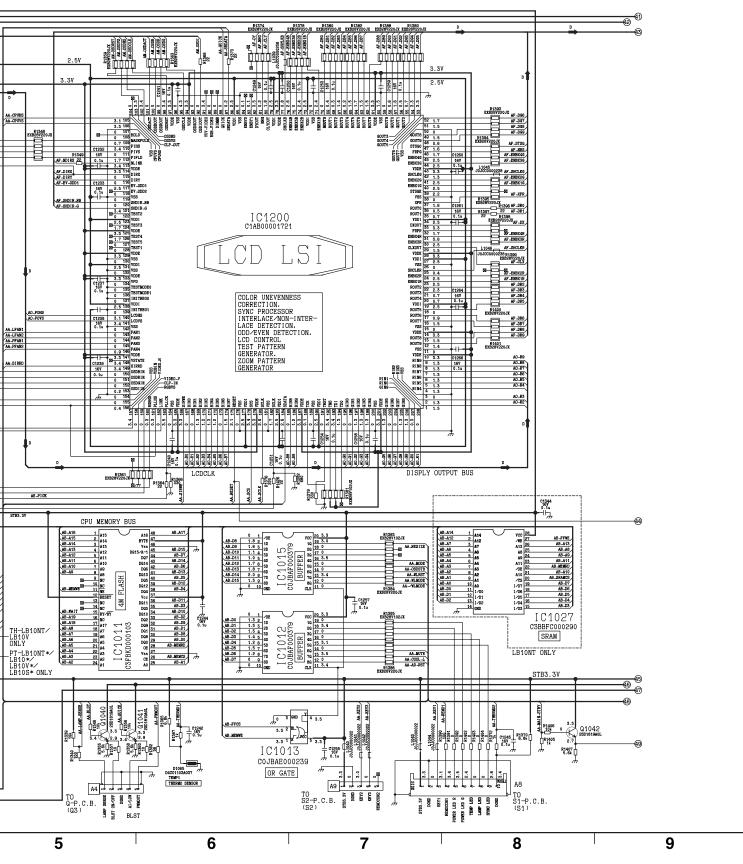




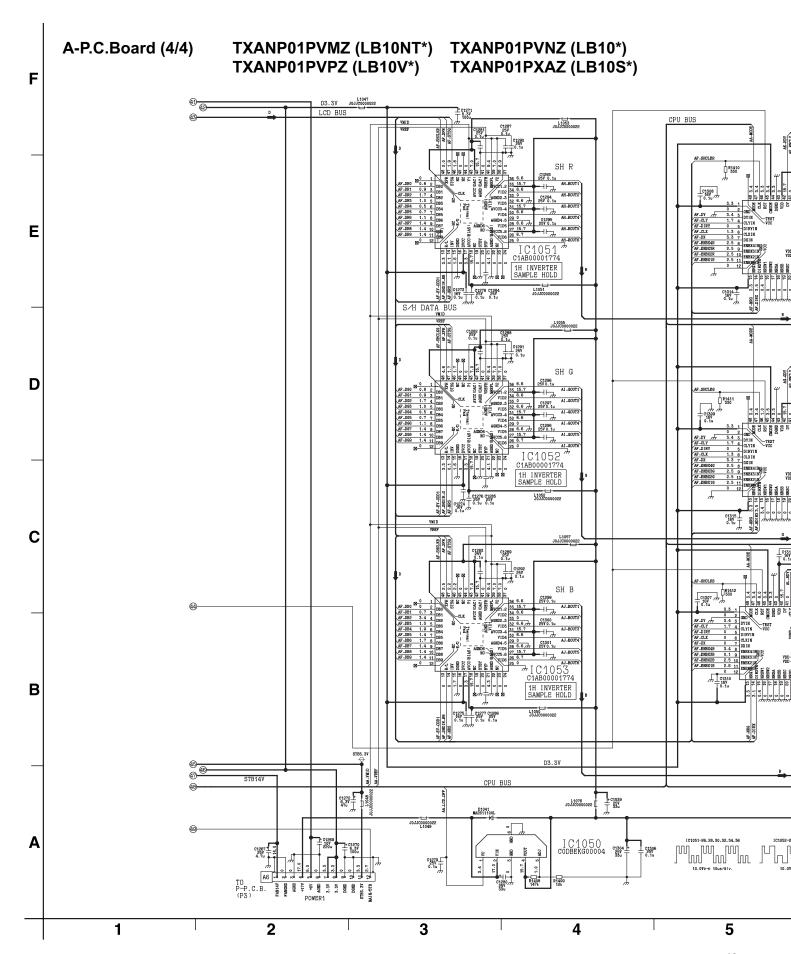




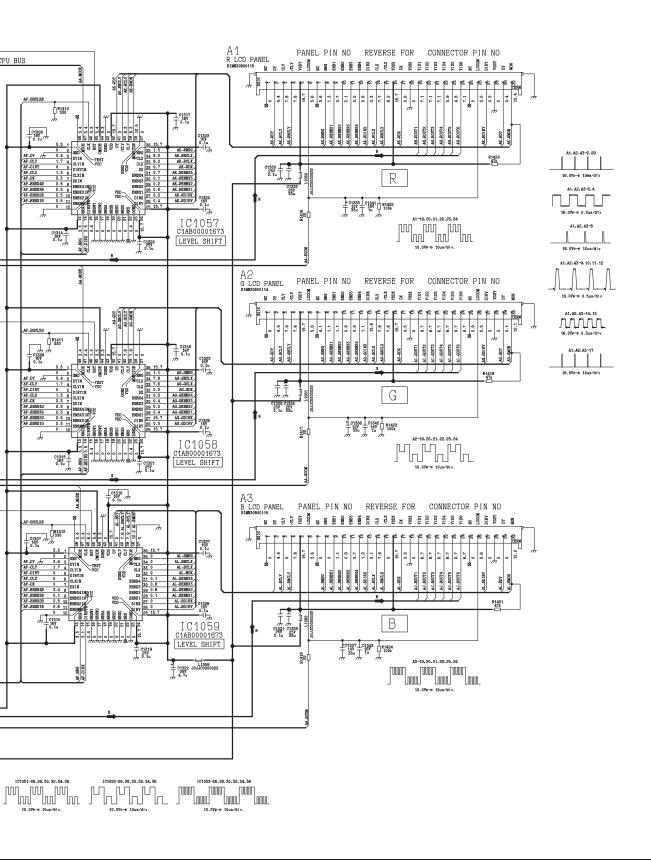

12.5. WL-P.C.Board (1/2)

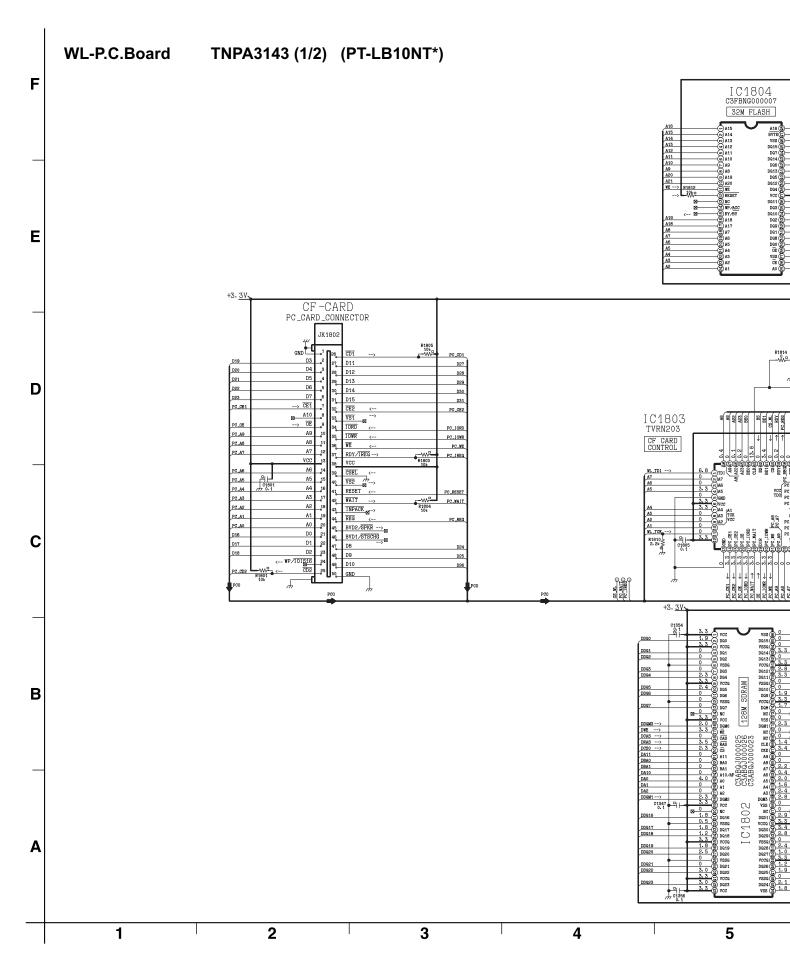




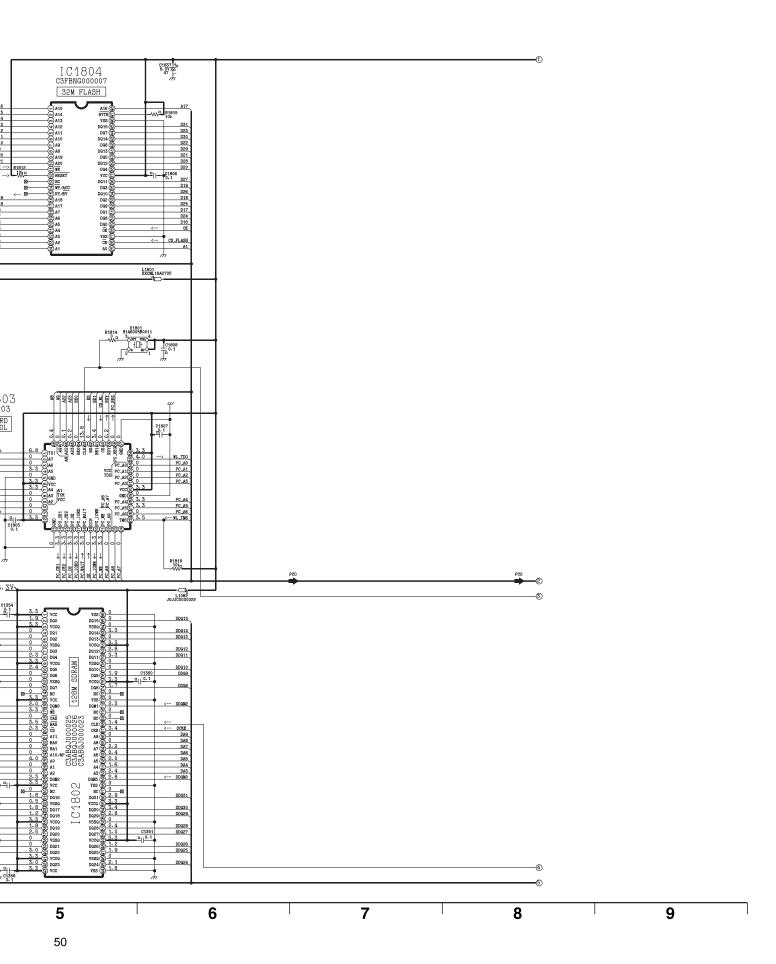


12.6. WL-P.C.Board (2/2)



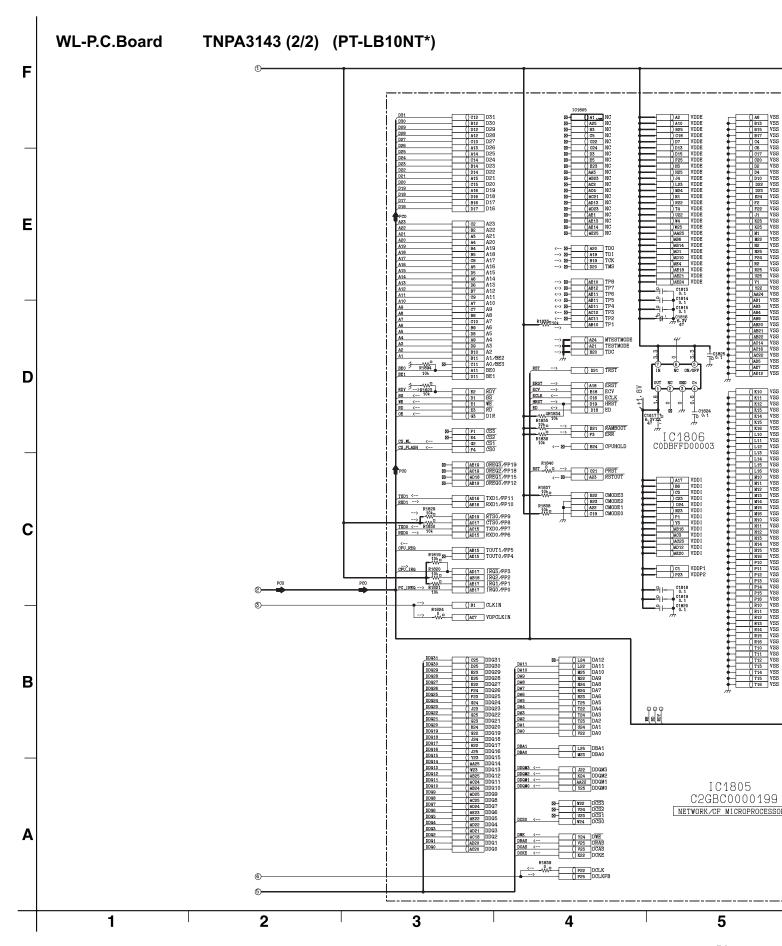




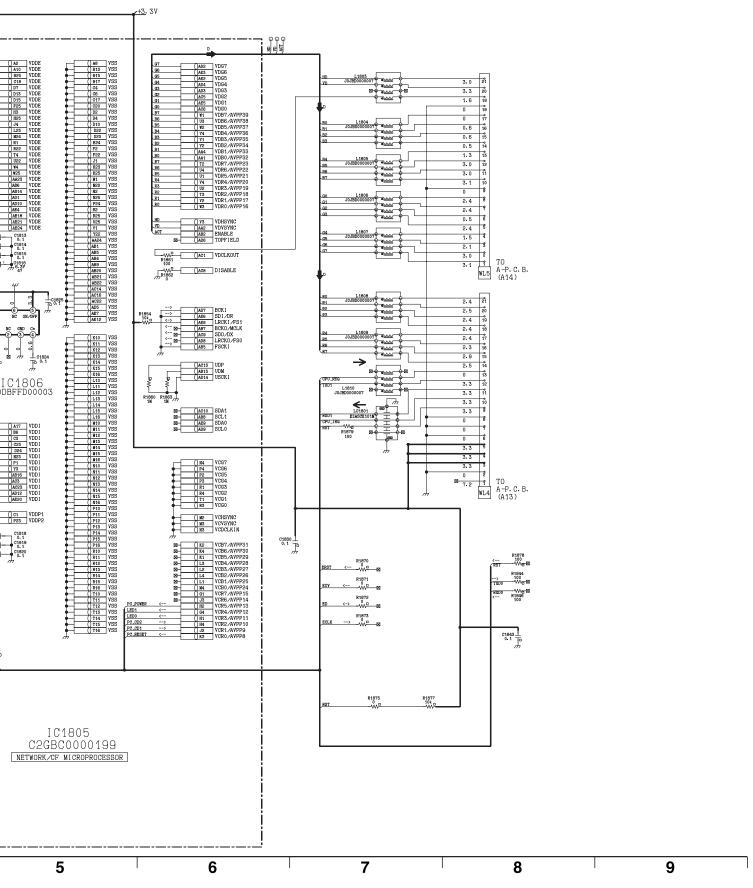


12.7. B-Module (1/2)



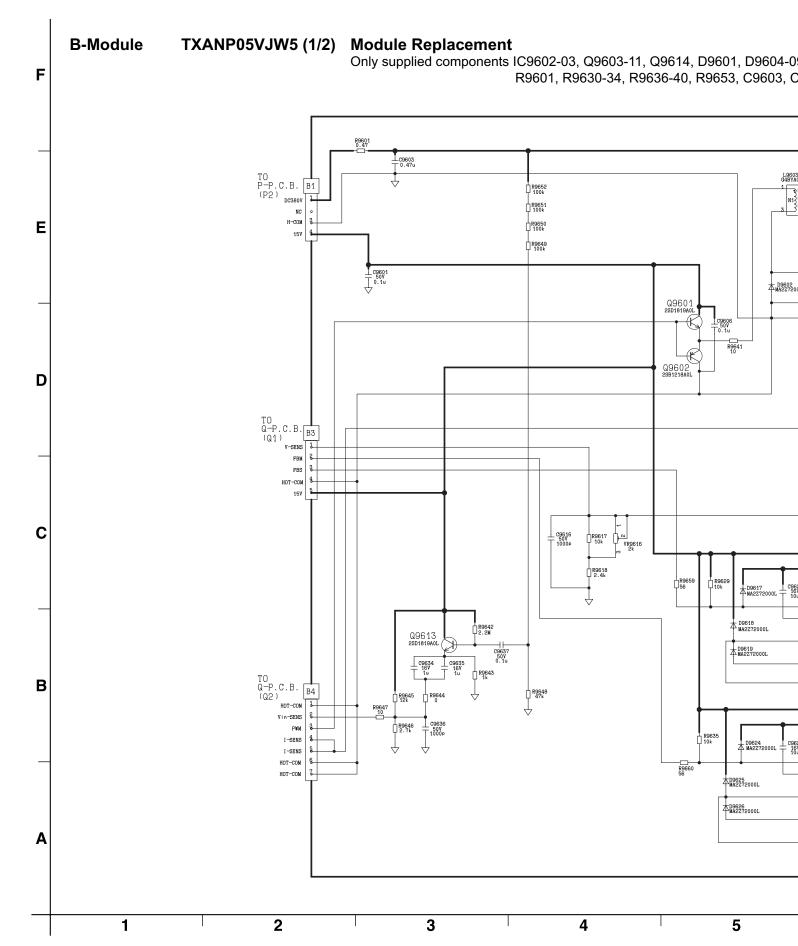




14, D9601, D9604-09, D9611-12, D9616-29, 40, R9653, C9603, C9610, C9617-19, T9604, SW9601, S9602, TXJ/L2VJW5

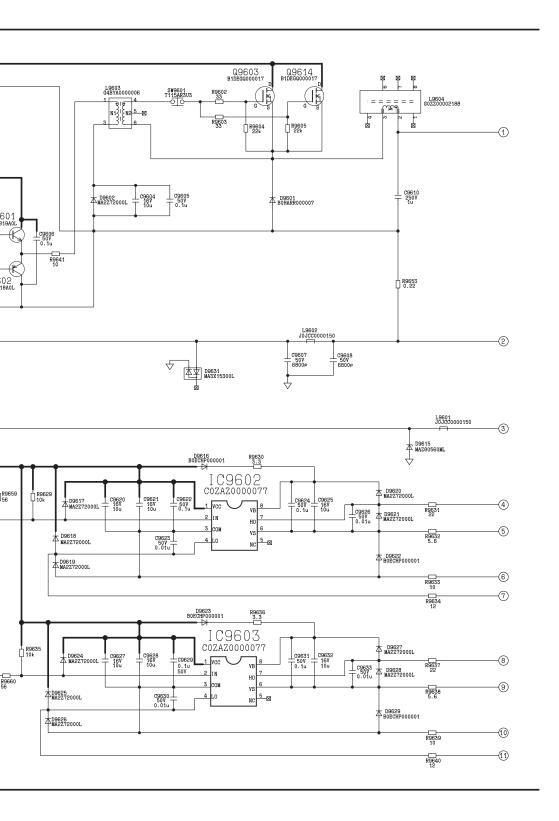


12.8. B-Module (2/2)



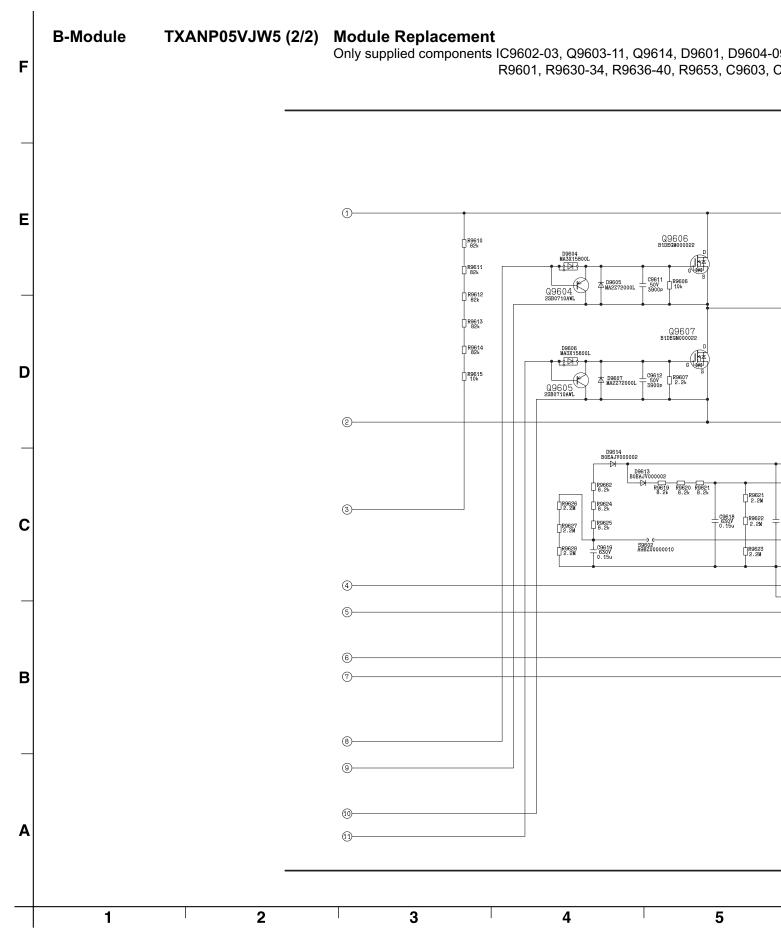


14, D9601, D9604-09, D9611-12, D9616-29, 40, R9653, C9603, C9610, C9617-19, T9604, SW9601, S9602, TXJ/L2VJW5

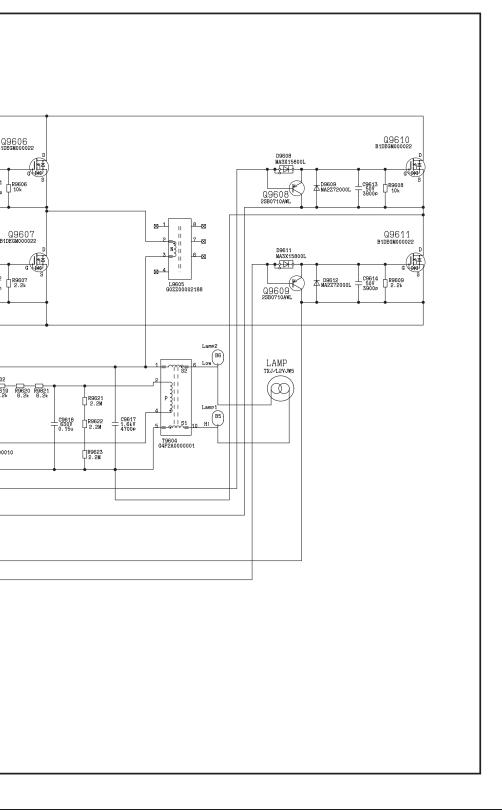


12.9. K-P.C.Board



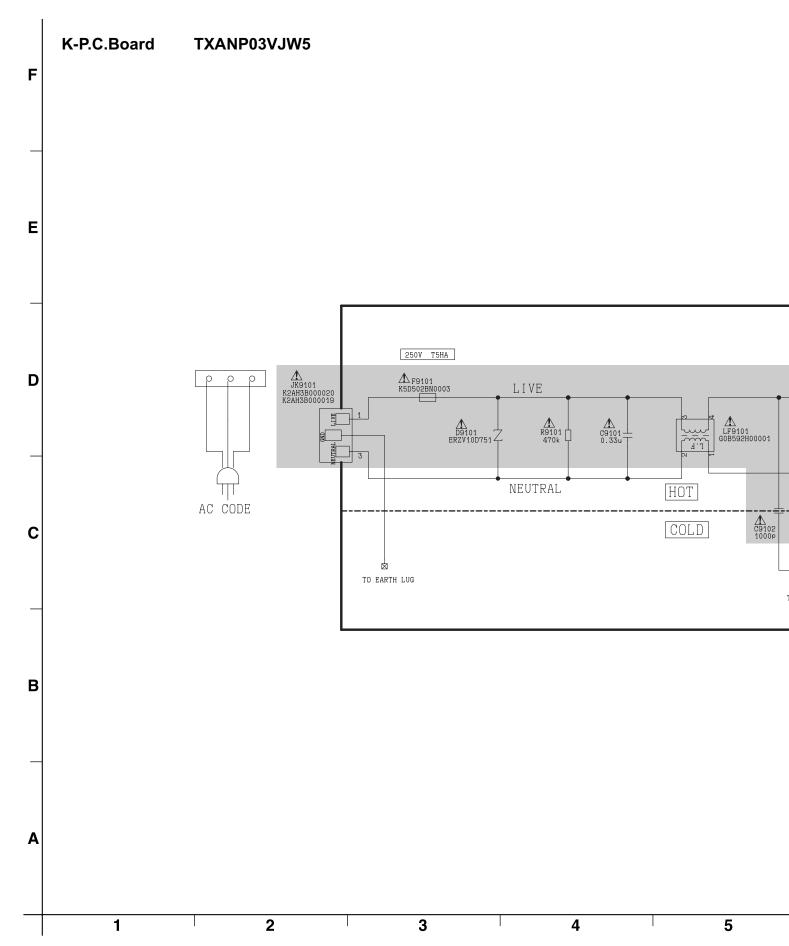



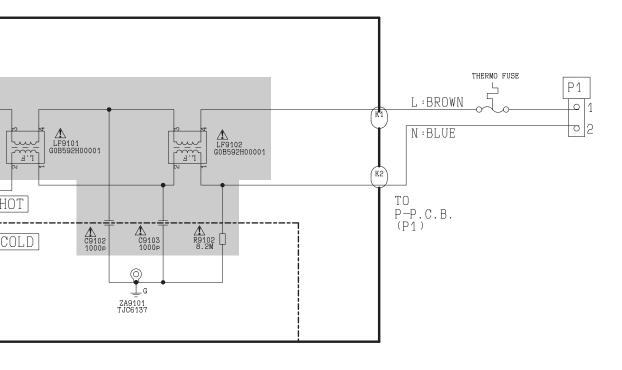



S1-P.C.Board TNPA3144

F


Ε

D

С

В

Α

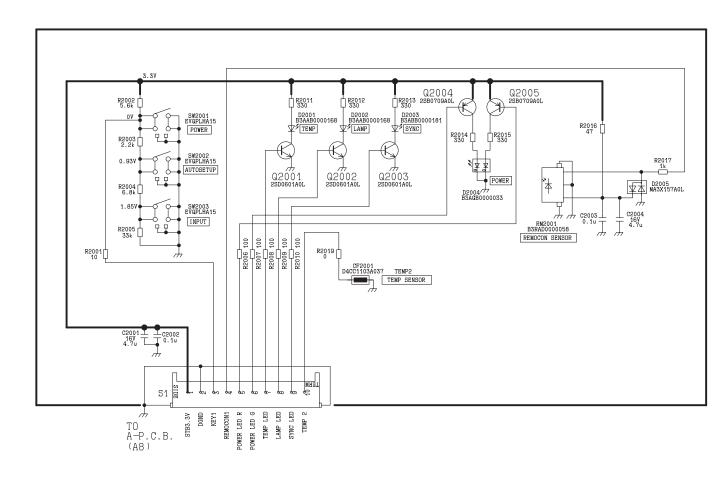

1 2 3 4 5



S2-P.C.Board TNPA3145

